


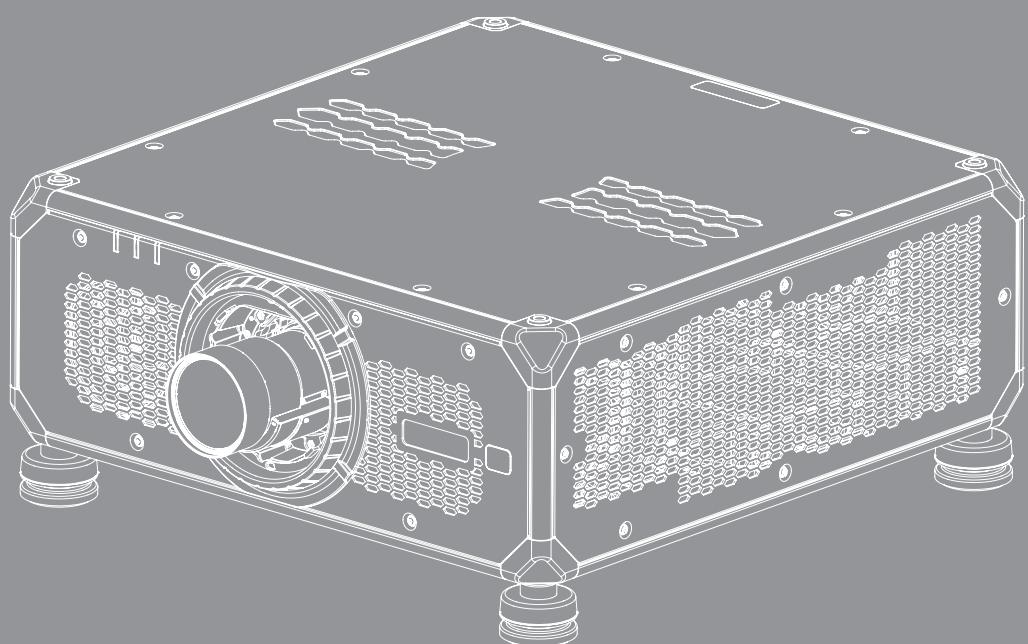

# DLP® Projector



# TABLE OF CONTENTS

<b>SAFETY.....</b>	<b>5</b>
<i>Important safety instructions.....</i>	5
<i>Light Intensity Hazard Distance.....</i>	6
<i>Laser radiation safety information .....</i>	6
<i>Product safety labels .....</i>	7
<i>    Light beam related safety labels.....</i>	7
<i>Copyright .....</i>	8
<i>Disclaimer.....</i>	8
<i>Trademark recognition.....</i>	8
<i>FCC .....</i>	8
<i>Declaration of conformity for EU countries .....</i>	9
<i>WEEE .....</i>	9
<b>INTRODUCTION .....</b>	<b>10</b>
<i>Package overview .....</i>	10
<i>Standard accessories.....</i>	10
<i>Optional accessories .....</i>	10
<i>Product overview.....</i>	11
<i>Connections.....</i>	14
<i>Keypad .....</i>	15
<i>Remote control .....</i>	16
<b>SETUP AND INSTALLATION.....</b>	<b>17</b>
<i>Installing the projection lens .....</i>	17
<i>Adjusting the projector position .....</i>	18
<i>Hanging application .....</i>	19
<i>Boresight adjustment.....</i>	20
<i>    Required tool .....</i>	20
<i>    Setting the projector start mode .....</i>	20
<i>    Performing the boresight adjustment .....</i>	20
<i>Connecting sources to the projector.....</i>	24
<i>Adjusting the projector image .....</i>	25
<i>Remote setup .....</i>	26
<b>USING THE PROJECTOR .....</b>	<b>29</b>
<i>Powering on / off the projector.....</i>	29
<i>Selecting an input source .....</i>	30
<i>Menu navigation and features .....</i>	31
<i>OSD menu tree.....</i>	32
<i>Image menu.....</i>	47
<i>    Picture Mode .....</i>	47
<i>    Dynamic Range .....</i>	48
<i>    Brightness .....</i>	48

<i>Contrast</i>	48
<i>Sharpness</i>	48
<i>Gamma</i>	48
<i>Dynamic Contrast</i>	49
<i>Color Settings</i>	49
<i>Wall Color</i>	50
<i>3D Setup</i>	50
<i>Save to User</i>	52
<i>Apply to User</i>	52
<i>Reset</i>	52
<i>Display menu</i>	53
<i>Aspect Ratio</i>	53
<i>Digital Zoom</i>	53
<i>Image Shift</i>	53
<i>Geometric Correction</i>	54
<i>Edge Mask</i>	56
<i>Freeze Screen</i>	56
<i>Test Pattern</i>	56
<i>PIP/PBP</i>	56
<i>Reset</i>	58
<i>Input Settings menu</i>	59
<i>Auto Source</i>	59
<i>Active Inputs</i>	59
<i>Latency Adjustment</i>	59
<i>Backup Input</i>	59
<i>VGA</i>	60
<i>HDMI</i>	60
<i>HDBaseT</i>	60
<i>Reset</i>	60
<i>Device Setup menu</i>	61
<i>Language</i>	61
<i>Projection</i>	61
<i>Lens Settings</i>	61
<i>Active Image Setup</i>	62
<i>Schedule</i>	63
<i>Date and Time</i>	65
<i>Power Settings</i>	66
<i>Light Source Settings</i>	66
<i>Shutter</i>	67
<i>Security</i>	67
<i>On Screen Display</i>	67
<i>Logo Setup</i>	68
<i>Backlight</i>	68
<i>High Altitude</i>	68
<i>User Data</i>	68
<i>System Update (FOTA)</i>	68
<i>Reset</i>	68
<i>Communication menu</i>	69
<i>Projector ID</i>	69
<i>Remote Setup</i>	69
<i>Network Setup</i>	70

<i>Email Notification</i> .....	70
<i>Control</i> .....	70
<i>Baud Rate</i> .....	71
<i>Reset</i> .....	71
<i>Using the web control panel</i> .....	72
<i>Using RS232 command by Telnet</i> .....	74
<i>Info menu</i> .....	74

## **ADDITIONAL INFORMATION..... 75**

<i>Compatible resolutions</i> .....	75
<i>Image size and projection distance</i> .....	96
<i>Projector dimensions and ceiling mount installation</i> .....	99
<i>IR remote codes</i> .....	100
<i>Troubleshooting</i> .....	102
<i>LED status indicators</i> .....	104
<i>Specifications</i> .....	105
<i>Manual Warp Control Instruction</i> .....	106
<i>Optoma global offices</i> .....	124
<i>RS232 protocol function list</i>	

# SAFETY

	The lightning flash with arrow head within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Please follow all warnings, precautions and maintenance as recommended in this user manual.

## Important safety instructions

- Do not block any ventilation openings. To ensure reliable operation of the projector and to protect from overheating, it is recommended to install the projector in a location that does not block ventilation. As an example, do not place the projector on a crowded surface. Do not put the projector in an enclosure such as a book case or a cabinet that restricts air flow.
- To reduce the risk of fire and/or electric shock, do not expose the projector to rain or moisture. Do not install near heat sources such as radiators, heaters, stoves or any other apparatus such as amplifiers that emits heat.
- Do not let objects or liquids enter the projector. They may touch dangerous voltage points and short out parts that could result in fire or electric shock.
- Do not use under the following conditions:
  - In extremely hot, cold or humid environments.
    - (i) Ensure that the ambient room temperature is within 0°C~50°C (32°F~122°F)
    - (ii) Relative humidity is 10% ~ 85%
  - In areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.
- Do not use the unit if it has been physically damaged or abused. Physical damage/abuse would be (but not limited to):
  - Unit has been dropped.
  - Power supply cord or plug has been damaged.
  - Liquid has been spilled on to the projector.
  - Projector has been exposed to rain or moisture.
  - Something has fallen in the projector or something is loose inside.
- Do not place the projector on an unstable surface. The projector may fall over resulting in injury or the projector may become damaged.
- Do not block the light coming out of the projector lens when in operation. The light will heat the object and cause it to melt, burn or start a fire.
- Please do not open or disassemble the projector as this may cause electric shock.
- Do not attempt to service the unit yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Optoma before you send the unit for repair.
- See projector enclosure for safety related markings.
- The unit should only be repaired by authorized service personnel.
- Only use attachments/accessories specified by the manufacturer.
- Do not look straight into the projector lens during operation. The bright light may harm your eyes.
- Turn off and unplug the power plug from the AC outlet before cleaning the product.
- Use a soft dry cloth with mild detergent to clean the projector housing. Do not use abrasive cleaners, waxes or solvents to clean the unit.

- Disconnect the power plug from the AC outlet if the product will not be used for a long period of time.
- Do not setup the projector in places where it might be subjected to vibration or shock.
- Do not touch the lens with bare hands.
- Do not clean the lens when the projector is turned on. Any damage resulting from doing so will void the warranty.
- Remove battery/batteries from remote control before storage. If the battery/batteries are left in the remote for long periods, they may leak.
- Do not use or store the projector in places where smoke from oil or cigarettes may be present, as it can adversely affect the quality of the projector performance.
- Please follow the correct projector orientation installation as non standard installation may affect the projector performance.
- Use a power strip and/or surge protector. As power outages and brown-outs can KILL devices.
- Warning: Do not remove the earthing pin on the mains plugs. This apparatus is equipped with a three prong earthing type mains plug. This plug will only fit an earthing-type mains socket. This is a safety feature. If you are unable to insert the plug into the mains socket, contact an electrician.
- Caution: This equipment is equipped with a three-pin grounding-type power plug. Do not remove the grounding pin on the power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician.
- These requirements apply to consumer products containing button batteries or coin cells batteries. They do not apply to products that by virtue of their dedicated purpose and instructions are not intended to be used in locations where they may be accessed by children, such as products for dedicated professional use or commercial use in locations where children are not normally or typically present.

## Light Intensity Hazard Distance

This product is classified as CLASS 1 LASER PRODUCT - RISK GROUP 2 of IEC 60825-1 : 2014 and also complies with 21 CFR 1040.10 and 1040.11 except for conformance as a Risk Group 2 LIP as defined in IEC 62471-5:Ed. 1.0. For more information, see Laser Notice No. 57, dated May 8, 2019.

When set up with BX-CTA22, BX-CTA23 and BX-CTA27 lens (throw ratio greater than 2.0), this projector may become Class 1 Laser Product-Risk Group 3 (RG3); with other lens (throw ratio less than 2.0), this projector may become Class 1 Laser Product-Risk Group 2 (RG2) according to IEC 60825-1:2014 and IEC 62471-5: 2015, and also make a variance approvals under 21 CFR 1010.4 for RG3 LIP according to Classification and Requirements for Laser Illuminated Projectors (LIPs) (Laser Notice No. 57).

Projection Lens	Throw Ratio	Classification and Requirements for Laser Illuminated Projectors (LIPs)	
• BX-CTA11	• 0.65-0.75	• HD: N/A	<ul style="list-style-type: none"> <li>• IEC 62471-5: 2015</li> <li>• IEC 60825-1: 2014</li> <li>• CLASS 1 LASER PRODUCT RISK GROUP 2</li> </ul>
• BX-CTA18	• 0.84-1.02		
• BX-CTA19	• 1.02-1.36		
• BX-CTA20	• 1.2-1.5		
• BX-CTA21	• 1.5-2.0		

Projection Lens	Throw Ratio	Classification and Requirements for Laser Illuminated Projectors (LIPs)	
• BX-CTA22	• 2.0-4.0	• HD:1.94 meters	<ul style="list-style-type: none"> <li>• IEC 62471-5: 2015</li> <li>• IEC 60825-1: 2014</li> <li>• CLASS 1 LASER PRODUCT RISK GROUP 3</li> </ul>
• BX-CTA23	• 4.0-7.2		
• BX-CTA27	• 7.2-10.8		

## Laser radiation safety information

To ensure safe operation, read all laser safety precautions before installing and operating the projector.

- This projector is class 1 laser product of IEC/EN 60825-1:2014 and risk group 2 with the requirements of IEC 62471-5:2015.
- This projector uses extremely high brightness laser. Do not stare directly into the light beam, as the extremely high brightness may cause permanent eye damage. (Risk Group 2 of IEC 62471-5:2015).
- No direct exposure to the beam shall be permitted. (Risk Group 3 of IEC 62471-5:2015).

- This product is not for household use.
- Possibly hazardous optical radiation emitted from this product.
- This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the laser module.
- Any operation or adjustment not specifically instructed in the User manual creates the risk of hazardous laser radiation exposure.
- Do not stare into beam when the projector is on. When turning on the projector, make sure no one within projection range is looking into the lens.
- Follow the control, adjustment, or operation procedures to avoid damage or injury from exposure to laser radiation.
- The instructions for the assembly, operation, and maintenance include clear warnings to avoid possible exposure to hazardous laser radiation.
- We recommend you install this projector above the reach of children.
- Notice is given to supervise children and to never allow them to stare into the projector beam at any distance from the projector.
- Notice is given to use caution when using the remote control for starting the projector while in front of the projection lens.
- Notice is given to the user to avoid the use of optical aids such as binoculars or telescopes inside the beam.

## Product safety labels

### Light beam related safety labels

Label image	Label description
	<p><b>"WARNING: MOUNT ABOVE THE HEADS OF CHILDREN."</b>  Additional warning against eye exposure for close exposures less than 1 m..</p> <p><b>"AVERTISSEMENT : INSTALLER AU-DESSUS DE LA TÊTE DES ENFANTS."</b>  Avertissement supplémentaire contre l'exposition oculaire pour des expositions à une distance de moins de 1 m.</p> <p>警告：安装在高于孩童头顶处  关于小于1 m近距离眼睛暴露的附加警告</p> <p>「警告： 安裝在高於兒童頭部處」  針對 1 m 以下近距離眼睛接觸的額外警告</p>
	<p><b>FDA laser variance (US projectors only)</b></p> <p>Optoma Technology Inc.  47697 Westinghouse Drive, Fremont, CA 94539, USA</p> <p>This product complies with performance standards for laser products under 21 CFR Part 1040 except with respect to those characteristics authorized by Variance Number FDA-2021-V-1350 [effective from 2022/10/02]</p> <p>U.S.A. Only</p>
	<p>This product is classified as Class 1 Laser Product-Risk Group 2 of IEC 60825-1:2014 and also complies with 21 CFR 1040.10 and 1040.11 as a Risk Group 2, LIP (Laser Illuminated Projector) as defined in IEC 62471-5:Ed.1.0. For more information, see Laser Notice No. 57, dated May 8, 2019.</p>
	<p>This projector may become RG3 when an interchangeable lens with throw ratio greater than 2.0 is installed. Refer to the manual for the lens list and hazard distance before operation. Such combinations of projector and lens are intended for professional use only, and are not intended for consumer use.</p> <p>Not for household use.</p> <p>No direct exposure to beam shall be permitted, which can cause injury to the retina in the back of the eye.</p> <p>As with any bright light source, do not stare into the beam, RG2 IEC 62471-5:2015</p>

## **Copyright**

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

© Copyright 2021

## **Disclaimer**

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

## **Trademark recognition**

Kensington is a U.S. registered trademark of ACCO Brand Corporation with issued registrations and pending applications in other countries throughout the world.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

DLP®, DLP Link and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments.

HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance.

All other product names used in this manual are the properties of their respective owners and are Acknowledged.

## **FCC**

This device has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

### **Notice: Shielded cables**

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

### **Caution**

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

### **Operation conditions**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

### **Notice: Canadian users**

This Class A digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numerique de la classe A est conforme a la norme NMB-003 du Canada.

## **Declaration of conformity for EU countries**

- EMC Directive 2014/30/EU (including amendments)
- Low Voltage Directive 2014/35/EU
- Radio Equipment Directive 2014/53/EU (if product has RF function)
- RoHS Directive 2011/65/EU

## **WEEE**



### **Disposal instructions**


Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.

# INTRODUCTION

## Package overview

Carefully unpack and verify that the projector comes with all the standard accessories shown below. Some accessories may not be available depending on the projector model, specification and your region of purchase. The warranty card is only supplied in specific regions. Please check with your place of purchase or consult your dealer for more information.

## Standard accessories

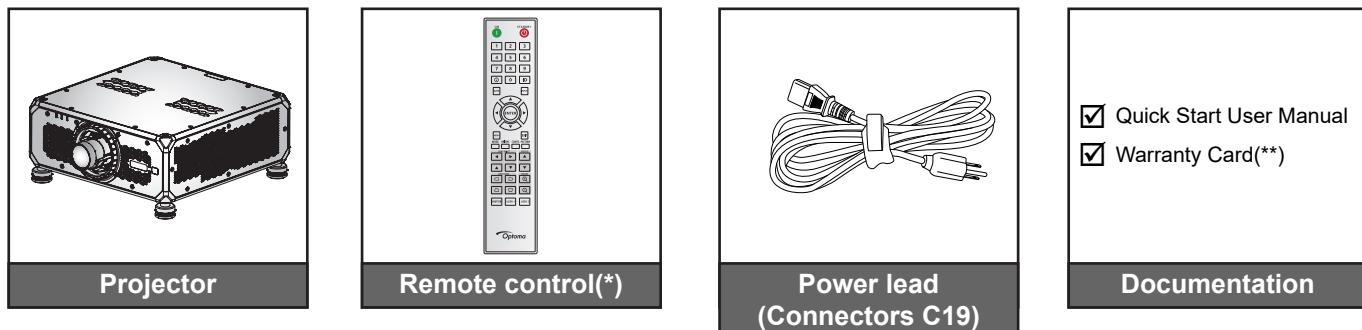

### Note:

- (\*)The remote control requires two AAA batteries. See *Installing/replacing the batteries* on page 26 for more information.
- (\*\*) For European warranty Information, please visit [www.optoma.com](http://www.optoma.com).




Please scan the OPAM warranty QR code or visit the following URL:  
<https://www.optoma.com/us/support/warranty-and-return-policy/>



Please scan the QR code or visit the following URL: <https://www.optoma.com/support/download>

## Optional accessories

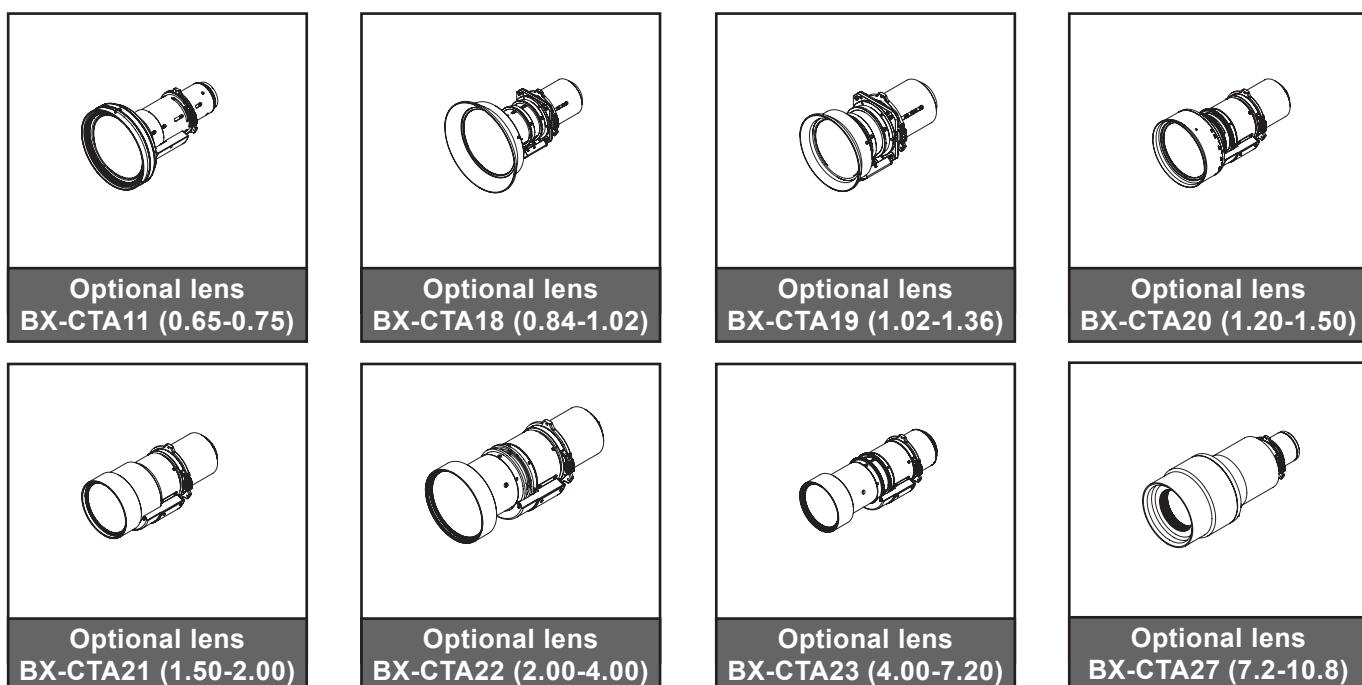


**Note:** The accessories may vary depending on model, specification and region.

# INTRODUCTION


## Product overview

### Front view

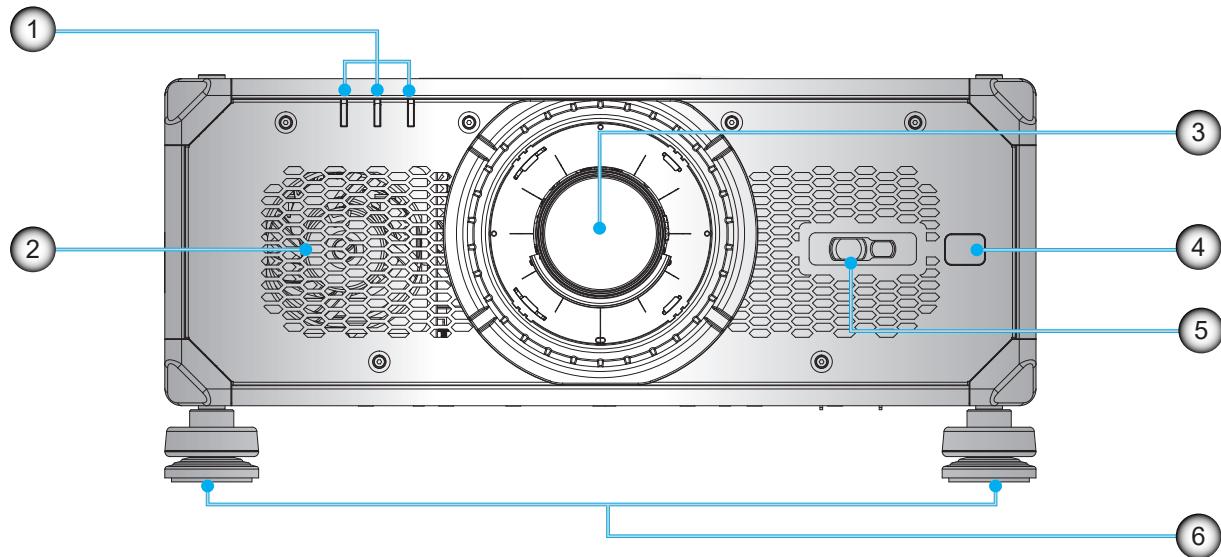

No	Item	No	Item
1.	Status LED	4.	Front IR sensor
2.	Cooling air vents (intake)	5.	Camera window
3.	Projection lens	6.	Adjustment feet


### Rear view

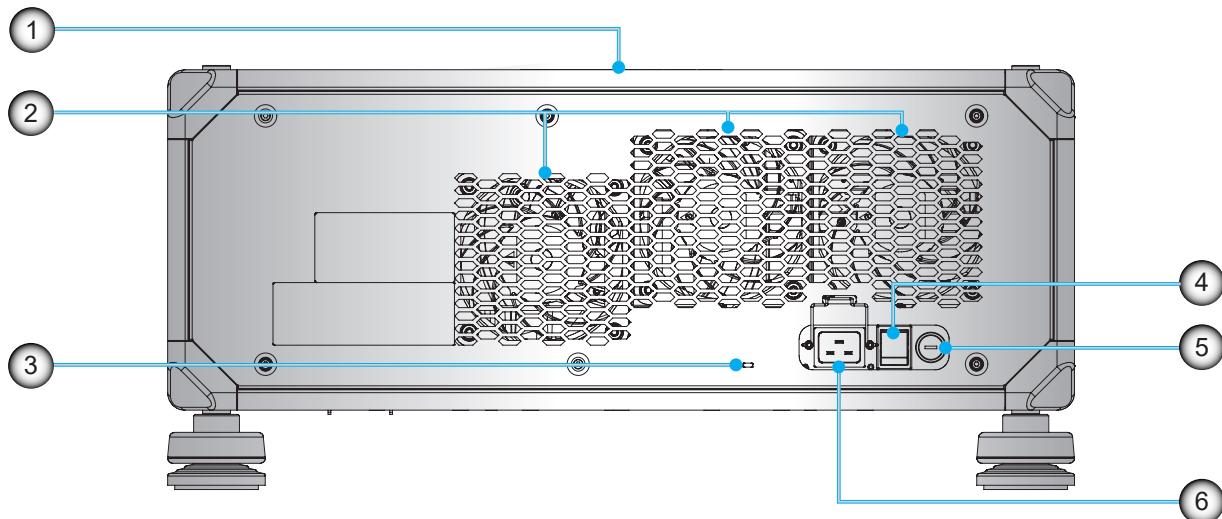

No	Item	No	Item
1.	Top IR sensor	4.	Power switch
2.	Cooling air vents (exhaust)	5.	Fuse
3.	Kensington lock	6.	AC input (C20 inlets)

# INTRODUCTION

## Bottom view

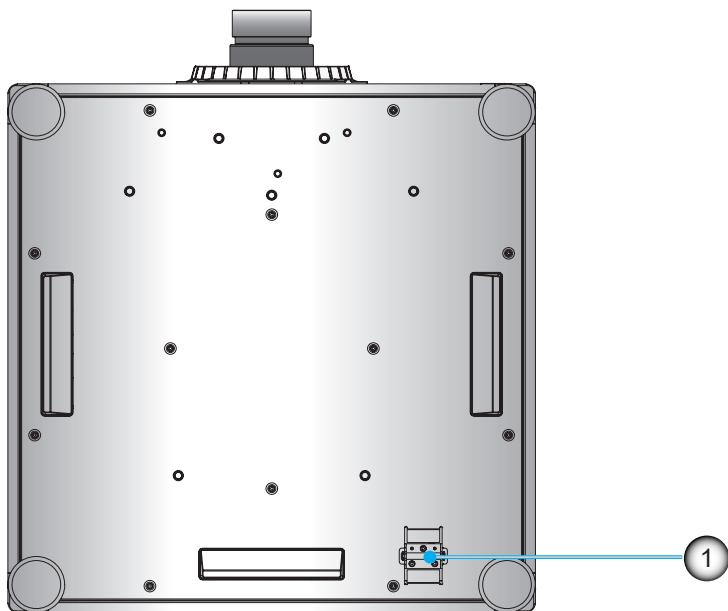

No	Item
1.	Security bar


**Note:** Replacing the fuse.

### Required parts

Fuse type T20A/250V~


### How to replace the fuse

1. Turn the projector off.
2. Remove the screw on the fuse, using a flat screwdriver.
3. Replace the fuse as illustrated.
4. Mount the screw back onto the projector, using the flat screwdriver.

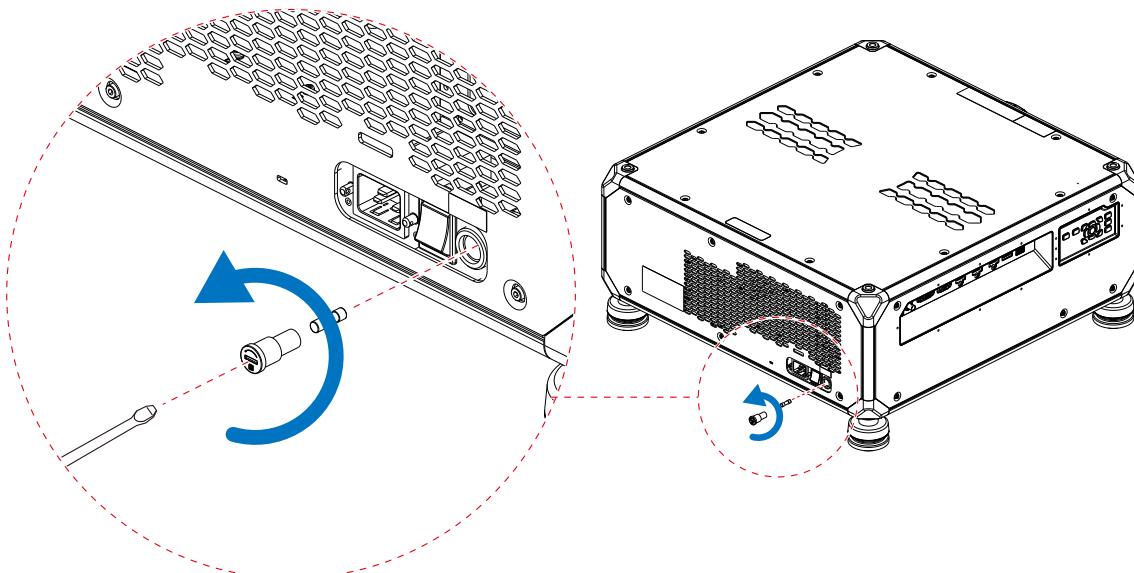

# INTRODUCTION

## Side view

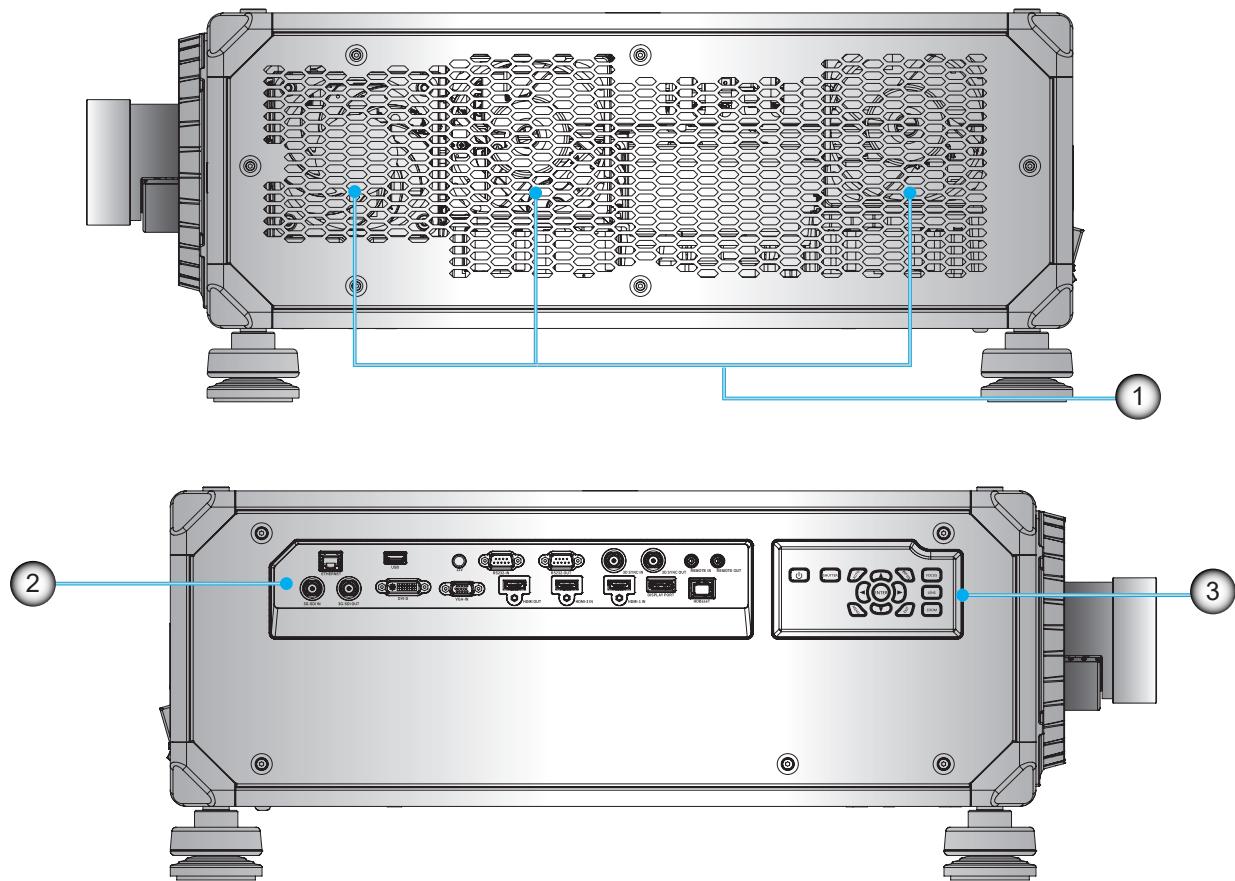

No	Item
1.	Cooling air vents (intake)
2.	Input/Output (I/O) panel


No	Item
3.	Built-in keypad

**Note:** Do not block projector intake or outlet air vents.

# INTRODUCTION

## Connections

### Side I/O panel

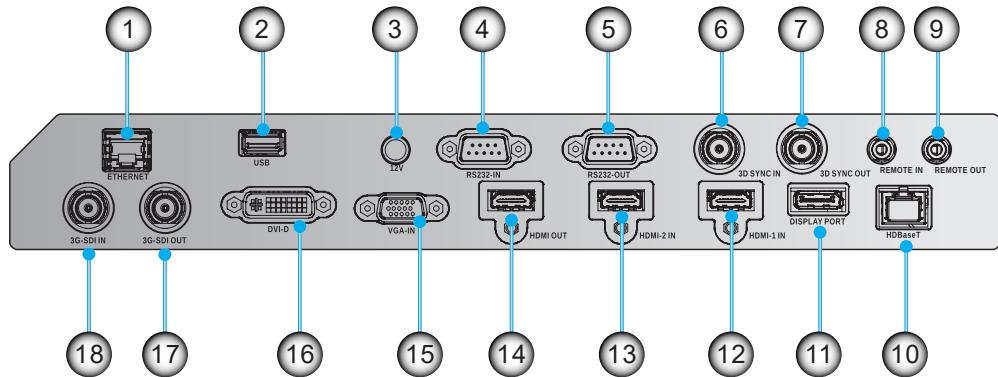


No	Item	No	Item
1.	ETHERNET	10.	HDBaseT
2.	USB	11.	DISPLAYPORT
3.	12V	12.	HDMI-1 IN
4.	RS232-IN	13.	HDMI-2 IN
5.	RS232-OUT	14.	HDMI OUT
6.	3D SYNC IN	15.	VGA-IN
7.	3D SYNC OUT	16.	DVI-D
8.	REMOTE IN	17.	3G-SDI OUT
9.	REMOTE OUT	18.	3G-SDI IN

**Note:** The USB port is for power (5V; 0.5A) delivery only.

# INTRODUCTION


## Keypad

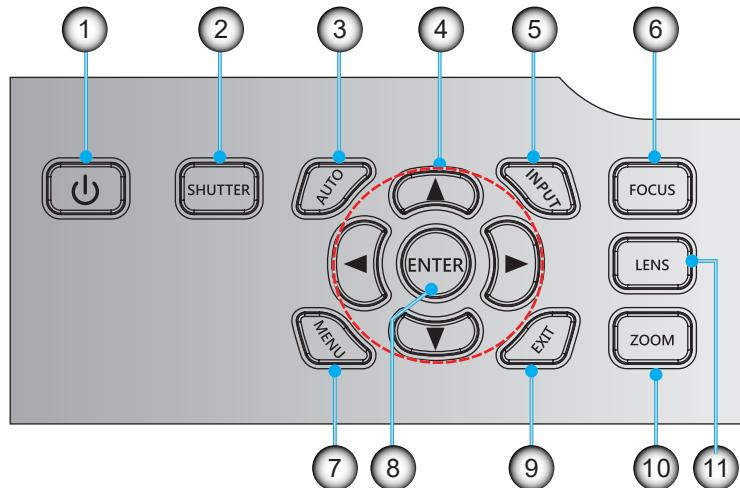

No	Item	No	Item
1.	Power key	7.	MENU
2.	SHUTTER	8.	ENTER
3.	AUTO	9.	EXIT
4.	Arrow keys	10.	ZOOM
5.	INPUT	11.	LENS
6.	FOCUS		

# INTRODUCTION

## Remote control

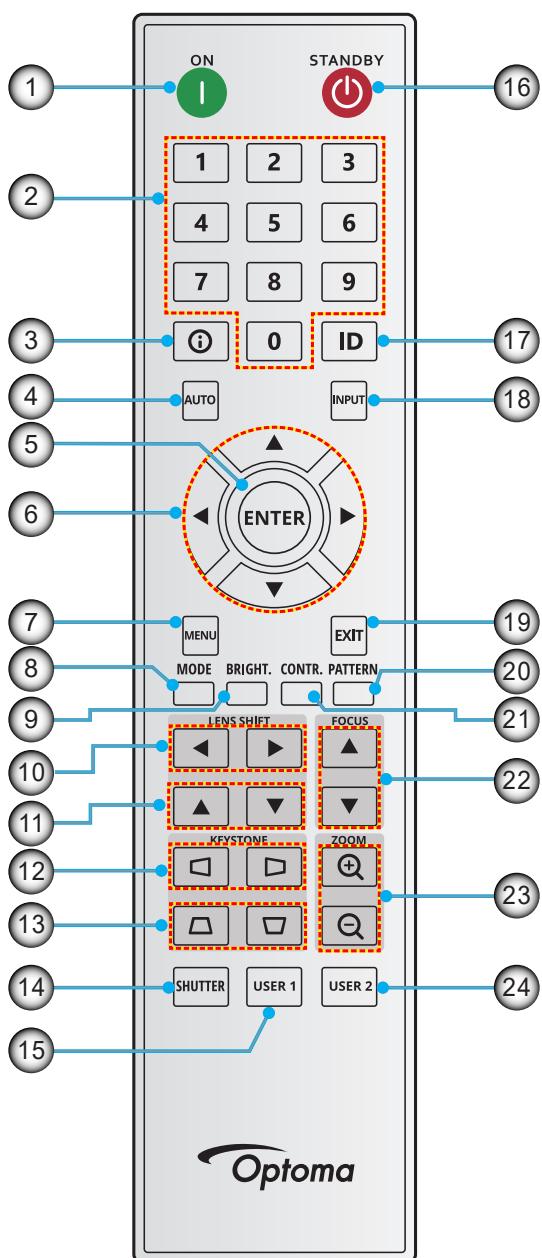

No	Item	No	Item	No	Item
1.	Power On	9.	Bright. (brightness)	17.	ID
2.	Number Keys	10.	Lens Shift (horizontal)	18.	Input
3.	Info	11.	Lens Shift (vertical)	19.	Exit
4.	Auto	12.	Keystone (horizontal)	20.	Pattern
5.	Enter	13.	Keystone (vertical)	21.	Contr. (Contrast)
6.	Arrow Keys	14.	Shutter	22.	Focus
7.	Menu	15.	User 1	23.	Zoom In/Zoom Out
8.	Mode	16.	Standby	24.	User 2

# SETUP AND INSTALLATION

## Installing the projection lens

Before setting up the projector, install the projection lens in to the projector.

在安装或替换镜头前，关掉投影机的电源。

在镜头安装联接过程中，避免使用遥控器或投影机按键板的按钮  
调节侧平移镜头或缩放/聚焦。

Before installing or replacing the lens, switch off the power to the projector.


Avoid using the remote control or projector keypad button to adjust the lens shift or zoom/focus while the lens attachment process is carried out.

### IMPORTANT!


- *Before installing or replacing the lens, make sure the projector's power switch is turned off.*
- *During lens installation, do not adjust the lens shift, zoom, or focus either using the remote control or the projector keypad.*
- *To prevent damage to the lens and avoid personal injury, do not clean the lens when the projector is turned on. Any damage resulting from doing so will void the warranty.*

### Procedure:

1. Rotate the lens cap counterclockwise and then remove it from the projector.

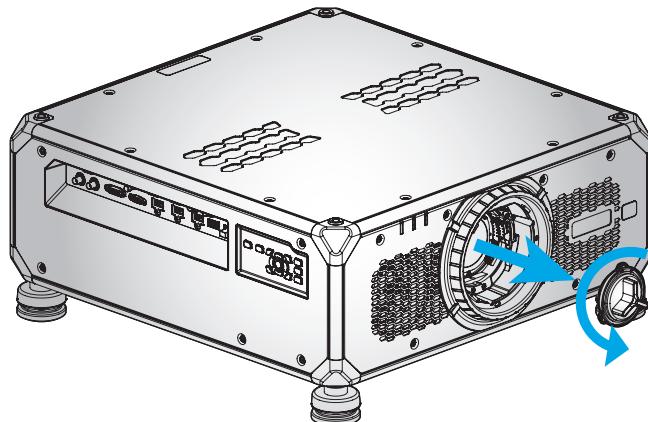

2. Insert the lens to the projector. Then rotate the lens clockwise to lock the lens in place.

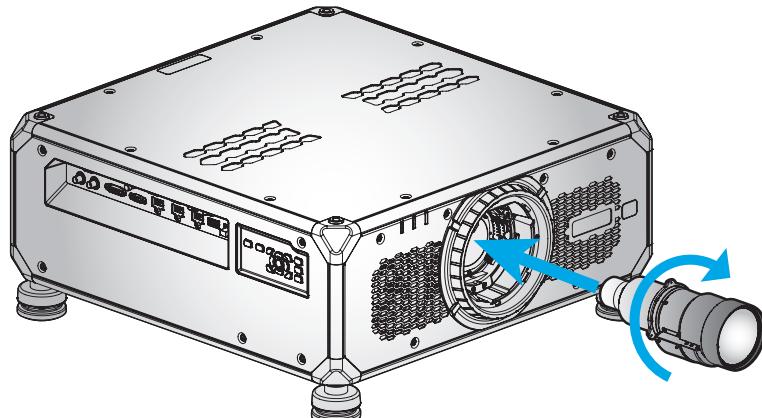


# SETUP AND INSTALLATION


## Adjusting the projector position

When you select a position for the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment. Follow these general guidelines:

- Position the projector on a flat surface at a right angle to the screen.
- Position the projector to the desired distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- 360 degree free orientation operation

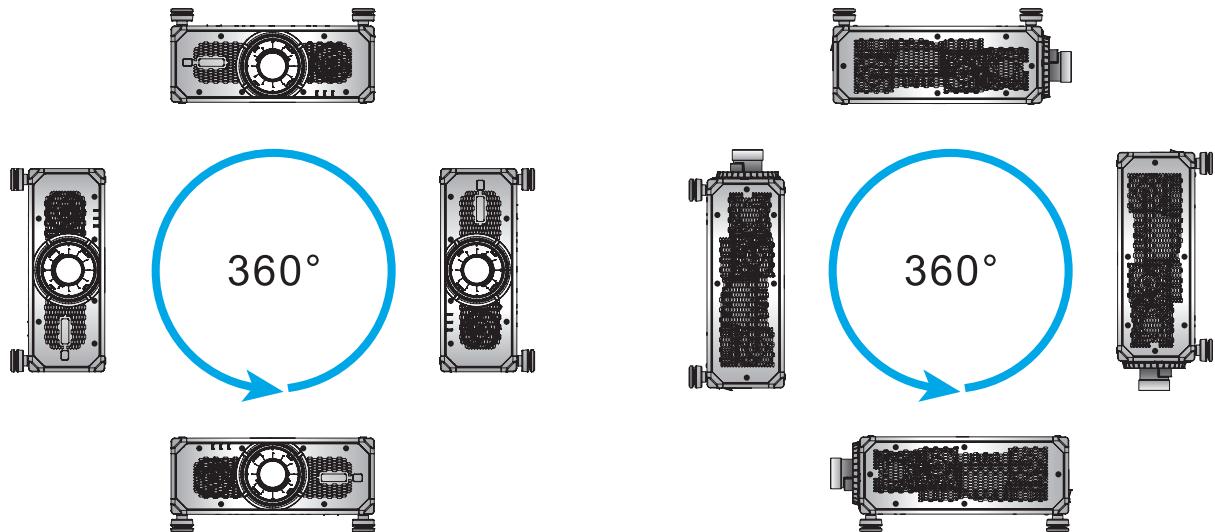


- For ceiling mount installations, make sure to leave 10 mm (0.4") between the ceiling mount and the bottom intake vents of the projector.

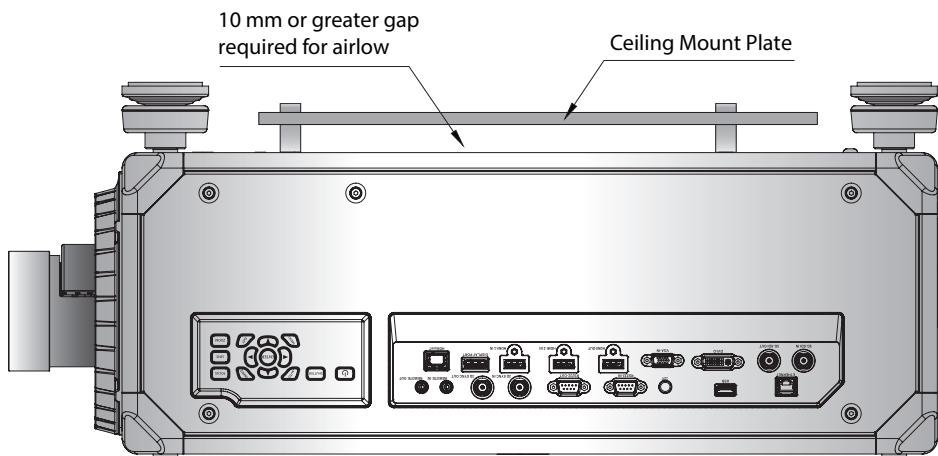

# SETUP AND INSTALLATION


- Allowing proper space around the projector is critical for air circulation and cooling. For 360° installations and multiple projectors, make sure to leave at least 600mm (23.6") space around the air intakes and outlet of the projector.

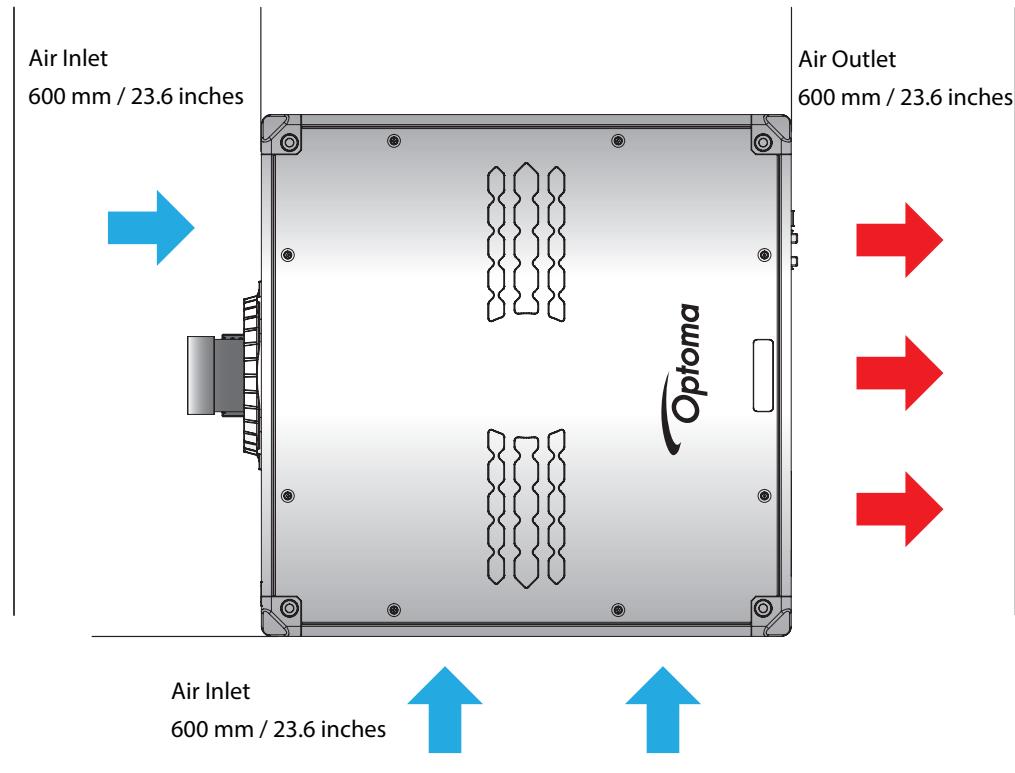

## Hanging application

For hanging application, attach four eyebolts to the designated locations on the projector as shown below. Then use the adjustable wires to hang the projector on the ceiling. For more information on hanging application, please contact the vendor. Screw type: M10\*P1.5\*L20mm x 4.

**IMPORTANT!** To avoid damage to the projector, use one hanging application to hang a single projector only.

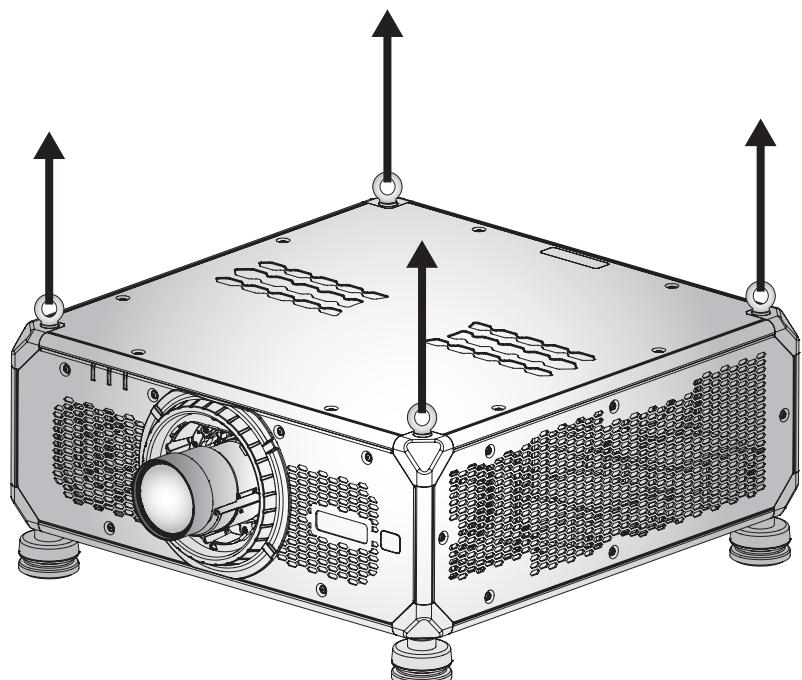

# SETUP AND INSTALLATION

## Boresight adjustment

Only apply a boresight adjustment in case the overall focus of the projected image is not equally sharp. The boresight adjustment helps to balance the tilt of the lens mount to sharpen the unfocused sections of the image. It tilts the lens holder to parallel the lens plane and the DMD plane.

**Note:** *This boresight adjustment process may cause the other areas of the image to slide out of focus. This is totally normal.*

### Required tool

For BX-CTA19/BX-CTA20/BX-CTA21/BX-CTA22/BX-CTA23 lens, the following tools are required for boresight adjustment:

- Allen key, hex 4mm

For BX-CTA11/BX-CTA18/BX-CTA27 lens, the following tools are required:

- Boresight extender with red rubber ring
- L-shape socket tool


### Setting the projector start mode

1. Choose the test pattern of the OSD. Switch to full screen mode.
2. Prepare the test area. Verify that the throw ratio of the installed lens matches the requirements of the installation area (projection distance and screen size).
3. Check that the lens is correctly installed.

### Performing the boresight adjustment


For BX-CTA19/BX-CTA20/BX-CTA21/BX-CTA22/BX-CTA23 lens

Use the Allen key screwdriver to clockwise or counter-clockwise adjust the three boresight screws.

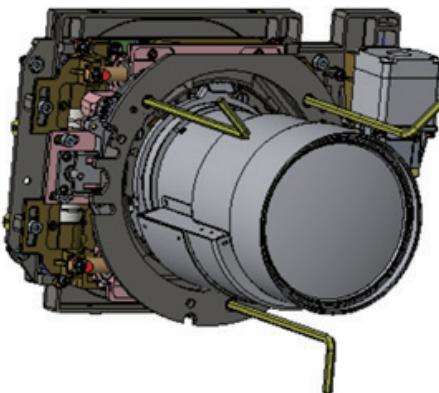


For BX-CTA11/BX-CTA18/BX-CTA27 lens

The boresight extenders must be installed before installing the BX-CTA11/BX-CTA18/BX-CTA27 lens.

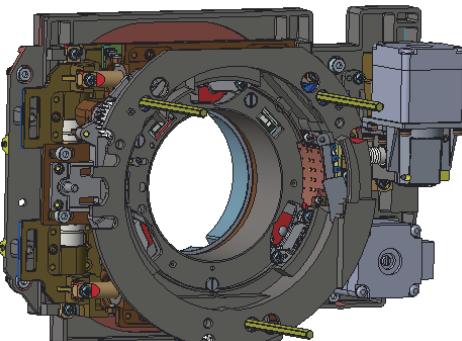

# SETUP AND INSTALLATION




1. Use the L-shape screwdriver to adjust the three boresight screws.

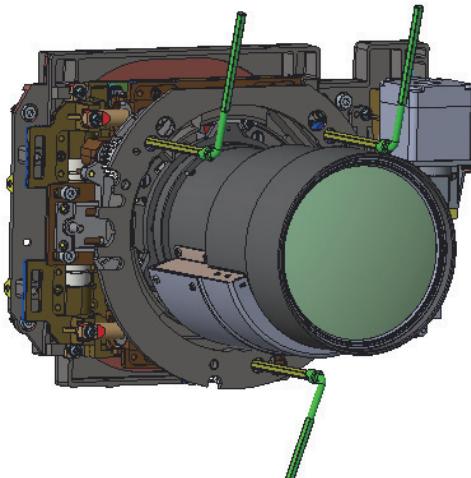

2. Zoom the lens to its widest opening.
3. Adjust the focus control to search for the best sharpness of the projected image.
4. Zone A/C boresight adjustment.

If zone A is in focus on the screen, please check the focal plane of zone C.

- If clear position is just on the screen then no need to adjust.
- If clear position is out of the screen (Close to the projector), rotate screw ① CCW and then screw ② & ③ CW for half amount that ① rotated. Then repeat until both A and C are clear. For example, turn ① CCW in a circle, then turn ② & ③ CW in half circle).
- If clear position is in the screen (away from the projector), rotate screw ① CW and then screw ② & ③ CCW for half amount that ① rotated. Then repeat until both A and C are clear.

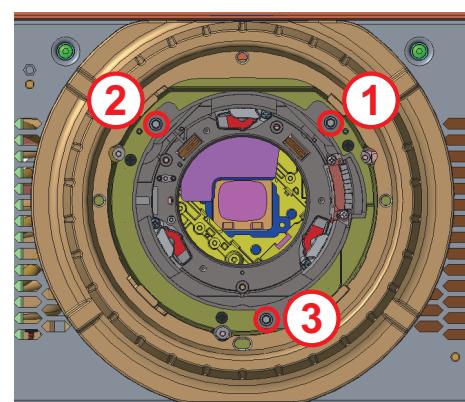
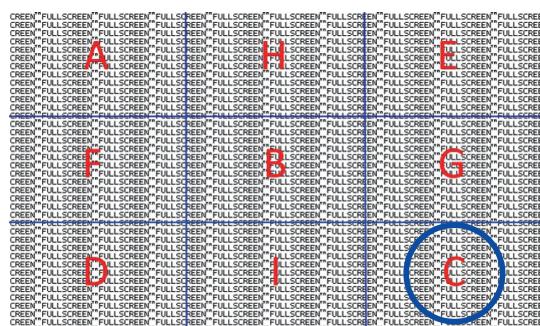
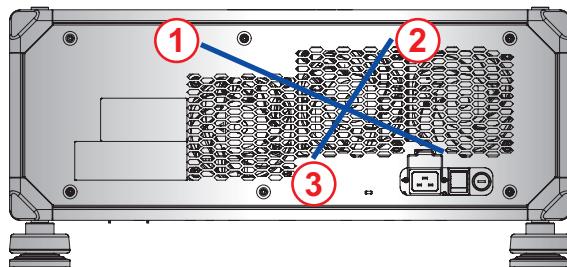


# SETUP AND INSTALLATION

## 5. Zone D/E boresight adjustment.

If zone E is in focus on the screen, please check the focal plane of zone D.

- If clear position is just on the screen then no need to adjust.
- If clear position is out of the screen (close to the projector), rotate screw **(2)** CCW and then screw **(1)** & **(3)** CW for half amount that **(2)** rotated. Then repeat until both D and E are clear. For example, turn **(2)** CCW in a circle, then turn **(1)** & **(3)** CW in half circle).
- If clear position is in the screen (away from the projector), rotate screw **(2)** CW and then screw **(1)** & **(3)** CCW for half amount that **(2)** rotated. Then repeat until both D and E are clear.

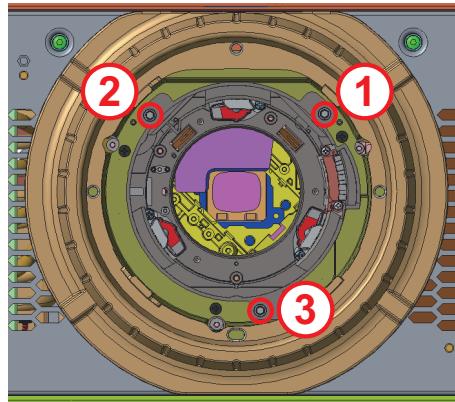
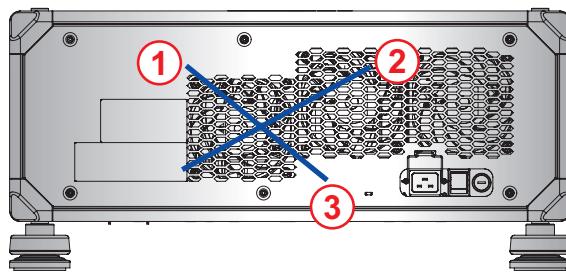
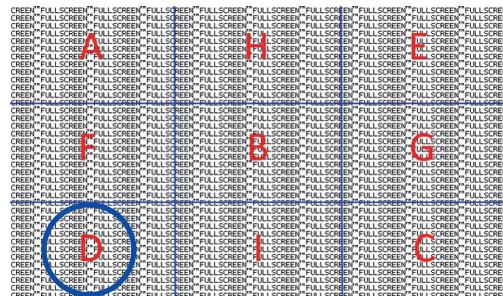


## 6. Zone H/I boresight adjustment.


If zone I is in focus on the screen, please check the focal plane of zone H.

- If clear position is just on the screen then no need to adjust.
- If clear position is out of the screen (close to the projector), rotate screw **(3)** CCW and then screw **(1)** & **(2)** CW for half amount that **(3)** rotated. Then repeat until both H and I are clear. For example, turn **(3)** CCW in a circle, then turn **(1)** & **(2)** CW in half circle).
- If clear position is in the screen (away from the projector), rotate screw **(3)** CW and then screw **(1)** & **(2)** CCW for half amount that **(3)** rotated. Then repeat until both H and I are clear.

# SETUP AND INSTALLATION

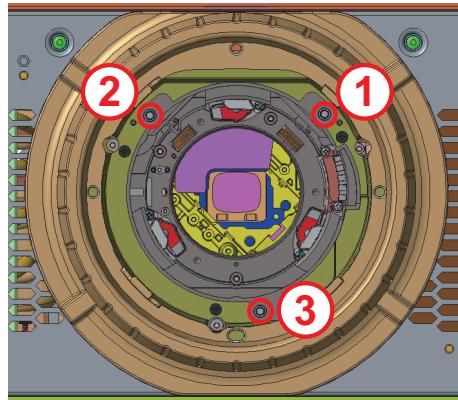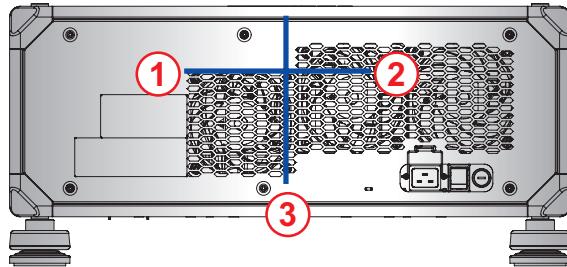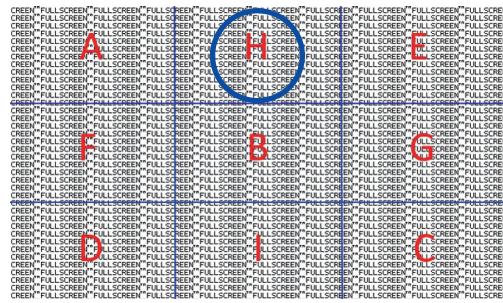


7. After the above adjustment of the viewing axis, the projected image from zone A to zone I still cannot achieve a clear focus on the screen. Please remove the PJ-lens then turn the boresight screws ① to ③ counterclockwise to the end (STOP), and then turn clockwise 2 circles to the design value position.

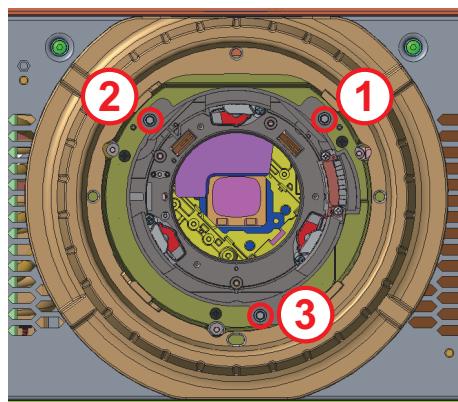

8. Repeat steps 2 to 6 above to adjust.

# SETUP AND INSTALLATION

## Connecting sources to the projector

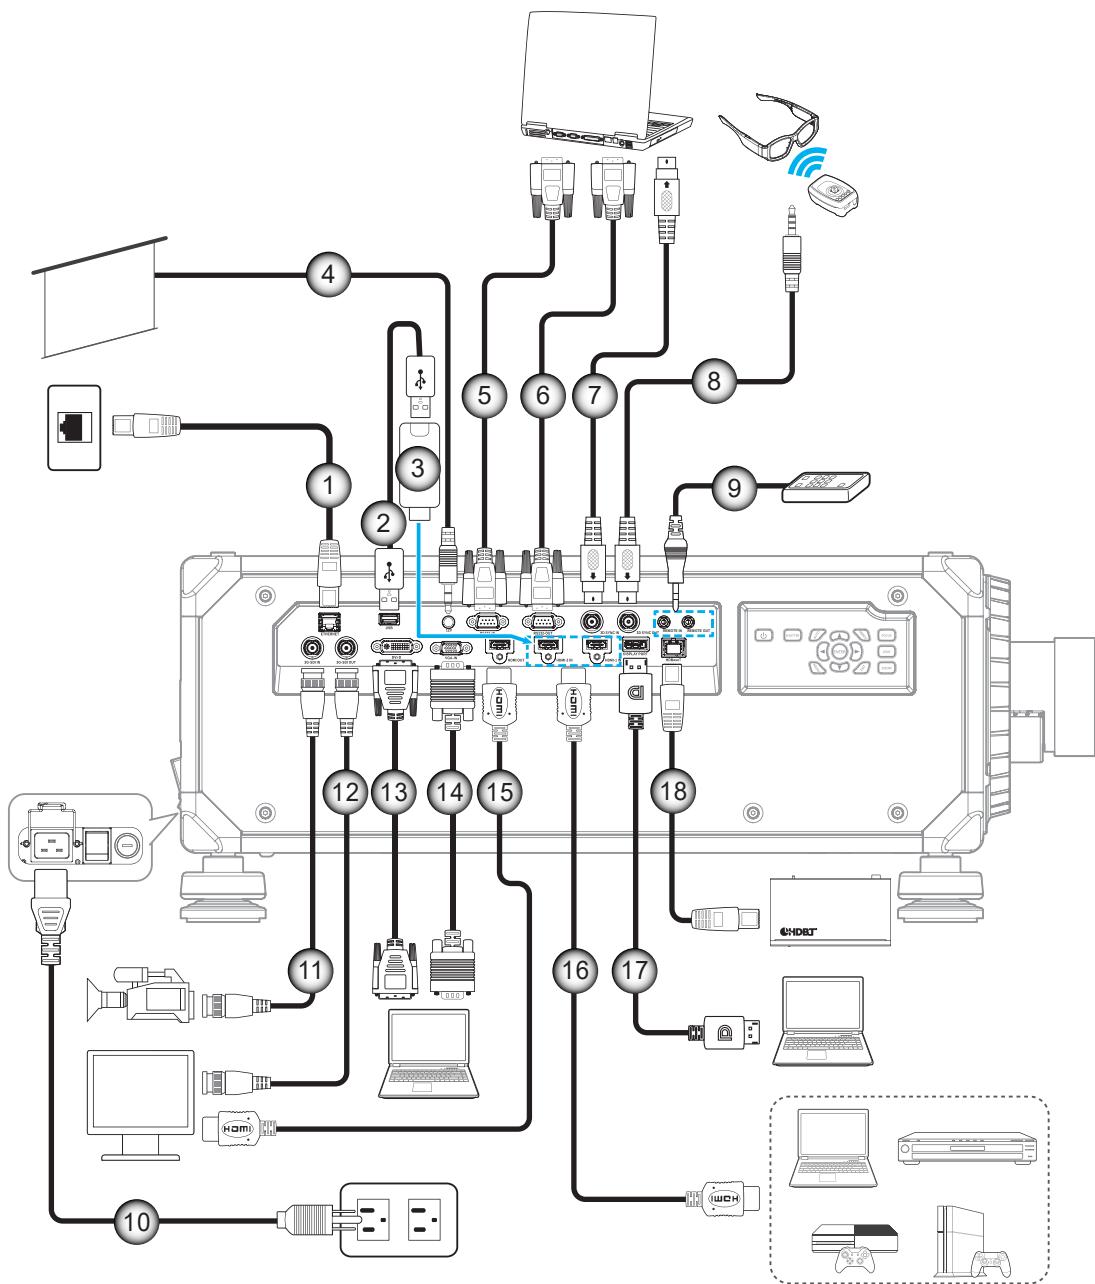


No	Item
1.	RJ-45 Cable
2.	USB Power Cable
3.	HDMI Dongle
4.	12V Trigger Cable
5.	RS-232 Cable
6.	RS-232 Cable
7.	3D Sync Cable
8.	3D Emitter Cable
9.	Wired Remote-In/Out Cable

No	Item
10.	Power Cord
11.	3G-SDI Cable
12.	3G-SDI Cable
13.	DVI-D Cable
14.	VGA Cable
15.	HDMI Cable
16.	HDMI Cable
17.	DisplayPort Cable
18.	RJ-45 Cable

# SETUP AND INSTALLATION

## RS232 Pin assignments

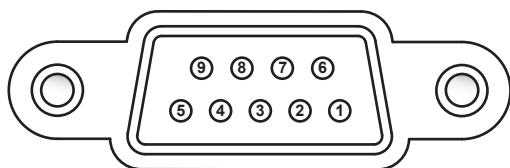


Pin No.	Signal	Pin No.	Signal
1	N/A	6	N/A
2	RXD	7	N/A
3	TXD	8	N/A
4	N/A	9	N/A
5	GND		

## Adjusting the projector image

### Image height

The projector is equipped with adjustable feet to change the image height.

1. Locate the adjustable foot you wish to adjust on the underside of the projector.
2. Rotate the adjustable foot clockwise or counterclockwise to raise or lower the projector.

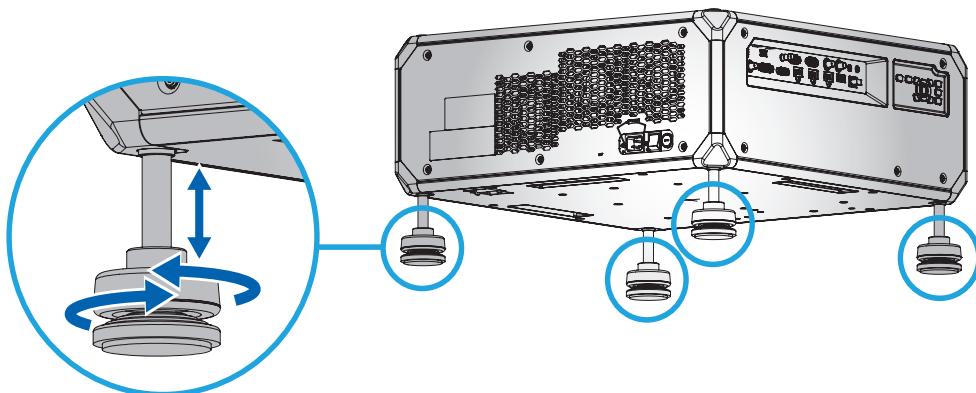


**Note:** The adjustable feet can be raised up to 50mm, or may be removed for certain installations. Please ensure sufficient space around projector for proper air flow.

### Zoom and Focus

Use the remote control or projector keypad to adjust the zoom and focus of the projected image.

- To adjust the image focus, press **Focus** and the **▲▼** buttons to improve the image quality. **(A)**
- To adjust the image size, press **Zoom** and the **⊕⊖** buttons to get the required image size. **(B)**

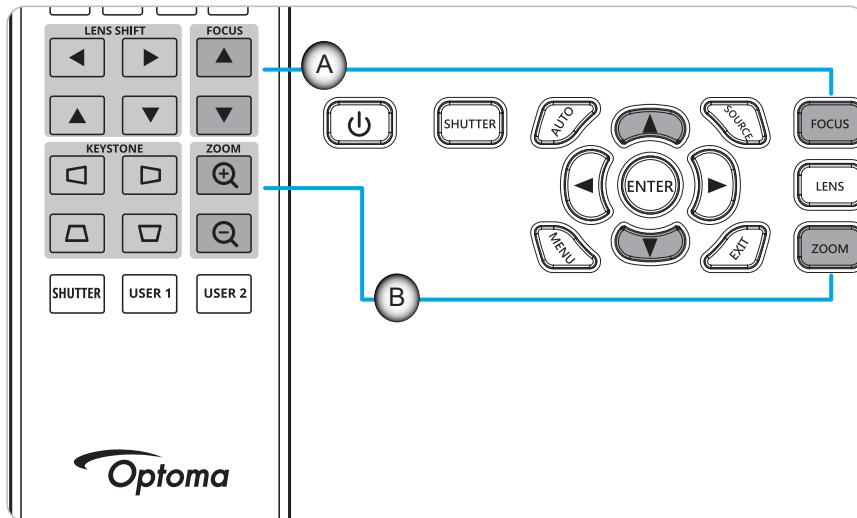


# SETUP AND INSTALLATION

## Remote setup

### Installing / replacing the batteries

Two AAA size batteries are supplied for the remote control.

1. Remove the battery cover on the back of the remote control.
2. Insert AAA batteries in the battery compartment as illustrated.
3. Replace back cover on remote control.

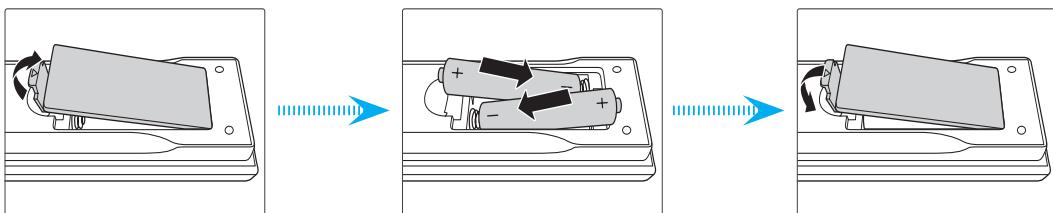

**Note:** Replace only with the same or equivalent type batteries.

### CAUTION

Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.

- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as they are depleted. Chemicals that leak from batteries that come in contact with skin can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control for an extended period of time, remove the batteries.
- When you dispose of the batteries, you must obey the law in the relative area or country.

### Remote control ID setup

The Infra-Red (IR) remote control supports individual addressing of projectors. The remote receiver on the projector can be set with a specific number from 00 to 99, and the projector only responds to the IR remote set to the same number. The default ID code of the IR remote is 00, allowing it to control all projectors within its effective range.

Follow below methods to set up the ID code for the IR remote control:

ID Code	Change mode	Customer code
1	Keep pressing the "ID" button for 3 sec, enter "0" then enter "1" within 2 sec, and then release "ID" button.	3201
2	Keep pressing the "ID" button for 3 sec, enter "0" then enter "2" within 2 sec, and then release "ID" button.	3202
...	...	
10	Keep pressing the "ID" button for 3 sec, enter "1" then enter "0" within 2 sec, and then release "ID" button.	3210
11	Keep pressing the "ID" button for 3 sec, enter "1" then enter "1" within 2 sec, and then release "ID" button.	3211
...	...	
98	Keep pressing the "ID" button for 3 sec, enter "9" then enter "8" within 2 sec, and then release "ID" button.	3298
99	Keep pressing the "ID" button for 3 sec, enter "9" then enter "9" within 2 sec, and then release "ID" button.	3299

To have the IR remote control return to default value 00 where all projectors can be controlled, press the "ID button" for 3 seconds, and press "0" twice within 2 seconds.

For more information on setting the remote receivers on the projector, refer to "Remote Setup" on page 69.


# SETUP AND INSTALLATION

## Effective range

The Infra-Red (IR) remote control sensors are located on the front and top sides of the projector. To have the remote control function correctly, be sure to hold the remote control at an angle of  $\pm 30^\circ$  horizontally or angle of  $\pm 20^\circ$  vertically within the distance of 20m (65.6 ft) or at an angle of  $0^\circ$  within the distance of 30m (98.4 ft) to the projector's IR remote control sensor.

- Make sure that there are no obstacles between the remote control and the IR sensor on the projector.
- Make sure the IR transmitter of the remote control is not being obstructed by direct light from sunlight or fluorescent lamps.
- Keep the remote control away from fluorescent lamps for at least 2m or it may malfunction.
- If the remote control is near Inverter-Type fluorescent lamps, it may operate ineffectively at times.
- If the remote control and the projector are within a very short distance, it may operate ineffectively.
- When aiming at a screen, the effective distance is less than 5m from the remote control to the screen and reflects the IR beams back to the projector. However, the effective range may vary between screens.


**IMPORTANT!** If you want to use the 3D IR emitter, refer to "IR Control setup when using the 3D IR emitter" on page 51.

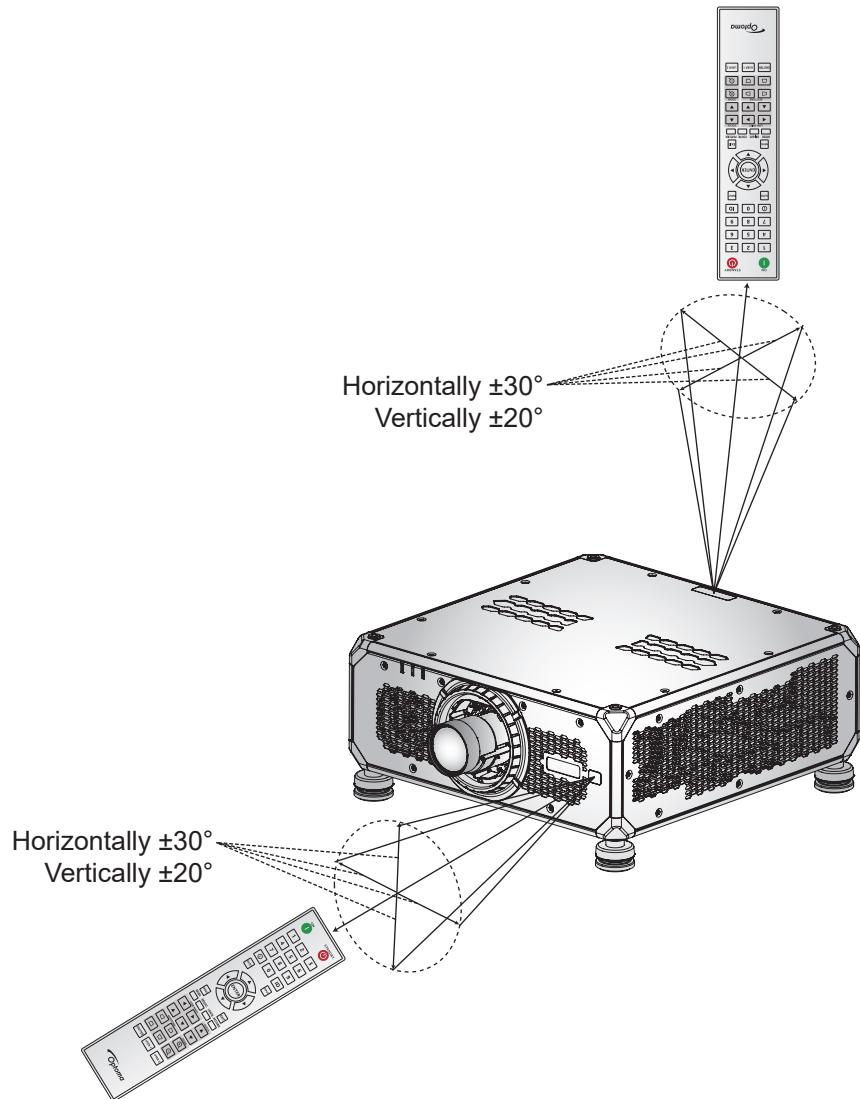


# SETUP AND INSTALLATION

## Wired remote

Remote In connector is designed to work with Wired Remote or IR Keypad with longer range and provides fast, easy set-up and reliable individual control of a specific projector. Remote Out connector sends the IR control signal to the next projector when using multiple projectors.

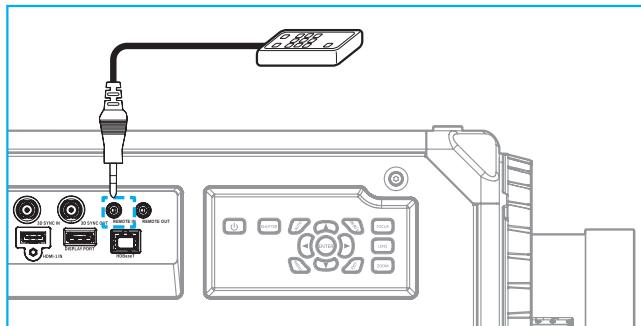

The connector type is 3.5mm Phone Jack connector:

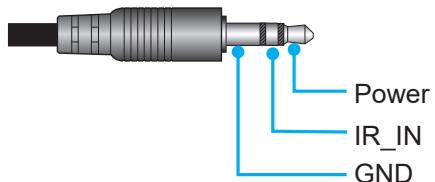


# USING THE PROJECTOR

## Powering on / off the projector

### Powering on

1. Securely connect the AC power cord and signal/source cable to the projector.
2. Set the power switch to the "I" (ON) position and wait until the power button "P" on the projector keypad is solid orange.
3. Turn on the projector by pressing the **ON** button "1" on the remote control or the power button "P" on the projector keypad.

The status LED is orange with a long blink and the status LED will turn to solid green.

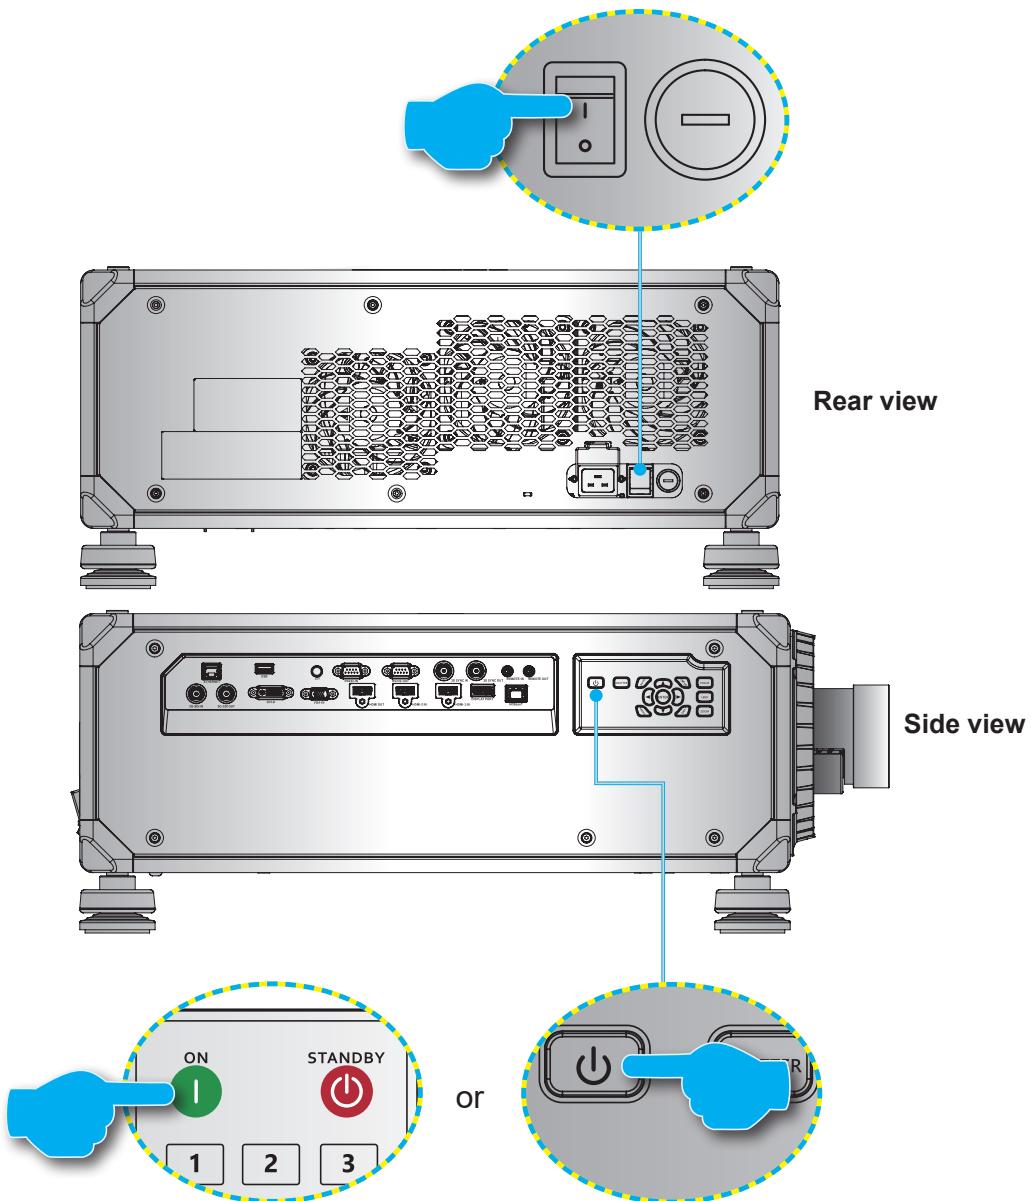

**Note:** If the projector is turned on for the first time, you will be prompted to select the projector language, projection orientation, and other settings.

# USING THE PROJECTOR


## Powering off

1. Turn off the projector by pressing the power button “” on the projector keypad or the **OFF** button “” on the remote control.  
A message will pop up to confirm that you want to turn off the projector.
2. Press the power button or the **OFF** button again to confirm, otherwise the warning message disappears after 10 seconds and the projector remains on.
3. Set the Power switch to the “” (OFF) position.  
The status LED turns from blinking orange to solid orange and the keypad also turns to solid orange.
4. Disconnect the power cord from both the projector and the electrical outlet.

**Note:** It is not recommended to turn on the projector immediately after powering it off. Wait for 10 seconds until you power it on again.

## Selecting an input source

Turn on the connected source that you want to display on the screen, such as computer, notebook, and/or video player. The projector will automatically detect the input source. If multiple sources are connected, press the **Input** button on the remote control or **Input** key on the projector keypad to select an input source.

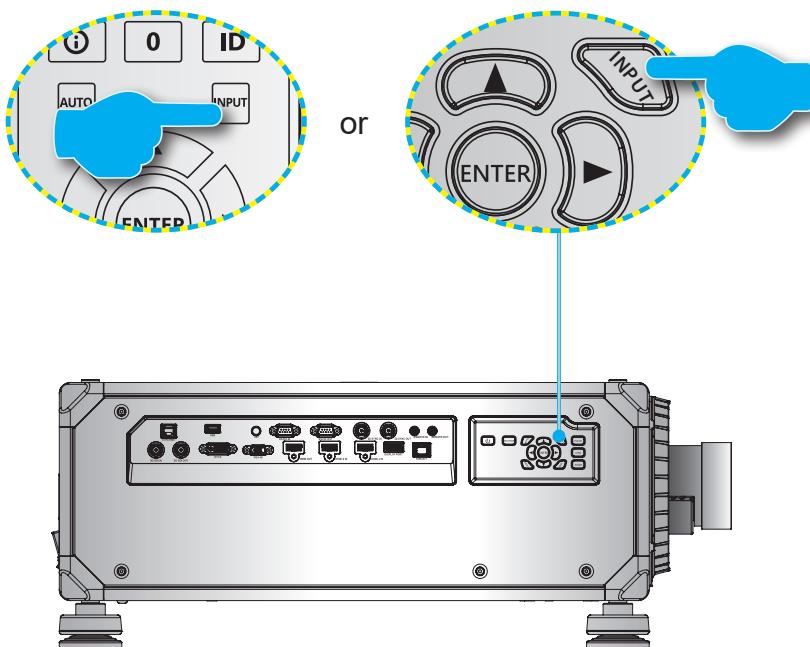


# USING THE PROJECTOR

## Menu navigation and features

The projector has multilingual on-screen display (OSD) menus that allow you to make image adjustments and change a variety of settings.

1. To open the OSD menu, press the **Menu** key on the remote control or projector keypad.
2. To select a main menu or submenu, use the **▲** and **▼** buttons to highlight it. Then, press the **Enter** key to enter the submenu.
3. Press the **Exit** key to return to the previous menu or exit the OSD menu if at top level.
4. Setting methods to adjust the function value or selection an option.
  - To adjust the slide bar values, highlight the function, and use the **◀▶** buttons to change value.
  - To check or uncheck a checkbox, highlight the function, and press **Enter**.
  - To input a number or symbol, highlight the number or symbol, and use the **▲** and **▼** buttons to make a selection. You can also use the number keys on the remote control or keypad.
  - To select a function option, use the **▲▼◀▶** buttons to make the selection. If no **Enter** icon shows at the navigation bar, the highlighted option is automatically applied. If there is an **Enter** icon at the navigation bar, press **Enter** to confirm your selection.

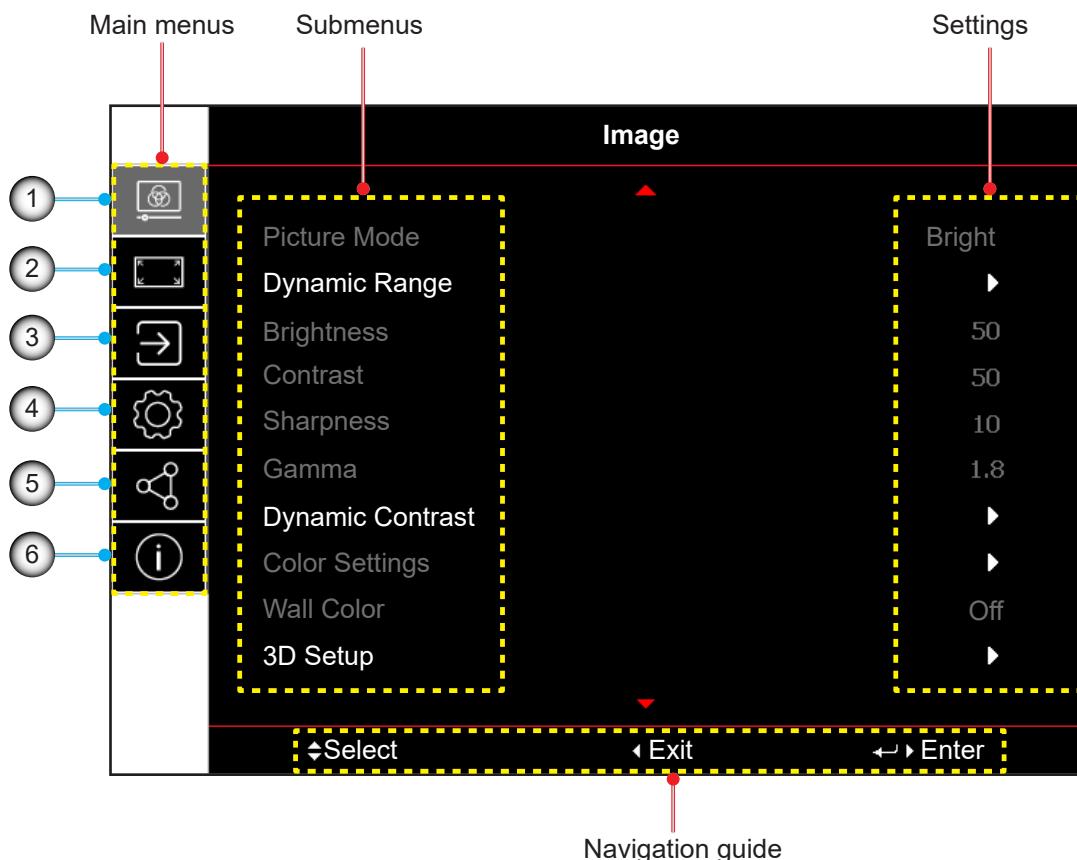

No	Item	No	Item
1.	Image menu	4.	Device setup menu
2.	Display menu	5.	Communication menu
3.	Input settings menu	6.	Information menu

# USING THE PROJECTOR

## OSD menu tree

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Image	Picture Mode					Presentation
						Bright
						Super Bright (depends on model)
						Cinema
						HDR
						sRGB
						DICOM SIM.
						Blending
						3D
						2D High Speed
Dynamic Range	HDR					User
						Off
						Auto
		HDR Picture Mode				Bright
						Standard
						Film
						Detail
		Brightness				0~100
		Contrast				0~100
		Sharpness				1~15
Gamma	Gamma					Film
						Graphics
						Standard(2.2)
						Vivid
						3D
						Blackboard
						DICOM SIM.
						1.8
						2.0
						2.4
Dynamic Contrast	Dynamic Black					2.6
						Off
						On
						1~15
						0~3
						50%~100%
						Off
						On
						0s~10s
						0~5

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Image	Color Settings	Color				0~100
		Tint				0~100
		Color Temperature				Warm
						Standard
						Cool
	White Balance	Red Gain				0~100
		Green Gain				0~100
		Blue Gain				0~100
		Red Offset				0~100
		Green Offset				0~100
		Blue Offset				0~100
	White Enhancement					0~10
	Color Space					Auto
						RGB (0-255)
						RGB (16-235)
						REC709
						REC601
	Color Matching	Auto Test Pattern				Off
						On
		Red	Hue			0~254
			Saturation			0~254
			Luminance			0~254
		Green	Hue			0~254
			Saturation			0~254
			Luminance			0~254
		Blue	Hue			0~254
			Saturation			0~254
			Luminance			0~254
		Cyan	Hue			0~254
			Saturation			0~254
			Luminance			0~254
		Magenta	Hue			0~254
			Saturation			0~254
			Luminance			0~254
		Yellow	Hue			0~254
			Saturation			0~254
			Luminance			0~254
		White	Red			0~254
			Green			0~254
			Blue			0~254
	Reset					Yes / Cancel (Dialog box)

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Image	Wall Color					Off Blackboard Light Yellow Light Green Light Blue Pink Gray
3D Setup	3D Mode					Off Active 3D Passive 3D
	3D Format					Auto Frame Packing Side by Side Top and Bottom Frame Sequential
	3D Tech					DLP-link 3D Sync
	3D-2D					3D L R
	3D Sync Out					To Emitter To Next Projector
	3D Invert					Off On
	Frame Delay					1~200
	Reset					Yes / Cancel (Dialog box)
Save to User						Yes / Cancel (Dialog box)
Apply to User						User-Presentation User-Bright User-Super Bright User-Cinema User-HDR User-sRGB User-DICOM SIM. User-Blending User-3D User-2D High Speed
	Reset					Yes / Cancel (Dialog box)

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Display	Aspect Ratio					Auto
						4:3
						16:9
						16:10
						LBX
						Native
Digital Zoom	Proportional					Off
						On
						Horizontal 50%~400%
						Vertical 50%~400%
						Horizontal Shift 0~100
						Vertical Shift 0~100
Image Shift	Reset					Yes / Cancel (Dialog box)
						H. Position 0~100
						V. Position 0~100
						Reset Yes / Cancel (Dialog box)
Geometric Correction	Warp Control					Basic
						Advanced
						AP
		Basic Warp	Keystone	Horizontal		0~40
			Vertical			0~40
		Pincushion	Horizontal			0~100
			Vertical			0~100
Geometric Correction	Advanced Warp	4-Corner	Top Left			
			Top Right			
			Bottom Left			
			Bottom Right			
		Grid Color				Green
						Magenta
						Red
						Cyan
Geometric Correction	Advanced Warp	Grid Background				Black
						Transparent
		Warp Setting	Grid Points			2x2
						3x3
						5x5
						9x9
						17x17
Geometric Correction	Advanced Warp	Warp Inner				Off
						On
		Warp Sharpness				0~9
		Blend Setting	Blend Width			
			Overlap Grid Number			4 / 6 / 8 / 10 / 12
			Gamma			1.8 / 1.9 / 2 / 2.1 / 2.2 / 2.3 / 2.4

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Display	Geometric Correction	Advanced Warp	Black Level	Area		Bottom Top
				Enable		Off On
				Edit Area		
				Brightness	Brightness	
				Red	0~255	
				Green	0~255	
				Blue	0~255	
				Boundary	Off	
					On	
				Exit		
				Red	0~255	
				Green	0~255	
				Blue	0~255	
				Reset	Bottom	Yes / Cancel (Dialog box)
					Top	Yes / Cancel (Dialog box)
					All	Yes / Cancel (Dialog box)
	Memory	Save Memory				Memory 1~Memory 5
		Apply Memory				Memory 1~Memory 5
		Clear Memory				Yes / Cancel (Dialog box)
	Reset					Yes / Cancel (Dialog box)
Edge Mask						0~10
Freeze Screen						Unfreeze
						Freeze
Test Pattern						Off
						Green Grid
						Magenta Grid
						White Grid
						White
						Black
						Red
						Green
						Blue
						Yellow
						Magenta
						Cyan
						ANSI Contrast 4x4
						Color bar
						Full screen

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Display	PIP/PBP	Screen				Off PIP PBP
		Main Source				VGA HDMI1 HDMI2 DVI-D DisplayPort 3G-SDI HDBaseT
		Sub Source				VGA HDMI1 HDMI2 DVI-D DisplayPort 3G-SDI HDBaseT
		Swap				
		Size				Small Medium Large
		Location				PBP, Main Left PBP, Main Top PBP, Main Right PBP, Main Bottom PIP, Bottom Right PIP, Bottom Left PIP, Top Left PIP, Top Right
		Reset				Yes / Cancel (Dialog box)
Input Settings	Auto Source					Off On
	Active Inputs					VGA HDMI1 HDMI2 DVI-D DisplayPort 3G-SDI HDBaseT
	Latency Adjustment					Normal 2D Ultra

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Input Settings	Backup Input	Auto Switch				Off On
		Current Signal				(read only)
		First Input				HDMI1 HDMI2 HDBaseT DisplayPort
		Second Input				HDMI1 HDMI2 HDBaseT DisplayPort
		Backup Input Status				Active/Inactive (read only)
		Backup Input Change				Changed/No Change (read only)
	Backup Input Info.	Current Signal				(read only)
		Backup Input Status				Active/Inactive (read only)
		Backup Input Change				Changed/No Change (read only)
		First Input				By First Input (read only)
		Resolution				(read only)
		Horz Refresh				(read only)
		Color Space				(read only)
		HDR				Yes/No (read only)
		Second Input				By Second Input (read only)
		Resolution				(read only)
		Horz Refresh				(read only)
		Color Space				(read only)
		HDR				Yes/No (read only)
VGA	Phase					0~100
	Resolution					(read only)
HDMI	Output					HDMI 1 HDMI 2
	HDMI 1 EDID					1.4 2.0
	HDMI 2 EDID					1.4 2.0
HDBaseT	EDID					1.4 2.0
	Reset					Yes / Cancel (Dialog box)

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Language					English Deutsch Français Italiano Español Português Polski Nederlands Norsk 繁體中文 簡體中文 日本語 한국어 Русский Magyar ไทย
Projection	Ceiling					Auto On Off
	Rear					Off On
Lens Settings	Focus					+ -
	Zoom					⊕ ⊖
	Lens Shift					▲ ▼ ◀ ▶
	Lens Memory		Save Memory Apply Memory Clear Memory			Memory 1~Memory 5 Memory 1~Memory 5 Yes / Cancel (Dialog box)
	Lens Calibration					Yes / Cancel (Dialog box)
	Lens Lock					Lock Unlock
	Reset					Yes / Cancel (Dialog box)
Active Image Setup	Active Focus					Yes / Cancel (Dialog box)
	Active Color Uniformity	Calibration Target Selection Reset				Yes / Cancel (Dialog box) Pop-up pattern Yes / Cancel (Dialog box)
Schedule	Date and Time					----/--/- --:--
	Schedule Mode					Off / On
	View Today					Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Schedule	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday	Schedule Enable		Off	
					On	
			Event 01-16	Time	00:00 ~ 23:59	
				Function	Off / Power Settings / Input Source / Light Source Mode / Shutter	
				Event	Off	
				(Function = Power Settings)	Power On / Eco / Active / Communication	
				(Function = Input Source)	VGA / HDMI1 / HDMI2 / DVI-D / DisplayPort / 3G-SDI / HDBaseT	
				(Function = Light Source Mode)	Normal Mode / Eco Mode / Custom Brightness	
				(Function = Shutter)	Shutter On / Shutter Off	
				Reset	Yes / Cancel (Dialog box)	
			Copy Events To		Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday	
				Reset the Day	Yes / Cancel (Dialog box)	
		Reset Schedule			Yes / Cancel (Dialog box)	
Date and Time	Clock Mode				Use NTP Server	
					Manual	
	Date				2000 ~ 2037 (Year)	
					01 ~ 12 (Month)	
					01 ~ 31 (Day)	
	Time				00 ~ 23 (Hour)	
					00 ~ 59 (Minute)	
	Daylight Saving Time				Off	
					On	
	NTP Server				time.google.com	
					asia.pool.ntp.org	
					europe.pool.ntp.org	
					north-america.pool.ntp.org	
	Time Zone				UTC+14:00	
					UTC+13:00	
					UTC+12:45	
					UTC+12:00	
					UTC+11:00	
					UTC+10:30	
					UTC+10:00	
					UTC+09:30	
					UTC+09:00	
					UTC+08:45	
					UTC+08:00	
					UTC+07:00	

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Date and Time	Time Zone				UTC+06:30
						UTC+06:00
						UTC+05:45
						UTC+05:30
						UTC+05:00
						UTC+04:30
						UTC+04:00
						UTC+03:30
						UTC+03:00
						UTC+02:00
						UTC+01:00
						UTC+00:00
						UTC-01:00
						UTC-02:00
						UTC-03:00
						UTC-03:30
						UTC-04:00
						UTC-05:00
						UTC-06:00
						UTC-07:00
						UTC-08:00
						UTC-09:00
						UTC-09:30
						UTC-10:00
						UTC-11:00
						UTC-12:00
	Update Interval					Hourly
						Daily
	Apply					Yes / Cancel (Dialog box)
Power Settings	Power Mode (Standby)					Eco
						Active
						Communication
	Signal Power On					Off
						On
	Auto Power Off					0~180 m
	Sleep Timer					0~16 h
	12V Trigger					Off
						On
	Reset					Yes / Cancel (Dialog box)
Light Source Settings	Light Source Mode					Normal
						Eco Mode
						Custom Power
	Custom Brightness	Brightness Level				30%~100%
		Constant Brightness				Off
						On

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Shutter	Fade-In				0.5~5s
		Fade-Out				0.5~5s
		Startup				Shutter Off Shutter On
	Security	Security				Off On
		Security Timer	Month			0~35
			Day			0~29
			Hour			0~23
		Change Password				
	On Screen Display	Menu Location				Top Left Top Right Center Bottom Left Bottom Right
		Menu Transparency				0~9
			Menu Timer			Off 5s 10s 15s 30s 60s
			Information Hide			Off On
		Background				Blue Black White Logo
Logo Setup	Change Logo					Default Logo Neutral User Logo Captured Logo
	Logo Capture					Yes / Cancel (Dialog box)
Backlight	Delete Logo		Captured Logo			Yes / Cancel (Dialog box)
			User Logo			Yes / Cancel (Dialog box)
	Keypad					Off On
	Power key					Off On
High Altitude						Off On
User Data	Save all settings					Memory 1~Memory 5
System Update (FOTA)	Load all settings					Memory 1~Memory 5
	Auto					On Off
	Update					Yes / Cancel (Dialog box)

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Reset	Reset OSD				Yes / Cancel (Dialog box)
		Reset to default				Yes / Cancel (Dialog box)
		Reset Selective	Image			Yes / Cancel (Dialog box)
			Display			Yes / Cancel (Dialog box)
			Input			Yes / Cancel (Dialog box)
			Communication			Yes / Cancel (Dialog box)
			Setup			Yes / Cancel (Dialog box)
Communication	Projector ID					0~99
	Remote Setup	Remote Code				0~99
		Quick Switch Code				Off 1~9
		IR Function	Front			Off On
			Top			Off On
			HDBaseT			Off On
	User 1					Freeze Screen Blank Screen PIP/PBP Aspect Ratio Information Hide Network setup Projector ID Color Matching Reset Selective
	User 2					Freeze Screen Blank Screen PIP/PBP Aspect Ratio Information Hide Network setup Projector ID Color Matching Reset Selective
Network Setup	LAN Interface					RJ-45 HDBaseT
		MAC Address				(read only)
		Network Status				(read only) Connected / Disconnected
		DHCP				Off On
		IP Address				-----
		Subnet Mask				-----
		Gateway				-----
		DNS				-----
		Apply				Yes / Cancel (Dialog box)
		Network Reset				Yes / Cancel (Dialog box)

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Communication	Email Notification	Email 1				Email 1 Address (read only)
		Email 2				Email 1 Address (read only)
		Event				
		Fan Error				Off/Email
		Power On/Off				Off/Email
		Video Loss				Off/Email
		Laser				Off/Email
		Reset				Yes / Cancel (Dialog box)
	Control	Crestron				Off
						On
		IP Address				- - - - -
		IPID				2~255
		Port				0~65535
		Crestron Setup Apply				Yes / Cancel (Dialog box)
		PJ Link				Off
						On
		Authentication				Off
						On
Baud Rate	Serial Port In	Password				(read only)
		Service				- - - - -
		PJ Link Setup Apply				Yes / Cancel (Dialog box)
		Extron				Off
						On
		AMX				Off
						On
		Telnet				Off
						On
		HTTP				Off
						On
		Reset				Yes / Cancel (Dialog box)
		Serial Port In				1200
						2400
						4800
						9600
						19200
						38400
						57600
						115200
		Serial Port Out				1200
						2400
						4800
						9600
						19200
						38400

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Communication	Baud Rate	Serial Port Out				57600 115200
	Reset					Yes / Cancel (Dialog box)
Information	Device	Regulatory				
		Serial Number				
		Projection Hours				
	System Status	Standby Mode				
		Light Source Mode				
		Light Source Hours				
		Total Hours				
		Normal				
		Eco Mode				
		Custom Power				
		Temperature				
		AC Voltage				
Communication	Projector ID					
	Remote Code					
	LAN Interface					
	MAC Address					
	Network Status					
	DHCP					
	IP Address					
	Subnet Mask					
	Gateway					
	DNS					
	Crestron					
	Extron					
	PJ Link					
	AMX					
	Telnet					
	HTTP					
Signal	Input Signal					
	Resolution					
	Signal Format					
	Pixel Clock					
	Horz Refresh					
	Vert Refresh					
	Color Space					
	Picture Mode					
	Second Signal					
	Resolution					
	Signal Format					
	Pixel Clock					
	Horz Refresh					
	Vert Refresh					
	Color Space					

# USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Information	Backup Input	Current Signal				
		Backup Input Status				
		Backup Input Change				
		First Input				
		Resolution				
		Horz Refresh				
		Color Space				
		HDR				
Firmware Version		Main Version				
		I-SCALER Version				
		F-MCU Version				
		M-MCU Version				
		L-MCU Version				
		A-MCU Version				
		K-MCU Version				
		LAN Version				
		Formatter Version				
		FPGA0 Version				
		FPGA1 Version				
		FPGA2 Version				
		XFPGA Version				
		HDBaseT Version				
		Camera Version				

# USING THE PROJECTOR

## Image menu

Learn how to configure image settings.

### Submenus

- Picture Mode
- Dynamic Range
- Brightness
- Contrast
- Sharpness
- Gamma
- Dynamic Contrast
- Color Settings
- Wall Color
- 3D Setup

### Picture Mode

Picture Mode menu provides various functions to optimize the projected image to achieve the best image quality in all kinds of surroundings, in consideration of factors such as input source, screen color, and ambient lighting.

#### Presentation

Best for displaying presentation slides in a bright room.

#### Bright/Super Bright

Best for the installations requiring high brightness images.

**Note:** Super Bright is supported only by specific model. When AC input is 100-120V, the super bright mode option will be gray out.

#### Cinema

Best for videos projected in a dark room.

#### HDR

Best for displaying High Dynamic Range (HDR) content.

#### sRGB

Standardized image color that matches the sRGB color standard.

#### DICOM SIM.

Best for projecting monochrome medical images, such as X-ray diagram.

#### Blending

Best for multiple projector installations.

#### 3D

Best for playing 3D videos.

#### 2D High Speed

Display the status of 2D High Speed mode (This mode should not be used for medical diagnosis).

**Note:** If the resolution of the input source is 800 x 600 @120Hz, 1024 x 768 @120Hz, or 1280 x 720 @120Hz, then the display mode will automatically switch to 2D High Speed then the 3D mode, PIP/PBP modes are not supported.

# USING THE PROJECTOR

## User

Image settings saved by the user.

## Dynamic Range

Configure the HDR setting and its effect when displaying video from 4K Blu-ray players and streaming devices.

### HDR

Enable or disable HDR processing.

### HDR Picture Mode

- **Bright:** Select this mode for more saturated colors.
- **Standard:** Select this mode for natural looking images.
- **Film:** Select this mode for improved detail.
- **Detail:** Select this mode for more detail in dark scenes.

## Brightness

Adjust the luminous brightness of the projected image to adapt to different ambient light.

## Contrast

Adjust the contrast ratio of the projected image. The contrast controls the degree of difference between the lightest and darkest parts of the image.

## Sharpness

Adjust the clarity of details in the projected image to make the image clearer and sharper.

## Gamma

Select an appropriate gamma value to optimize the image conformance to different input sources.

### Film

Best for home theater setting.

### Graphics

Best for projecting photos from PC input.

### Standard (2.2)

Standard gamma value.

### Vivid

Best for playing games. In this mode, color saturation and brightness are well-balanced.

### 3D

Best for playing 3D videos.

### Blackboard

Best for projecting on to a blackboard.

### DICOM SIM.

Best for projecting monochrome medical images, such as X-ray diagram.

### 1.8 / 2.0 / 2.4 / 2.6

Select a preset gamma value to adjust the image performance. In general, the smaller the value, the brighter the dark areas of the image will become.

# USING THE PROJECTOR

## Dynamic Contrast

Set up Dynamic Contrast to maximize the contrast for dark content.

### Dynamic Black

Enable this function to automatically adjust the contrast ratio for video sources. It improves the black level in dark scenes by reducing the light output.

- **Speed:** Adjust the speed of the light source correction. The value ranges from 1 to 15. A lower value makes the correction slower and less aggressive while a higher value results in the faster correction.
- **Strength:** Set the strength of the dynamic contrast adjustment. The value ranges from 0 to 3, the higher the value the stronger the correction.
- **Level:** Adjust the light source when the brightness level of the current content gets lower than the set value. The value ranges from 50% to 100%. The higher the value, the larger the range to adjust the light source.


### Extreme Black

Enable this function to automatically increase the contrast ratio by turning off the laser light when black image is detected.

- **AV Mute Timer:** Set a timer for the laser light to turn off after detecting black content. The set value ranges from 0s to 10s.
- **Black Signal Level:** Set a black level value as the threshold for the Real Black function. The value can be adjusted from 0% to 5%, with 0 being the darkest black and 5 being the brightest.

## Color Settings

Configure the color settings of the projected image to improve the color performance.

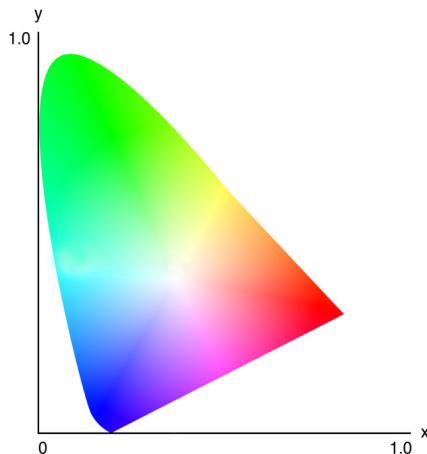

### Color

Adjust the saturation of the selected color. The value indicates the color shifts from or towards the white in the center of the chromaticity diagram.

### Tint

Adjust the color balance of red and green in video images.

### Color Temperature

Adjust the color temperature of the projected image. The available options are Warm, Standard, and Cool.

# USING THE PROJECTOR

## White Balance

Adjust the white balance of the projected image via gain and offset. Gain and offset are individual controls for each RGB channels used to set greyscale. The Gains calibrate the color of the dark parts and Bias calibrate the white parts.

- **Red / Green / Blue Gain:** Adjust the color of the image's bright areas.
- **Red / Green / Blue Offset:** Adjust the color of the image's dark areas.

## White Enhancement

Adjust the image color brightness while providing more vibrant colors, in increments from 0 to 10.

## Color Space

Select a color space that has been specifically tuned for the input signal. The available options are Auto, RGB (0~255), RGB (16~235), REC709, and REC601.

**Note:** *The Color Space function is grayed out if the Picture Mode is sRGB or without any source input.*

## Color Matching

Change the color of a projected image by adjusting each color component in the image. The adjustable color includes Red, Green, Blue, Cyan, Yellow, and Magenta (R / G / B / C / Y / M).

- **Auto Test Pattern:** Enable the function to view a specific color pattern while adjusting.
- **Red / Green / Blue / Cyan / Magenta / Yellow:** Select a color for further adjustment.
  - **Hue:** Adjust the hue of the selected color. The value reflects the number of degrees of rotation around the chromaticity diagram from the original color. Increasing value indicates counterclockwise rotation, and decreasing value, clockwise rotation.
  - **Saturation:** Adjust the saturation of the selected color. The value reflects the color shifts from or towards the white in the center of the chromaticity diagram.
  - **Luminance:** Adjust the luminance of the selected color. Increase the value to brighten the image (add white to a color) or decrease the value to darken the image (add black to a color).
- **White:** Adjust the white color performance via setting the Red, Green, and Blue values.
  - **Red / Green / Blue:** Adjust the red, green, and blue colors to optimize the white color performance.
- **Reset:** Reset the function settings to factory default values.

## Wall Color

Set the wall color of the projector to achieve best color performance for a specific wall. The available options are Off, Blackboard, Light Yellow, Light Green, Light Blue, Pink, and Gray.

## 3D Setup

3D video file combines two slightly different images (frames) of the same scene representing the different views that the left and right eyes see. When these frames are displayed fast enough and viewed with 3D glasses synchronized with the left and right frames, the viewer's brain then assemble the separate images into a single 3D image. 3D Menu provides options to set up the 3D functions to correctly display 3D videos.

### 3D Mode

Enable or disable the 3D function.

### 3D Format

Select a proper 3D format for the 3D input signal. The available options are Auto, Frame Packing, Side by Side, Top and Bottom, and Frame Sequential.

# USING THE PROJECTOR

## 3D Tech

Select a proper 3D technology according to how the 3D sync signal is processed.

- **DLP-Link:** Select DLP-Link when the 3D sync signal is generated by the DLP Link technology built into the projector. DLP Link works only with the glasses that are compatible with DLP 3D technology and the 3D function is enabled
- **3D Sync:** Select 3D Sync when the 3D sync out signal is sent to an emitter or another projector through the 3D sync out port.

## 3D-2D

Transform the 3D content to 2D images.

- **3D:** Play the 3D content normally.
- **L:** Play the left images of the 3D content.
- **R:** Play the right images of the 3D content.

## 3D Sync Out


Set up the transmission of the 3D sync output signal.

- **To Emitter:** Send the 3D sync signal to the emitter connected to the 3D sync out port.
- **To Next Projector:** Send the 3D sync signal to next projector when using multiple projectors.

## IR Control setup when using the 3D IR emitter

Infrared devices interfere with each other if placed in the same sensing angle. If you want to use the 3D IR emitter and the IR remote function, do any of the following:

- Place the 3D IR emitter outside the IR remote control sensing angle as shown below:

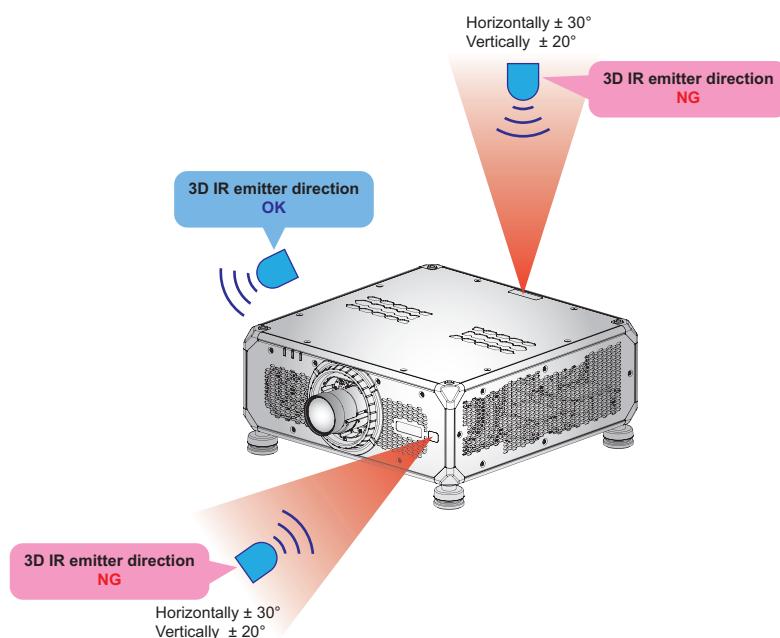


- Based on the room layout, disable either the front or the top remote receiver in the OSD menu > Communication > Remote Setup > IR Function menu to avoid the 3D IR emitter interference, yet allowing to use the IR remote control function.

# USING THE PROJECTOR

If neither of the two methods described above solved the problem, please use another 3D IR emitter/3D RF emitter or try any of the following two methods.

- Use a wired remote-in cable for the IR control.

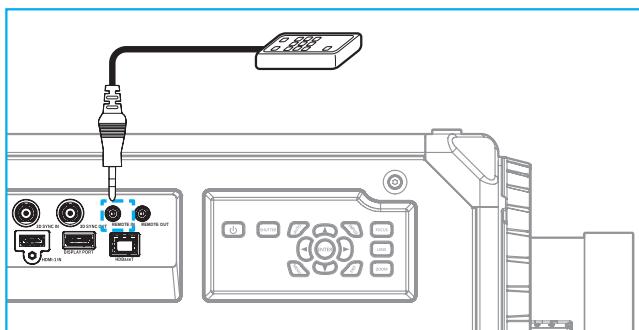

- Use the IR control via the HDBaseT device (not supplied).

**Note:** Disable the Front/Top remote receivers and enable the HDBaseT for IR control in the OSD menu > Communication > Remote Setup > IR Function.

## 3D Invert

When the 3D video does not appear correctly, use this function to invert the 3D left and right frames.

## Frame Delay

Set a frame delay value for the projector to correct the time difference between the 3D signal being given and the result being executed. This function works only when L/R Reference is set to Field GPIO. When performing 3D blending on multiple projectors, set the frame delay for each projector to correct the non-synchronous images.

## Reset

Reset the function settings to factory default values.

## **Save to User**

Save the image settings to the User mode.

## **Apply to User**

Apply the image settings to User-Presentation, User-Bright, User-Super Bright, User-Cinema, User-HDR, User sRGB, User-DICOM SIM., User-Blending, User-3D, or User-2D High Speed.

## **Reset**

Reset all 3D settings.

# USING THE PROJECTOR

## Display menu

Learn how to configure the settings to properly project images according to your installation circumstances.

### Submenus

- Aspect Ratio
- Digital Zoom
- Image Shift
- Geometric Correction
- Edge Mask
- Freeze Screen
- Test Pattern
- PIP/PBP

### Aspect Ratio

Set the aspect ratio of the projected image. The available options are Auto, 4:3, 16:9, 16:10, LBX, or Native. Select Auto to display the detected image size.

### Digital Zoom

Digitally adjust the size of the projected image.

**Note:** *Image projection on the screen depends on the signal source..*

#### Proportional

Enable the function to have the image's height and width changed at the same ratio.

#### Horizontal

Use the **◀** and **▶** buttons to change the width of the projected image.

#### Vertical

Use the **▲** and **▼** buttons to change the height of the projected image.

#### Horizontal Shift

Use the **◀** and **▶** buttons to horizontally shift the image.

#### Vertical Shift

Use the **▲** and **▼** buttons to vertically shift the image.

#### Reset

Reset digital zoom settings to factory default values.

### Image Shift

Adjust the projected image position.

**Note:** *Different signal sources have different range of image displacement.*

#### H. Position

Use the **◀** and **▶** buttons to adjust the projected image position horizontally.

#### V. Position

Use the **▲** and **▼** buttons to adjust the projected image position vertically.

#### Reset

Reset image shift settings to factory default values.

# USING THE PROJECTOR

## Geometric Correction

Configure the geometric settings to reshape the image for different projection surfaces.

### Warp Control


Configure warp settings. Select between Basic, Advanced, and AP.

- **Basic:** Configure keystone, pincushion, 4-corner settings.
- **Advanced:** Set the grid color and grid background, as well as configure warp and blend settings.
- **AP:** Use the warp and blend software tools to control the projector. When the software warp and blend control is enabled, the projector's built in geometry functions are disabled.


### Basic Warp

Configure basic warp settings.


- **Keystone:** Keystone function is used to adjust the images in asymmetric rectangle shape.
  - **Horizontal:** Adjust the left and right side of the projected image to make it an even rectangle. It is used for the images with unequal left and right sides.

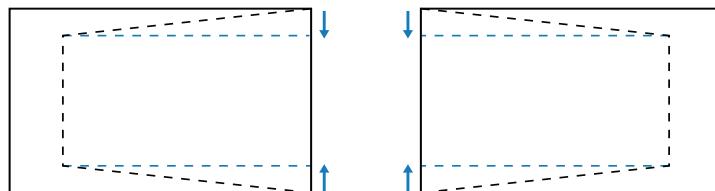


- **Vertical:** Adjust the top and bottom side of the projected image to make it an even rectangle. It is used for the images with unequal top and bottom sides.

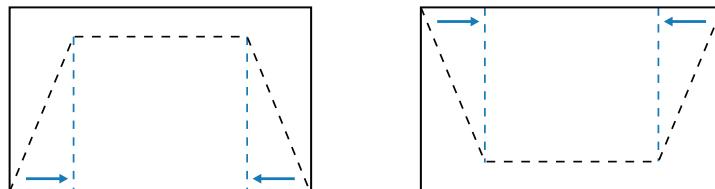

- **Pincushion:** Pincushion function is used to adjust the image with barrel or pincushion distortion.
  - **Horizontal:** Correct the projected image with horizontal barrel or pincushion distortion.

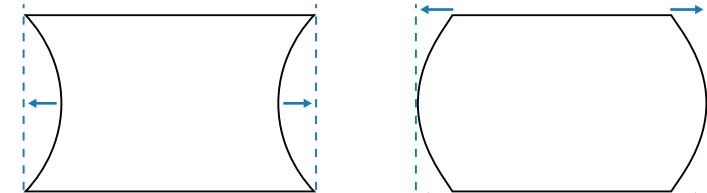


- **Vertical:** Correct the projected image with vertical barrel or pincushion distortion.

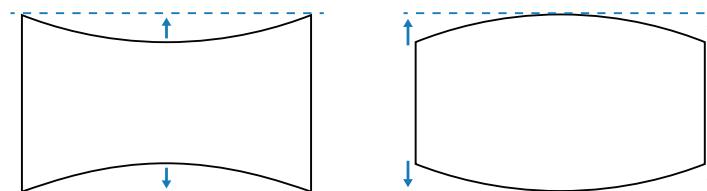

# USING THE PROJECTOR


- **4-Corner:** Reshape the image by moving the 4 corners of the image to have it fit a specific projection surface.

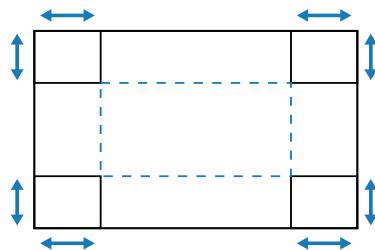

## Advanced Warp

Configure advanced warp settings.

- **Grid Color:** Select a grid color for warp and blend pattern between Green, Magenta, Red, and Cyan.
- **Grid Background:** Select the grid background between Black and Transparent.
- **Warp Setting:** Configure warp settings.
  - **Grid Point:** The grid number selection of warping control, 2x2 / 3x3 / 5x5 / 9x9 / 17x17.
  - **Warp Inner:** Turn on to adjust the inner grid, the function activates when exceeding 3x3 grid points.
  - **Warp Sharpness:** When the grid lines are warped from straight into curve, the grid lines will be distorted and become jagged. To avoid the line jagging, adjust the warp sharpness to blur or sharpen the edge of the images.
- **Blend Setting:** Configure the blend settings directly on the projector to merge two or more adjacent images into one larger and seamless image.
  - **Blend Width:** Set the blend pattern width.
  - **Overlap Grid Number:** Set adjustment scale of blend width, up to 12 pixels.
  - **Gamma:** Select the gamma value of the blend area to adjust the curvature of the blending effect.

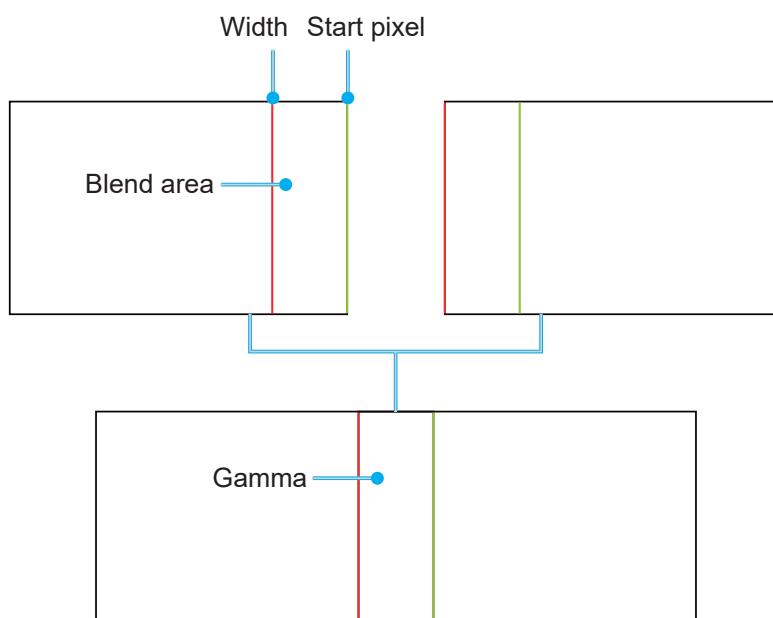

- **Black Level:** Manually adjust the black level of the projected image.
  - **Area:** Support two layers black level adjustment, top and bottom. Please avoid overlapping areas of the two layers, only top black level value displayed in overlapping area.
  - **Enable:** Enable or disable the black level adjustment in the selected area.

# USING THE PROJECTOR

- **Edit Area:** The area adjustment of black level. When entering the area adjustment view, user can press “INFO” button on remote control to get the hot key for add and remove points.
- **Add Point:** Add up to 32 area control points for black level adjustment.
- **Remove Point:** Remove at least 4 control points from the selected area.

#### **Note:**

- *Enter the Edit Area:*
  - a) *Use the “INPUT” hotkey of the remote control to enable or disable the Add Point function.*
  - b) *Use the “AUTO” hotkey of the remote control to enable or disable the Remove Point function.*
  - c) *Use the “INFO” hotkey of the remote control to show the Edit Area’s hotkey help dialog, and use “MENU” or “Exit” to hide help dialog.*
- *After adding or removing a control point, press **Enter** to move to the next point counterclockwise.*
- **Brightness:** Adjust Red / Green / Blue values of the selected black level area simultaneously, and show or hide the boundary grid.
- **Red/Green/Blue:** Adjust each color of selected black level area individually.
- **Reset:** Reset the black level to factory default values either on the Bottom or on the Top area or on both areas.

#### **Memory**

The projector allows the user to save up to five geometry memories, including the ones set directly on the projector and the ones configured via external software tools. The available options are Save Memory, Apply Memory, and Clear Memory.

#### **Reset**

Reset geometric settings to factory default values.

#### **Edge Mask**

The edge blending function allows you to hide one or multiple edges of the projected image. You can use this function to remove the video encoding noise on the edges of the video images.

#### **Freeze Screen**

Select to pause the display screen despite any change in the source device.

#### **Test Pattern**

Select a test pattern. The available options are Off, Green Grid, Magenta Grid, White Grid, White, Black, Red, Green, Blue, Yellow, Magenta, Cyan, ANSI Contrast 4x4, Color bar, and Full screen.

#### **PIP/PBP**

PIP/PBP (picture in picture/picture by picture) allows simultaneously displaying two images from two input sources.

#### **Screen**

Select the appropriate PIP/PBP mode or disable the function.

- **Off:** Disable PIP/PBP mode.
- **PIP:** Display one input source on the main screen and the other input source in an inset window.
- **PBP:** Display two images of the same size on the screen.

#### **Main Source**

Select an input source for the main image. The available input sources are VGA, HDMI1, HDMI2, DVI-D, DisplayPort, 3G-SDI, and HDBaseT.

# USING THE PROJECTOR

## Sub Source

Select an input source for the second image. The available input sources are VGA, HDMI1, HDMI2, DVI-D, DisplayPort, 3G-SDI, and HDBaseT.

## Swap

Swap the main source and sub source.

## Size

Change the display size of the sub source in PIP mode.







## Location

Adjust the location of the sub image. In the layout chart below, the "P" indicates the main image:

- **PBP Layout**

PBP Layout	
PBP, Main Left	PBP, Main Right
	

- **PIP Layout**

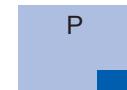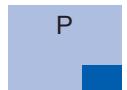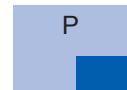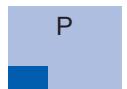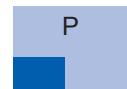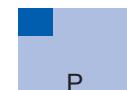PIP Layout	PIP Size		
	Small	Medium	Large
PIP, Bottom Right			
PIP, Bottom Left			
PIP, Top Left			
PIP, Top Right			

# USING THE PROJECTOR

**Note:** Refer to the table below for PIP/PBP compatibility.

## PIP/PBP Compatibility

PIP/PBP Matrix	VGA	DVI-D	HDMI-1	HDMI-2	3G-SDI	HDBaseT	DP
VGA	—	—	V	V	V	V	V
DVI-D	—	—	V	V	V	V	V
HDMI-1	V	V	—	V	V	V	V
HDMI-2	V	V	V	—	V	V	V
3G-SDI	V	V	V	V	—	V	V
HDBaseT	V	V	V	V	V	—	V
DP	V	V	V	V	V	V	—

## Reset

Reset all the display settings to factory default values.

# USING THE PROJECTOR

## Input Settings menu

Learn how to configure the projector input settings.

### Submenus

- Auto Source
- Active Inputs
- Latency Adjustment
- Backup Input
- VGA
- HDMI
- HDBaseT

### Auto Source

When Auto Source is enabled, the projector automatically detects and selects the input signal. Once an input source is selected, press the Input button on the remote control or keypad to switch to other available sources. When the function is disabled, pressing Input will bring up the Active Inputs submenu.

### Active Inputs

Select an input signal from the source list. The available input sources are VGA, HDMI1, HDMI2, DVI-D, DisplayPort, 3G-SDI, and HDBaseT.

### Latency Adjustment

Enable this feature to reduce response time.

**Note:** If the latency adjustment is set to 2D Ultra then the 3D mode, PIP modes, and 4K 30Hz resolution are not supported.

### Backup Input

Backup Input function allows the user to set up two input sources with the same timing specification. Upon loss of one input source, the projector automatically switches to the other source.

This function can be useful for the installations requiring uninterruptedly displaying the content source, such as live show, exhibition, and critical control room. The available input sources are HDMI1, HDMI2, DisplayPort, and HDBaseT.

### Auto Switch

Check the box to enable automatically switching to the backup input source when the current source fails.

### Current Signal

Displays the current active signal.

### First Input

Select a signal as the first input source. Once the selected source is activated, the OSD menu lists out the signal's Resolution, Horz Refresh (horizontal refresh rate), and Color Space.

### Second Input

Select a signal as the second input source. Once the selected source is activated, the OSD menu lists out the signal's Resolution, Horz Refresh (horizontal refresh rate), and Color Space.

# USING THE PROJECTOR

## Backup Input Status

Display the function status. The Backup Input Status is active when meeting the following conditions:

- Auto Switch is checked.
- The two sources are with the same timing specification.
- The two sources are active.
- Projector is displaying one of the two sources.

## Backup Input Change

Display the function change.

## Backup Input Info.

Display the function information, including Current Signal, Backup Input Status, Backup Input Change, First Input and its Resolution, Horz Refresh, Color Space, HDR, Second Input and its Resolution, Horz Refresh, Color Space, and HDR.

## VGA

Setup the VGA source by selecting the proper Phase and Resolution.

## HDMI

Setup the projector's HDMI ports.

### Output

Select a HDMI port to output the signal.

### HDMI 1 EDID/HDMI 2 EDID

When receiving a HDMI signal, set the projector's EDID compatibility to display the signal correctly. Select **1.4** for the input devices with HDMI 1.4, or **2.0** for HDMI 2.0 devices.

## HDBaseT

Configure the HDBaseT settings to correctly display the HDMI signal transferred via the HDBaseT port.

### EDID

When receiving a HDMI signal via HDBaseT, set the projector's EDID compatibility to display the signal correctly. Select **1.4** for the input devices with HDMI 1.4, or **2.0** for HDMI 2.0 devices.

## Reset

Reset all the input settings to factory default values.

# USING THE PROJECTOR

## Device Setup menu

Learn how to configure the system settings for the projector.

### Submenus

- Language
- Projection
- Lens Settings
- Active Image Setup
- Schedule
- Date and Time
- Power Settings
- Light Source Settings
- Shutter
- Security
- On Screen Display
- Logo Setup
- Backlight
- High Altitude
- User Data
- System Update

### Language

Select a language for the OSD menu. The available languages are English, German, French, Italian, Spanish, Portuguese, Polish, Dutch, Norwegian, Traditional Chinese, Simplified Chinese, Japanese, Korean, Russian, Hungarian, and Thai.

### Projection

Change the image direction by selecting a proper projection mode.

#### Ceiling

Enable the function for ceiling mount installation.

#### Rear

Check the function for rear projection.

### Lens Settings

Configure the lens settings to adjust the image quality and position.

#### Focus

Use the ▲ and ▼ buttons to adjust the focus of the projected image.

#### Zoom

Use the + and - buttons to adjust the size of the projected image.


#### Lens Shift

Use the ▲ ▼ ◀ ▶ buttons to adjust the lens position to shift the projected area.

# USING THE PROJECTOR

## Note: BX-CTA11 floating ring

- For better optical performance, manually adjust the floating ring before adjusting Zoom & Focus.
- Floating ring's label scale shows the projection distance.
- The projection distance is from the projector lens to the screen. For example, if the distance between the screen and the projector lens is 2.1m, adjust the floating ring scale to "2.10" for better performance.

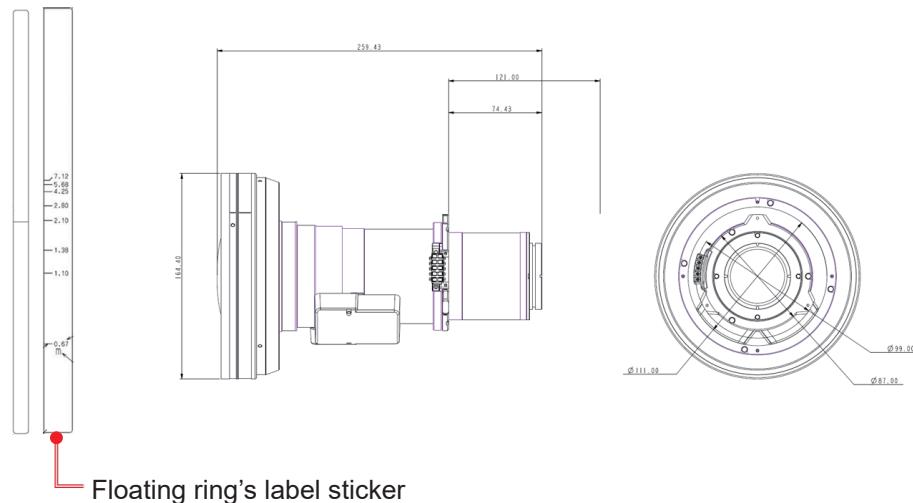

## Lens Memory

This projector can save up to five lens settings, which records the lens position, zoom and focus. To record correct data, please perform lens calibration at first time processing lens memory.

- **Save Memory:** Select a record from 1 to 5 to save the current lens settings.
- **Apply Memory:** Select a record from 1 to 5 to apply the lens settings.
- **Clear Memory:** Clear the saved lens records.

### Note:

- Performing a lens calibration will clear the saved lens records.
- The BX-CTA18 and BX-CTA19 lens do not support saving Zoom and Focus locations.
- The BX-CTA22 and BX-CTA23 lens restrains Zoom and Focus functions that may result in synchronization inaccuracy.

## Lens Calibration

Calibrate the lens position to return it to the center. To prevent damage to the projector and the lens, always perform lens calibration before replacing the lens.

## Lens Lock

Lock the lens to prevent the lens motors from moving, which disables all lens functions.

## Reset

Reset the lens settings to factory default values.

## Active Image Setup

Automatically adjust the image to achieve better performance.

- **Active Focus:** Automatically adjust the image focus.

### Note:

- Before adjusting the Active Focus, make sure the boresight has been adjusted to the best position.
- When the remote control performs focus adjustment, pressing the **Enter** key can also trigger the Active Focus function.

# USING THE PROJECTOR


- The BX-CTA22 and BX-CTA23 lens restrains Zoom and Focus functions that may result in synchronization inaccuracy.
- **Active Color Uniformity:** Automatically adjust the RGB gain of projection image to approximate the color of target area for a uniform color display. The brightness of the original content may be decreased.
  - **Calibration:** Perform the calibration process. If the RGB gain adjustment of projection area is too much difference, the color will not be projected correctly.
  - **Target Selection:** Select the target area for calibration. The default area is the center of the content. Press **Enter** to return to the OSD menu after the selection is completed.
  - **Reset:** Clear the calibration result.

## Note:

- *The Active Image Setup functions are performed via the built-in camera. Please make sure the camera is not covered or blocked by any objects. The auto adjustment process might take more than one minute to complete.*
- *The functions in the Active Image Setup menu are available for the projections from 120" to 300" and imaging range needs to cover the entire projection screen. It is recommended to use the Optoma Visual Suite software for seamless setups and calibration.*
- *It is recommended that calibration be performed in a dark environment to avoid other lighting effects and for better performance.*
- *The BX-CTA11 has limited support on ACU in the mechanical shift range, but full support in optical lens shift range.*

## Schedule

Schedule the projector functions to operate automatically at the set time.

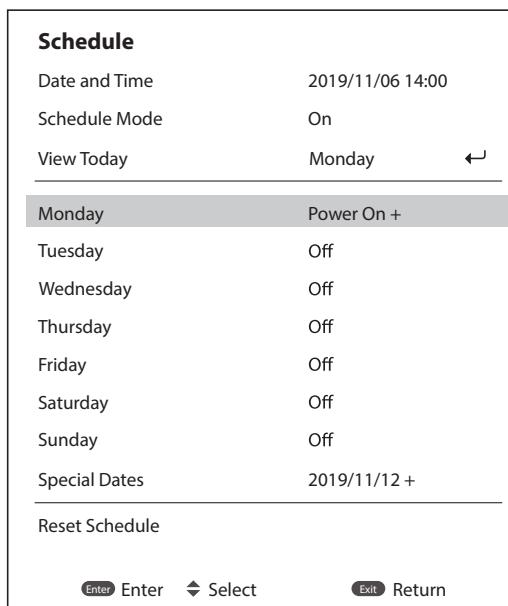

### Date and Time

Before setting a schedule, setup the date and time settings. Refer to “Date and Time” on page 65.

### Schedule Mode

Enable or disable the schedule function. If the projector is controlled via external devices or software, the Schedule Mode displays AP Mode, and the projector’s schedule functions are grayed out.

### View Today


View the event list scheduled for today.

**Note:** After the schedule is set up, make sure to save all the settings.


# USING THE PROJECTOR

## Monday to Sunday

Set up the schedule for days of a week. On the Schedule menu page, select a day and configure the schedule settings.

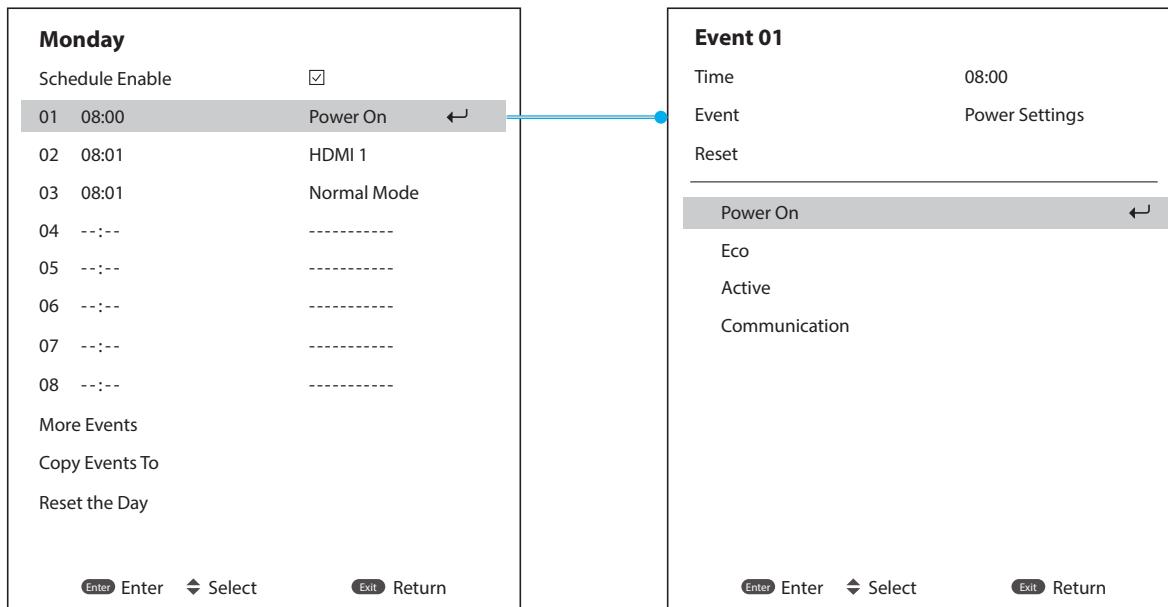


- **Schedule Enable:** Enable or disable the schedule function for the selected day.
- **Event 01-16:** Select an event record number, and set up the schedule details.
  - **Time:** Set the time for the event.
  - **Function:** Select the function. The available functions are Power Settings, Input Source, Light Source Mode, and Shutter
  - Note:** If the Power Setting is set to Eco or Active, then the projector cannot boot up again.
  - **Event:** Select a function for the event, which operates automatically at the set time.
  - **Reset:** Reset the event settings.

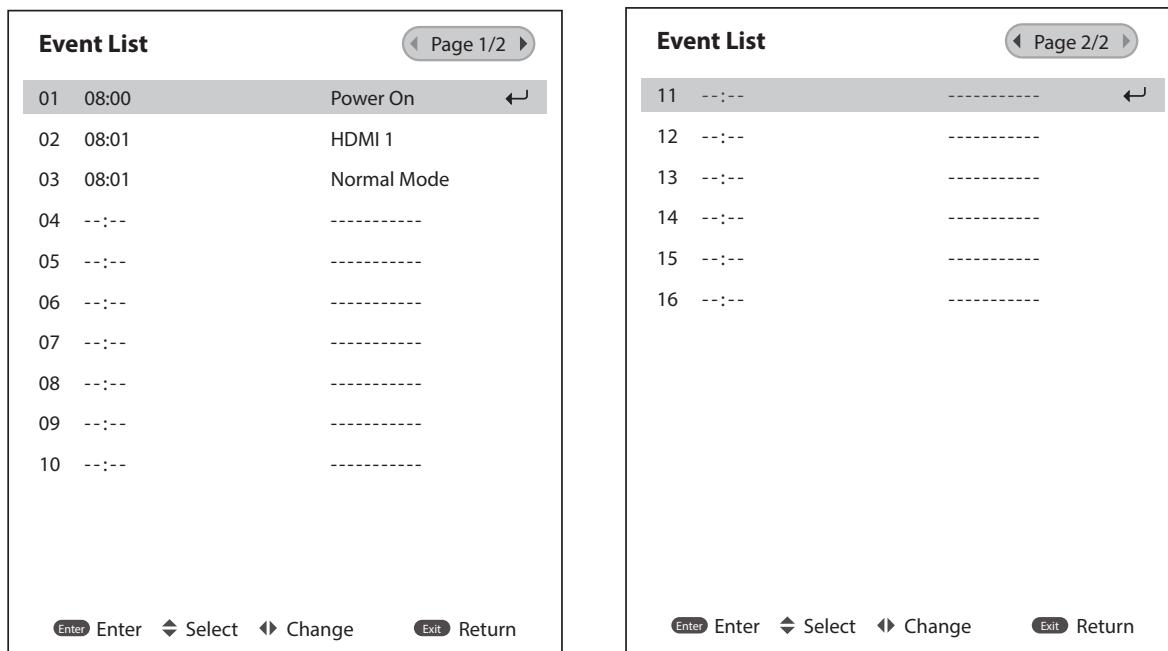

# USING THE PROJECTOR

- **Copy Events To:** Copy the events setup for the day to another day.

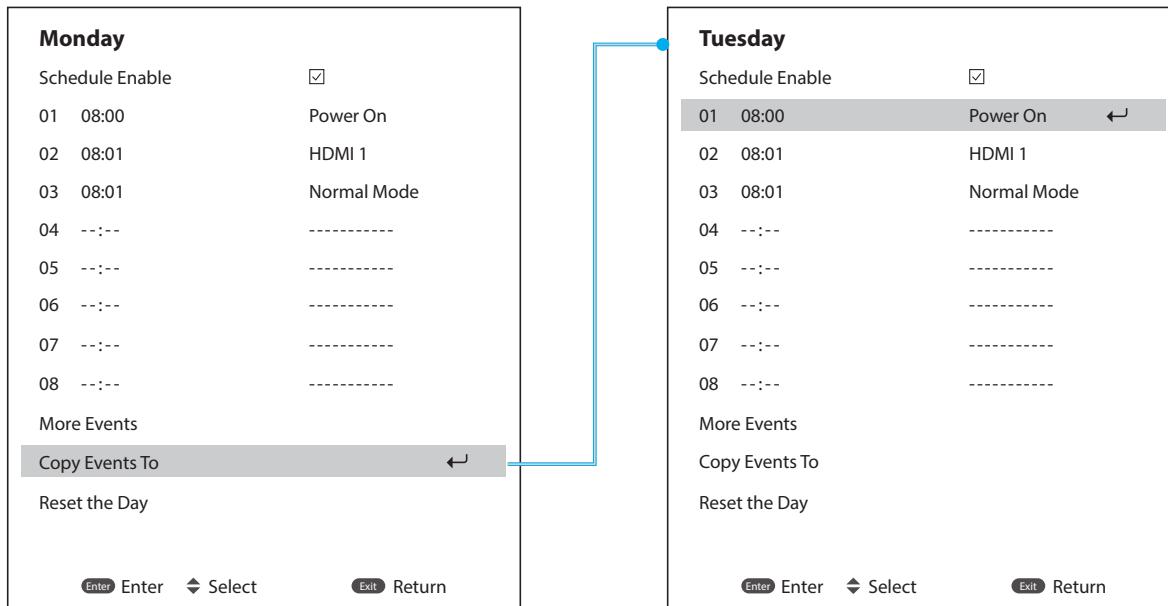

- **Reset the Day:** Reset the schedule settings for the day.

## Reset Schedule

Reset all of the schedule settings.

## Date and Time

Set up the projector's date and time.

### Clock Mode

Set the clock mode to NTP Server or Manual.

**Note:** To use NTP Server, make sure the projector is connected to the Internet.

### Date

Set a date for the projector. The date format is in Year/Month/Date.

### Time

Set the time for the projector.

### Daylight Saving Time

Enable or disable the daylight savings function.

### NTP Server

Select a NTP Server for the network clock mode.

### Time Zone

Set a time zone for the network clock mode.

### Update Interval

Set the date and time update interval.

### Apply

Apply date and time modifications.

# USING THE PROJECTOR

## Power Settings

Configure the projector's power settings.

### Power Mode (Standby)

Setup the projector's standby mode.

- **Eco:** Minimum power consumption (< 0.5 Watt) which does not allow network control.
- **Active:** Low power consumption (< 2 Watt) which allows the LAN module to enter sleep mode and supports to be woken by Wake on LAN (WoL). When the LAN module is woken by WoL, the projector is ready to receive commands over the network.
- **Communication:** More power consumption that allows controlling the projector over the network.

### Signal Power On

Turn on this function to have the projector automatically turning on when connected to HDMI input sources. It only applies to the standby projector set to Communication mode.

### Auto Power Off

Set an interval timer for the projector to automatically turn off if no signal is detected within the specified time period. Press the **◀** and **▶** buttons to add or reduce time, 5 minutes for each press.


### Sleep Timer

Set an interval timer for the projector to automatically turn off after operating for the specified amount of time.

### 12V Trigger

When enabled, the projector screen is automatically raised or lowered when the projector is turned on or off. This function only works when the projector is connected to an electrical projector screen.

**Note:** 3.5mm mini jack that outputs 12V 500mA (max.) for relay system control.

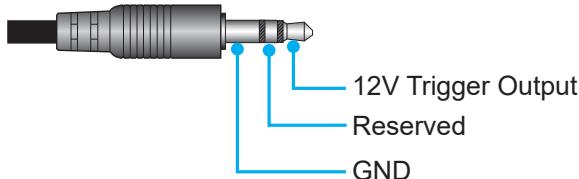

- **On:** Choose "On" to enable the trigger.
- **Off:** Choose "Off" to disable the trigger.

### Reset

Reset the power settings to factory default values.

## Light Source Settings

Set up the light source to control the projector brightness.

### Light Source Mode

Select a light source mode depending on the installation requirements. The available options are Normal, Eco Mode, and Custom Power.

### Custom Brightness

When the Light Source Mode is set to Custom Mode, set up the custom brightness level.

Set up the Constant Brightness to maintain the image brightness at a specified level. A special algorithm is designed to compensate for the natural decay of brightness so that the image can be maintained at a fixed brightness level.

- **Brightness Level:** Adjust the brightness level from 30% to 100%.
- **Constant Brightness:** Enable to maintain the image brightness at the set brightness level. A special algorithm is designed to compensate for the natural decay of brightness so that the image can be maintained at a fixed brightness level.

# USING THE PROJECTOR

## Shutter

Set up the shutter behavior.

### Fade-In

This function allows the fading-in effect when turning off the shutter. The length of the fading effect can be adjusted from 0s to 5s.

### Fade-Out

This function allows the fading-out effect when turning on the shutter. The length of the fading effect can be adjusted from 0s to 5s.

### Startup

Select the shutter behavior when turning on the projector.

- **Shutter Off:** Projector projects images normally after being powered on.
- **Shutter On:** Projector automatically turns on shutter after being powered on.

## Security

Set up security verification to protect the projector.

### Security

Select On to protect the projector with a password.

#### **Note:**

1. *For the first time use security function, please enter a password when security function turned on.*
2. *Non first time use security function, please enter previous password to verify when security function turned on again.*

### Security Timer

Specify the length of time the projector can be used without the password. Once the timer counts to 0, the user must enter a password to use the projector. The timer restarts every time the projector is turned on.

### Change Password

Change the projector password.

**Note:** *In the last minute before reaching a specified timer, including Auto Power Off, Sleep Timer, and Security Timer, an on-screen message will pop up warning that the projector shuts down in 60 seconds. Press any button on the remote control or projector keypad to reset the timer and the projector remains on.*

## On Screen Display

Set up the on screen display menus.

### Menu Location

Select the menu location from Top Left, Top Right, Center, Bottom Left, and Bottom Right.

### Menu Transparency

Set the menu transparency level.

### Menu Timer

Set the length of time the menu displays on the screen.

### Information Hide

Enable or disable the corner information messages, such as input source, IP address, and so on.

### Background

Set a background color to display when no input signal is detected. The available options are Blue, Black, White, and Logo.

# USING THE PROJECTOR

## Logo Setup

Set up the logo for the startup screen.

### Change Logo

Change the logo for the startup screen. Apart from the Default logo, user can select from Neutral, User Logo, and Captured Logo.

- **Default:** The projector default logo.
- **Neutral:** The logo is not displayed on the startup screen.
- **User Logo:** User customized logo.
- **Captured Logo:** The logo saved via the Logo Capture function.

**Note:** The supported logo format is PNG and size is 1920 x 1200 pixels.

### Logo Capture

Capture part of the projected image and save it as a customized logo.

### Delete Logo

Delete the saved customized logo, including the Captured Logo and User Logo.

## Backlight

Set up the projector backlight options.

### Keypad

Enable or disable the keypad backlight.

### Power Key

Enable or disable the backlight for the power key.

## High Altitude

Select On to increase the fan speed. To ensure the image quality and prevent damage to the projector, enable High Altitude mode in high temperature, high humidity, or high altitude environment.

## User Data

User can save the projector settings as user data and reload the settings later.

- **Save all settings:** Save all of the projector settings as user data. User can save up to 5 records.
- **Load all settings:** Load the previously saved user data.

## System Update (FOTA)

Update the system automatically or manually.

- **Auto:** System checks for new updates automatically every time it is connected to the Internet.
- **Auto Download:** System will download the firmware upgrade file in the background and starts the upgrade process when you power off the projector. When the upgrade is done, the projector will power off.
- **Update:** Manually update the system firmware.

## Reset

Reset the settings to factory default values.

- **Reset OSD:** Reset OSD settings to default values.
- **Reset to Default:** Reset all projector settings to default values.
- **Reset Selective:** Reset the settings of one of the main menus. User can choose from Image, Display, Advanced, Input, Communication, and Setup.

# USING THE PROJECTOR

## Communication menu

Communication menu is used to configure the settings that allow the projector to communicate with other projectors or control devices.

### Submenus

- Projector ID
- Remote Setup
- Network Setup
- Email Notification
- Control
- Baud Rate

### Supplemental information

- Using the web control panel
- Using RS232 command by Telnet

## Projector ID

Assign an ID code for the projector from 00 to 99. Use this code as the projector ID when controlling the projector by RS232, HDBaseT, Telnet or other control methods.

## Remote Setup

Configure the settings of the Infra-Red (IR) remote control.

### Remote Code

Press and hold the remote control ID key. When all the key lights turn on, press the number key 00-99 to assign a number. When all key lights flash rapidly twice, the remote control code has been changed. At this time, release the remote control ID key.

### Quick Switch Code

The IR receiving function of the projector can be temporarily deactivated by hot key(0~9) to avoid the IR interference between projectors. The remote ID needs to be set to **All**.

**Note:** When hotkey is on, the default functions are inactive temporarily.

### IR Function

Set the remote receiver for the projector to control the communication between the projector and the IR remote.

- **Front:** Enable or disable the front remote receiver.
- **Top:** Enable or disable the top remote receiver.
- **HDBaseT:** Select On to set the HDBaseT terminal as the remote receiver.

### User 1 / User 2

Assign a function to the User 1 and User 2 buttons on the remote control. It allows you to use the function easily without going through the OSD menus. The available functions are Freeze Screen, Blank Screen, PIP/PIP+, Aspect Ratio, Information Hide, Network Setup, Projector ID, Color Matching, and Reset Selective.

# USING THE PROJECTOR

## Network Setup

Configure the projector's network settings.

### LAN Interface

To avoid clash, specify the LAN interface to RJ-45 or HDBaseT.

### MAC Address

Display the MAC address. (Read only)

### Network Status

Display the network connection status. (Read only)

### DHCP

Turn on DHCP to automatically acquire IP address, subnet mask, gateway, and DNS.

### IP Address

Assign the projector's IP address.

### Subnet Mask

Assign the projector's subnet mask.

### Gateway

Assign the projector's gateway.

### DNS

Assign the projector's DNS.

### Apply

Apply the wired network settings.

### Network Reset

Reset the network settings to default factory values.

## Email Notification

Set up email notifications for some events, which allows them to be received as early alerts via emails.

## Control

This projector can be controlled remotely by a computer or other external devices through wireless or wired network connection. It allows the user to control one or more projectors from a remote control center, such as powering the projector on or off, and adjusting the image brightness or contrast.

Use the Control submenu to select a control device for the projector.

### Crestron

Control the projector with Crestron controller and related software. (Port: 41794)

For more information, please visit <http://www.crestron.com>.

- **Crestron Setup:** Setup the Crestron IP Address, IPID, and Port. Then select **Crestron Setup Apply** to save the modifications.

### PJ Link

Control the projector with PJLink v2.0 commands. (Port: 4352)

For more information, please visit <http://pjlink.jbmia.or.jp/english>.

- **PJ Link Service:** Setup the address for the PJ Link service and the related settings. Then select **PJ Link Setup Apply** to save the modifications.

### Extron

Control the projector with Extron devices. (Port: 2023)

For more information, please visit <http://www.extron.com>.

# USING THE PROJECTOR

## AMX

Control the projector with AMX devices. (Port: 9131)

For more information, please visit <http://www.amx.com>.

## Telnet

Control the projector using RS232 commands through Telnet connection. (Port: 23)

For more information, refer to “Using RS232 command by Telnet” on page 74.

## HTTP

Control the projector with web browser. (Port: 80)

For more information, refer to “Using the web control panel” on page 72.


## Optoma Management Suite (OMS)

Control the projector with OMS.

For more information, please visit <https://www.optoma.com>.

## Reset

Reset the control functions to default factory values.

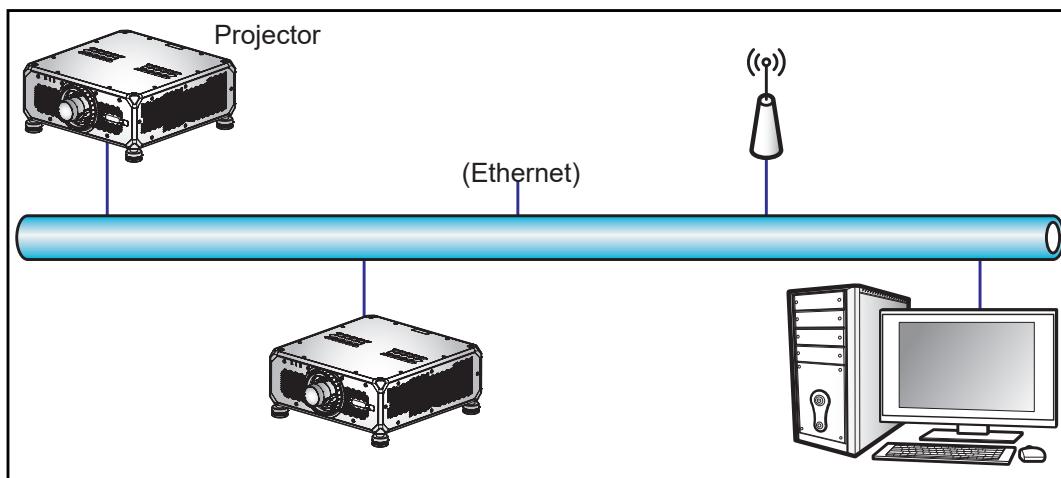

### **Note:**

- Crestron is a registered trademark of Crestron Electronics, Inc. of the United States.
- Extron is a registered trademark of Extron Electronics, Inc. of the United States.
- AMX is a registered trademark of AMX LLC of the United States.
- PJLink applied for trademark and logo registration in Japan, the United States of America, and other countries by JBMIA.
- For more information about the various types of external devices which can be connected to the LAN / RJ45 port and remotely control the projector, as well as the supported commands for these external devices, please contact the Support-Service directly.

## **Baud Rate**

Set the baud rate for Serial Port In and Serial Port Out. The available options are 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200.

## Reset

Reset all network settings to default factory values.

# USING THE PROJECTOR

## Using the web control panel

The Web control panel allows the user to configure various projector settings using a web browser from any personal computer or mobile devices.


### System Requirements

To use the web control panel, make sure your devices and software meet the minimum system requirements.

- RJ45 cable (CAT-5e) or wireless dongle
- PC, laptop, mobile phone, or tablet installed with a web browser
- Compatible web browsers:
  - Microsoft Edge 40 or higher version
  - Firefox 57 or higher version
  - Chrome 63 or higher version

### Overview of the web control panel

Configure the projector settings using web browser.

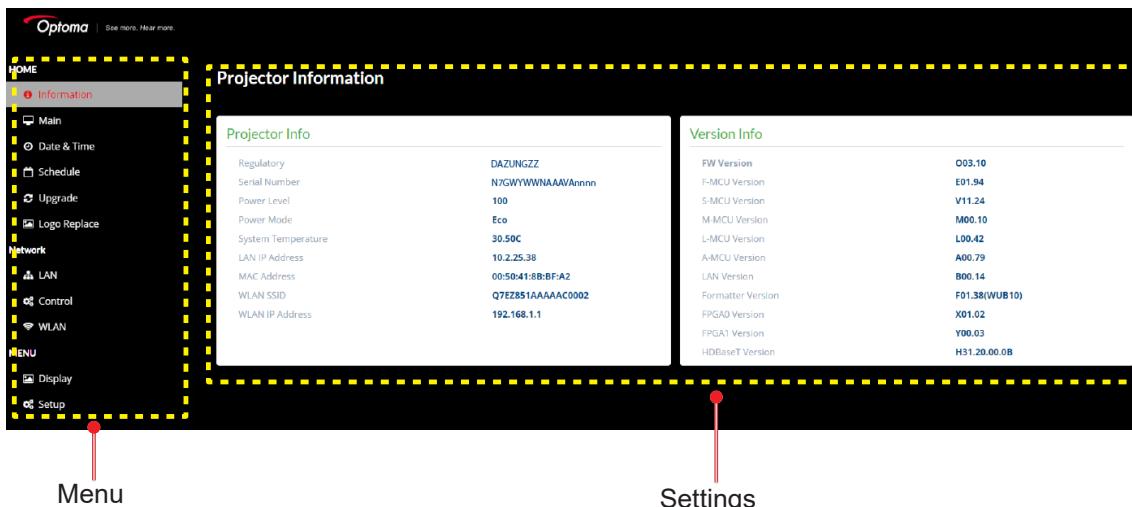

Menu	Description
<b>HOME</b>	View the projector information and firmware version details.
<b>IMAGE</b>	To configure image settings.
<b>DISPLAY</b>	To configure the settings to properly project images according to your installation circumstances.
<b>INPUT SETTINGS</b>	To configure the projector input settings.
<b>DEVICE SETUP</b>	To configure the system settings for the projector.
<b>COMMUNICATION</b>	Communication menu is used to configure the settings that allow the projector to communicate with other projectors or control devices.
<b>INFORMATION</b>	View the projector information about its status and settings. The projector information is read only.

# USING THE PROJECTOR

## Accessing the web control panel

When network is available, connect the projector and the computer to the same network. Use the projector address as the web URL to open the web control panel in a browser.

1. Check the projector address using the OSD menu.
  - On a wired network, select **Communication > Network Setup > IP Address**.  
**Note:** Make sure DHCP is enabled.
  - On a wireless network, select **Communication > Network Setup > Gateway**.
2. Open a web browser and type the projector address in the address bar.
3. The web page redirects to the web control panel.
4. In the Username field, type the username: admin (first time login).


### **Note:**

- When logging in for the first time, you don't need to enter a password.
- It is needed to change the username and password once you have logged in. It is also advised to use a strong password.

When network is not available, refer to "Directly connect the projector to a computer" on page 73.

## Directly connect the projector to a computer

When network is not available, connect the projector to the computer directly using a RJ-45 cable, and configure the network settings manually.

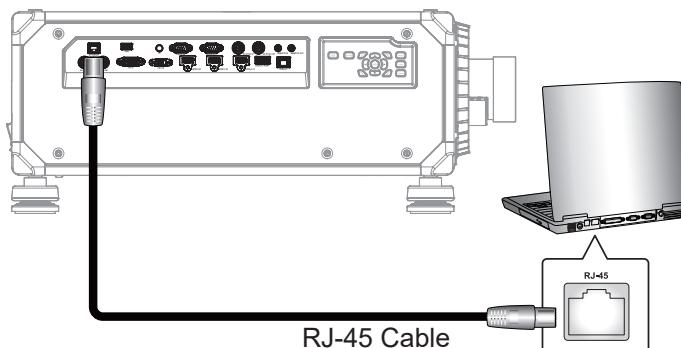

1. Assign IP address to the projector
  - From the OSD menu, select **Network > LAN**.
  - Turn off DHCP, and manually set the projector's IP Address, Subnet Mask, and Gateway.
  - Press **Enter** to confirm the settings.
2. Assign IP address to the computer
  - Set the Default Gateway and Subnet Mask of the computer to match the projector.
  - Set the IP address of the computer to match the first three numbers of the projector.  
For example, if the projector IP address is 192.168.000.100, set the computer IP address to 192.168.000.xxx, where xxx is not 100.
3. Open a web browser and type the projector address in the address bar.
4. The web page redirects to the web control panel.

# USING THE PROJECTOR

## Using RS232 command by Telnet

This projector supports using RS232 commands through Telnet connection.

1. Set up a direct connection between the projector and computer. Refer to *Directly connect the projector to a computer* on page 73.
2. Disable the firewall on the computer.
3. Open the command dialogue on the computer. For Windows 7 operating system, select **Start > All Programs > Accessories > Command Prompt**.
4. Input the command “telnet ttt.xxx.yyy.zzz 23”.  
Replace “ttt.xxx.yyy.zzz” with the projector IP address.
5. Press **Enter** on the computer keyboard.

## Specification for RS232 by Telnet

- Telnet: TCP
- Telnet port: 23 (contact service team for more details)
- Telnet utility: Windows “TELNET.exe” (console mode).
- Disconnection for RS232-by-Telnet control normally: Close
- Below are the limitations for using Windows Telnet utility directly after TELNET connection is ready:
  - There is less than 50 bytes for successive network payload for Telnet-Control application.
  - There is less than 26 bytes for one complete RS232 command for Telnet-Control.
  - Minimum delay for next RS232 command must be more than 200 (ms).Information menu.

## Info menu

View the projector information about its status and settings. The projector information is read only.

### Submenus

- Device
- System Status
- Communication
- Signal
- Backup Input
- Firmware Version

# ADDITIONAL INFORMATION

## Compatible resolutions

Timing table

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	VGA	
						RGB	YPbPr
PC	VGA	640 x 350	1.33	16:10	85	V	NA
		640 x 400			85	NA	NA
		640 x 480		4:3	60	NA	NA
		720 x 400	1.8	9:5	72	V	NA
		800 x 600			75	V	NA
		832 x 624	1.33	4:3	85	V	NA
		848 x 480			120	NA	NA
	XGA	1024 x 768	1.33	4:3	75	V	NA
		1152 x 864			60	NA	NA
		1152 x 870			70	V	NA
		1280 x 768			75	V	NA
		1280 x 800			85	V	NA
Projector	SXGA	1280x960	1.33	4:3	120	NA	NA
		1280 x 1024			75	V	NA
		1360 x 765	1.78	16:9	75	V	NA
		1360 x 768			85	V	NA
	WXGA	1366 x 768			60	NA	NA
		1400 x 1050	1.33	4:3	60	NA	NA
		1440 x 900	1.6	16:10	60	V	NA
	WXGA+	1600 x 900	1.78		75	V	NA
		1600 x 1200	1.33		85	NA	NA
	WSXGA+	1680 x 1050	1.6	16:10	60	NA	NA

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	VGA	
						RGB	YPbPr
PC	WUXGA RB	1920 x 1200RB	1.6	16:10	50	V	NA
					60	NA	NA
	2K	2560 x 1440RB	1.78	16:9	60	NA	NA
TV	SDTV (480i)	720 x 480	1.5	3:2	59.94	V	NA
	SDTV (480i)	720 x 480	1.5	3:2	60	V	NA
	SDTV (576i)	720 x 576	1.25	5:4	50	V	NA
	EDTV (480p)	720 x 480	1.5	3:2	59.94	V	NA
	EDTV (480p)	720 x 480	1.5	3:2	60	V	NA
	EDTV (576p)	720 x 576	1.25	5:4	50	V	NA
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	V	NA
					59.94	V	NA
					60	V	NA
	HDTV (720p)	1280 x 720	1.78	16:9	50	V	NA
					59.94	V	NA
					60	V	NA
					120	NA	NA
	HDTV (1080p)	1920 x 1080	1.78	16:9	23.98	V	NA
					24	V	NA
					25	V	NA
					29.97	V	NA
					30	V	NA
					50	NA	NA
					59.94	NA	NA
					60	NA	NA
SD-SDI	SDTV (480i)	720 x 480	1.5	3:2	59.94	NA	NA
	SDTV (576i)	720 x 576	1.25	5:4	50	NA	NA
HD-SDI	HDTV (720p)	1280 x 720	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
	HDTV (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA
					24	NA	NA
					25	NA	NA
					29.97	NA	NA
					30	NA	NA
3GA-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	25	NA	NA
					29.97	NA	NA
					30	NA	NA
3GB-SDI	HDTV (1080p)	1920x1080with 352M Payload ID	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
Mandatory 3D	Frame Packing (1080p)	1920 x 1080	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
					23.98	NA	NA
					24	NA	NA

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	VGA	
						RGB	YPbPr
Mandatory 3D	Frame Packing (720p)	1280 x 720	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
	Side by Side (1080i)	1920 x 1080	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
	Side by Side (1080p)	1920 x 1080	1.78	16:9	24	NA	NA
					50	NA	NA
					59.9	NA	NA
					60	NA	NA
	Top and Bottom (720p)	1280 x 720	1.78	16:9	50	NA	NA
					59.94	NA	NA
					60	NA	NA
Frame Sequential 3D	HDTV	1280 x 720	1.78	16:9	23.98	NA	NA
					24	NA	NA
					59.9	NA	NA
					60	NA	NA
	1080p	1920 x 1080	1.78	16:9	120	NA	NA
					60	NA	NA
					50	NA	NA
					120	NA	NA
	WUXGA	1920 x 1200	1.6	16:10	120	NA	NA
					60	NA	NA
4K	3840 x 2160	3840 x 2160	1.78	16:9	24	NA	NA
					25	NA	NA
					30	NA	NA
					50	NA	NA
					60	NA	NA
	4096 x 2160 SMPTE	4096 x 2160	1.9	N/A	24	NA	NA
					25	NA	NA
					30	NA	NA
					50	NA	NA
					60	NA	NA

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	HDMI 1/HDMI 2							
						RGB			YCbCr 4:4:4			YCbCr 4:2:2	
			8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	VGA	640 x 350	16:10	85	V	V	V	V	V	V	V	V	
		640 x 400		85	V	V	V	V	V	V	V	V	
		640 x 480	4:3	60	V	V	V	V	V	V	V	V	
				72	V	V	V	V	V	V	V	V	
				75	V	V	V	V	V	V	V	V	
				85	V	V	V	V	V	V	V	V	
		720 x 400	1.8	9:5	70	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
	SVGA	800 x 600	1.33	4:3	60	V	V	V	V	V	V	V	V
					72	V	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
					120	V	V	V	V	V	V	V	V
		832 x 624	1.33	4:3	75	V	V	V	V	V	V	V	V
		848 x 480			60	V	V	V	V	V	V	V	V
	XGA	1024 x 768	1.33	4:3	60	V	V	V	V	V	V	V	V
					70	V	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
					120	V	V	V	V	V	V	V	V
	SXGA	1152 x 864	1.33	4:3	75	V	V	V	V	V	V	V	V
		1152 x 870	1.32		75	V	V	V	V	V	V	V	V
	WXGA	1280 x 768	1.67	5:3	60	V	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
	WXGA	1280 x 800	1.6	16:10	60	V	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
	SXGA	1280x960	1.33	4:3	60	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
		1280 x 1024	1.25	5:4	60	V	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V	V
	WXGA	1360 x 765	1.78	16:9	60	V	NA	NA	V	NA	NA	NA	NA
		1360 x 768			60	V	V	V	V	V	V	V	V
		1366 x 768			60	V	V	V	V	V	V	V	NA
	SXGA+	1400 x 1050	1.33	4:3	60	V	V	V	V	V	V	V	V
	WXGA+	1440 x 900	1.6	16:10	60	V	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V	V
	WXGA++	1600 x 900	1.78	16:9	60	V	V	V	V	V	V	V	V
	UXGA	1600 x 1200	1.33	4:3	50	V	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V	V
	WSXGA+	1680 x 1050	1.6	16:10	60	V	V	V	V	V	V	V	V
	WUXGA RB	1920 x 1200RB	1.6	16:10	50	V	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V	V

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	HDMI 1/HDMI 2							
						RGB			YCbCr 4:4:4			YCbCr 4:2:2	
			8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	2K	2560 x 1440RB	1.78	16:9	60	V	V	V	V	V	V	V	
TV	SDTV (480i)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	V	
	SDTV (480i)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	V	
	SDTV (576i)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	V	
	EDTV (576p)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	V	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	V	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	V	
					60	V	V	V	V	V	V	V	
	HDTV (720p)	1280 x 720	1.78	16:9	50	V	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	V	
					60	V	V	V	V	V	V	V	
					120	V	V	V	V	V	V	V	
HD-SDI	SDTV (480i)	720 x 480	1.5	3:2	59.94	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
	SDTV (576i)	720 x 576	1.25	5:4	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
	HDTV (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
3GA-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080p)	1920 x 1080	1.78	16:9	29.97	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080sF)	1920 x 1080	1.78	16:9	59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
3GB-SDI	HDTV (1080p)	1920x1080 with 352M Payload ID	1.78	16:9	29.97	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
	Frame Packing (1080p)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
Mandatory 3D	Frame Packing (1080p)	1920 x 1080	1.78	16:9	60	NA	NA	NA	NA	NA	NA	NA	
					23.98	V	V	V	V	V	V	V	
					24	V	V	V	V	V	V	V	

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	HDMI 1/HDMI 2						
						RGB			YCbCr 4:4:4			YCbCr 4:2:2
						8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit
Mandatory 3D	Frame Packing (720p)	1280 x 720	1.78	16:9	50	V	V	V	V	V	V	V
					59.94	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V
	Side by Side (1080i)	1920 x 1080	1.78	16:9	50	V	V	V	V	V	V	V
					59.94	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V
	Side by Side (1080p)	1920 x 1080	1.78	16:9	24	V	V	V	V	V	V	V
					50	V	V	V	V	V	V	V
					59.9	V	V	V	V	V	V	V
	Top and Bottom (720p)	1280 x 720	1.78	16:9	60	V	V	V	V	V	V	V
					50	V	V	V	V	V	V	V
					59.94	V	V	V	V	V	V	V
	Top and Bottom (1080p)	1920 x 1080	1.78	16:9	60	V	V	V	V	V	V	V
					23.98	V	V	V	V	V	V	V
					24	V	V	V	V	V	V	V
Frame Sequential 3D	SVGA	800 x 600	1.33	4:3	120	V	V	V	V	V	V	V
	XGA	1024 x 768	1.33	4:3	120	V	V	V	V	V	V	V
	HDTV	1280 x 720	1.78	16:9	120	V	V	V	V	V	V	V
	HDTV	1280 x 800	1.78	16:9	120	V	V	V	V	V	V	V
	1080p	1920 x 1080	1.78	16:9	120	V	V	V	V	V	V	V
					60	V	V	V	NA	V	V	X
					50	V	V	V	V	V	V	X
4K	3840 x 2160	3840 x 2160	1.78	16:9	120	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V
					24	V	V	V	V	V	V	V
					25	V	V	V	V	V	V	V
					30	V	V	V	V	V	V	V
	4096 x 2160 SMPTE	4096 x 2160	1.9	N/A	50	V	NA	NA	V	NA	NA	V
					60	V	NA	NA	V	NA	NA	V
					24	V	V	V	V	V	V	V
					25	V	V	V	V	V	V	V
					30	V	V	V	V	V	V	V

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	DVI						
						RGB			YCbCr 4:4:4			YCbCr 4:2:2
			8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit
PC	VGA	640 x 350	16:10	85	V	V	V	V	V	V	V	V
		640 x 400		85	V	V	V	V	V	V	V	V
		640 x 480	4:3	60	V	V	V	V	V	V	V	V
				72	V	V	V	V	V	V	V	V
				75	V	V	V	V	V	V	V	V
				85	V	V	V	V	V	V	V	V
		720 x 400	1.8	9:5	70	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V
	SVGA	800 x 600	1.33	4:3	60	V	V	V	V	V	V	V
					72	NA	NA	NA	NA	NA	NA	V
					75	NA	NA	NA	NA	NA	NA	V
					85	V	V	V	NA	NA	NA	V
					120	NA	NA	NA	NA	NA	NA	NA
		832 x 624	1.33	4:3	75	V	V	V	NA	NA	NA	V
		848 x 480			60	V	V	V	V	V	V	V
	XGA	1024 x 768	1.33	4:3	60	V	V	V	V	V	V	V
					70	NA	NA	NA	NA	NA	NA	V
					75	NA	NA	NA	V	V	V	V
					85	V	V	V	V	V	V	V
					120	NA	NA	NA	NA	NA	NA	NA
	SXGA	1152 x 864	1.33	4:3	75	V	V	V	V	V	V	V
		1152 x 870	1.32		75	V	V	V	V	V	V	V
	WXGA	1280 x 768	1.67	5:3	60	NA	NA	NA	V	NA	NA	V
					75	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V
	WXGA	1280 x 800	1.6	16:10	60	NA	NA	NA	V	V	V	V
					75	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V
	SXGA	1280x960	1.33	4:3	60	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V
		1280 x 1024	1.25	5:4	60	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V
	WXGA	1360 x 765	1.78	16:9	60	V	NA	NA	V	NA	NA	NA
		1360 x 768			60	V	V	V	V	V	V	V
		1366 x 768			60	V	V	V	V	V	V	V
	SXGA+	1400 x 1050	1.33	4:3	60	V	V	V	V	V	V	V
	WXGA+	1440 x 900	1.6	16:10	60	V	V	V	V	V	V	V
					75	V	V	V	V	V	V	V
					85	V	V	V	V	V	V	V
	WXGA++	1600 x 900	1.78	16:9	60	V	V	V	V	V	V	V
	UXGA	1600 x 1200	1.33	4:3	50	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V
	WSXGA+	1680 x 1050	1.6	16:10	60	V	V	V	V	V	V	V
	WUXGA RB	1920 x 1200RB	1.6	16:10	50	V	V	V	V	V	V	V
					60	V	V	V	V	V	V	V

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	DVI							
						RGB			YCbCr 4:4:4			YCbCr 4:2:2	
			8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	2K	2560 x 1440RB	1.78	16:9	60	NA	NA	NA	NA	NA	NA	NA	
TV	SDTV (480i)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	V	
	SDTV (480i)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	V	
	SDTV (576i)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	V	
	EDTV (576p)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	V	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	V	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	V	
					60	V	V	V	V	V	V	V	
	HDTV (720p)	1280 x 720	1.78	16:9	50	V	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	V	
					60	V	V	V	V	V	V	V	
					120	NA	NA	NA	NA	NA	NA	NA	
HD-SDI	SDTV (480i)	720 x 480	1.5	3:2	59.94	NA	NA	NA	NA	NA	NA	NA	
	SDTV (576i)	720 x 576	1.25	5:4	50	NA	NA	NA	NA	NA	NA	NA	
	HDTV (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
3GA-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
3GB-SDI	HDTV (1080p)	1920x1080 with 352M Payload ID	1.78	16:9	25	NA	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
Mandatory 3D	Frame Packing (1080p)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	DVI							
						RGB			YCbCr 4:4:4			YCbCr 4:2:2	
			8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
Mandatory 3D	Frame Packing (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	Side by Side (1080i)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	Side by Side (1080p)	1920 x 1080	1.78	16:9	24	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
					59.9	NA	NA	NA	NA	NA	NA	NA	
	Top and Bottom (720p)	1280 x 720	1.78	16:9	60	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
	Top and Bottom (1080p)	1920 x 1080	1.78	16:9	60	NA	NA	NA	NA	NA	NA	NA	
					23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
Frame Sequential 3D	SVGA	800 x 600	1.33	4:3	120	NA	NA	NA	NA	NA	NA	NA	
	XGA	1024 x 768	1.33	4:3	120	NA	NA	NA	NA	NA	NA	NA	
	HDTV	1280 x 720	1.78	16:9	120	NA	NA	NA	NA	NA	NA	NA	
	HDTV	1280 x 800	1.78	16:9	120	NA	NA	NA	NA	NA	NA	NA	
	1080p	1920 x 1080	1.78	16:9	120	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
4K	3840 x 2160	3840 x 2160	1.78	16:9	120	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	4096 x 2160 SMPTE	4096 x 2160	1.9	N/A	24	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	3G-SDI
						YCbCr 4:2:2
			10 bit			10 bit
PC	VGA	640 x 350	1.33	16:10	85	NA
		640 x 400			85	NA
		640 x 480		4:3	60	NA
		720 x 400	1.8	9:5	72	NA
					75	NA
					85	NA
	SVGA	800 x 600	1.33	4:3	70	NA
					85	NA
					120	NA
		832 x 624	1.33	4:3	75	NA
		848 x 480			60	NA
	XGA	1024 x 768	1.33	4:3	60	NA
					70	NA
					75	NA
					85	NA
					120	NA
	SXGA	1152 x 864	1.33	4:3	75	NA
		1152 x 870	1.32		75	NA
	WXGA	1280 x 768	1.67	5:3	60	NA
					75	NA
					85	NA
	WXGA	1280 x 800	1.6	16:10	60	NA
					75	NA
					85	NA
	SXGA	1280x960	1.33	4:3	60	NA
					85	NA
		1280 x 1024	1.25	5:4	60	NA
					75	NA
	WXGA	1360 x 765	1.78	16:9	85	NA
		1360 x 768			60	NA
		1366 x 768			60	NA
	SXGA+	1400 x 1050	1.33	4:3	60	NA
	WXGA+	1440 x 900	1.6	16:10	60	NA
					75	NA
					85	NA
	WXGA++	1600 x 900	1.78	16:9	60	NA
	UXGA	1600 x 1200	1.33	4:3	50	NA
					60	NA
	WSXGA+	1680 x 1050	1.6	16:10	60	NA
	WUXGA RB	1920 x 1200RB	1.6	16:10	50	NA
					60	NA
	2K	2560 x 1440RB	1.78	16:9	60	NA

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio	V Sync (Hz)	3G-SDI
					YCbCr 4:2:2
					10 bit
TV	SDTV (480i)	720 x 480	1.5	3:2	59.94
	SDTV (480i)	720 x 480	1.5	3:2	60
	SDTV (576i)	720 x 576	1.25	5:4	50
	EDTV (480p)	720 x 480	1.5	3:2	59.94
	EDTV (480p)	720 x 480	1.5	3:2	60
	EDTV (576p)	720 x 576	1.25	5:4	50
	HDTV (1080i)	1920 x 1080	1.78	16:9	50
					59.94
					60
	HDTV (720p)	1280 x 720	1.78	16:9	50
					59.94
					60
					120
SD-SDI	SDTV (480i)	720 x 480	1.5	3:2	23.98
					NA
	SDTV (576i)	720 x 576	1.25	5:4	24
					NA
	HDTV (720p)	1280 x 720	1.78	16:9	25
					NA
					29.97
					30
					50
					59.94
HD-SDI	HDTV (1080i)	1920 x 1080	1.78	16:9	60
					NA
					23.98
					NA
					24
					NA
	HDTV (1080p)	1920 x 1080	1.78	16:9	25
					NA
					29.97
					30
3GA-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	50
					NA
					59.94
	HDTV (1080p)	1920x1080 with 352M Payload ID	1.78	16:9	60
					NA
3GB-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	50
					NA
					59.94
Mandatory 3D	Frame Packing (1080p)	1920 x 1080	1.78	16:9	60
					NA
					23.98
					24
					NA

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	3G-SDI
						YCbCr 4:2:2
						10 bit
Mandatory 3D	Frame Packing (720p)	1280 x 720	1.78	16:9	50	NA
					59.94	NA
					60	NA
	Side by Side (1080i)	1920 x 1080	1.78	16:9	50	NA
					59.94	NA
					60	NA
	Side by Side (1080p)	1920 x 1080	1.78	16:9	24	NA
					50	NA
					59.9	NA
	Top and Bottom (720p)	1280 x 720	1.78	16:9	60	NA
					50	NA
					59.94	NA
	Top and Bottom (1080p)	1920 x 1080	1.78	16:9	60	NA
					23.98	NA
					24	NA
Frame Sequential 3D	SVGA	800 x 600	1.33	4:3	120	NA
	XGA	1024 x 768	1.33	4:3	120	NA
	HDTV	1280 x 720	1.78	16:9	120	NA
	HDTV	1280 x 800	1.78	16:9	120	NA
	1080p	1920 x 1080	1.78	16:9	120	NA
					60	NA
					50	NA
	WUXGA	1920 x 1200	1.6	16:10	120	NA
					60	NA
4K	3840 x 2160	3840 x 2160	1.78	16:9	24	NA
					25	NA
					30	NA
					50	NA
					60	NA
	4096 x 2160 SMPTE	4096 x 2160	1.9	N/A	24	NA
					25	NA
					30	NA
					50	NA
					60	NA

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio	V Sync (Hz)	HDBaseT							
					RGB			YCbCr 4:4:4			YCbCr 4:2:2	
					8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	VGA	640 x 350	16:10	85	V	V	V	V	V	V	V	
		640 x 400		85	V	V	V	V	V	V	V	
		640 x 480	4:3	60	V	V	V	V	V	V	V	
				72	V	V	V	V	V	V	V	
				75	V	V	V	V	V	V	V	
				85	V	V	V	V	V	V	V	
		720 x 400	1.8	70	V	V	V	V	V	V	V	
				85	V	V	V	V	V	V	V	
	SVGA	800 x 600	1.33	4:3	60	V	V	V	V	V	V	
					72	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
					120	V	V	V	V	V	V	
		832 x 624	1.33	4:3	75	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
	XGA	1024 x 768	1.33	4:3	60	V	V	V	V	V	V	
					70	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
					120	V	V	V	V	V	V	
	SXGA	1152 x 864	1.33	4:3	75	V	V	V	V	V	V	
		1152 x 870	1.32		75	V	V	V	V	V	V	
	WXGA	1280 x 768	1.67	5:3	60	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
	WXGA	1280 x 800	1.6	16:10	60	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
	SXGA	1280x960	1.33	4:3	60	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
		1280 x 1024	1.25	5:4	60	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
	WXGA	1360 x 765	1.78	16:9	60	V	NA	NA	V	NA	NA	
		1360 x 768			60	V	V	V	V	V	V	
		1366 x 768			60	V	V	V	V	V	NA	
	SXGA+	1400 x 1050	1.33	4:3	60	V	V	V	V	V	V	
	WXGA+	1440 x 900	1.6	16:10	60	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
	WXGA++	1600 x 900	1.78	16:9	60	V	V	V	V	V	V	
	UXGA	1600 x 1200	1.33	4:3	50	V	V	V	V	V	V	
					60	V	V	V	V	V	NA	
	WSXGA+	1680 x 1050	1.6	16:10	60	V	V	V	V	V	V	
	WUXGA RB	1920 x 1200RB	1.6	16:10	50	V	V	V	V	V	V	
					60	V	V	V	V	V	NA	

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio		V Sync (Hz)	HDBaseT							
						RGB			YCbCr 4:4:4			YCbCr 4:2:2	
			8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	2K	2560 x 1440RB	1.78	16:9	60	V	NA	NA	V	NA	NA	V	
TV	SDTV (480i)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	V	
	SDTV (480i)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	V	
	SDTV (576i)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	V	
	EDTV (576p)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	V	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	V	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	V	
					60	V	V	V	V	V	V	V	
	HDTV (720p)	1280 x 720	1.78	16:9	50	V	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	V	
					60	V	V	V	V	V	V	V	
					120	V	V	V	V	V	V	V	
SD-SDI	SDTV (480i)	720 x 480	1.5	3:2	59.94	NA	NA	NA	NA	NA	NA	NA	
	SDTV (576i)	720 x 576	1.25	5:4	50	NA	NA	NA	NA	NA	NA	NA	
	HDTV (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
HD-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
					23.98	NA	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080p)	1920 x 1080	1.78	16:9	25	NA	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	NA	
3GA-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	30	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	NA	
	HDTV (1080p)	1920 x 1080	1.78	16:9	30	NA	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	NA	
3GB-SDI	HDTV (1080p)	1920x1080 with 352M Payload ID	1.78	16:9	50	NA	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	NA	
Mandatory 3D	Frame Packing (1080p)	1920 x 1080	1.78	16:9	23.98	V	V	V	V	V	V	V	
					24	V	V	V	V	V	V	V	

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio	V Sync (Hz)	HDBaseT							
					RGB			YCbCr 4:4:4			YCbCr 4:2:2	
					8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
Mandatory 3D	Frame Packing (720p)	1280 x 720	1.78	16:9	50	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
	Side by Side (1080i)	1920 x 1080	1.78	16:9	50	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
	Side by Side (1080p)	1920 x 1080	1.78	16:9	24	V	V	V	V	V	V	
					50	V	V	V	V	V	V	
					59.9	V	V	V	V	V	V	
	Top and Bottom (720p)	1280 x 720	1.78	16:9	60	V	V	V	V	V	V	
					50	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	
	Top and Bottom (1080p)	1920 x 1080	1.78	16:9	60	V	V	V	V	V	V	
					23.98	V	V	V	V	V	V	
					24	V	V	V	V	V	V	
					59.9	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
Frame Sequential 3D	SVGA	800 x 600	1.33	4:3	120	V	V	V	V	V	V	
	XGA	1024 x 768	1.33	4:3	120	V	V	V	V	V	V	
	HDTV	1280 x 720	1.78	16:9	120	V	V	V	V	V	V	
	HDTV	1280 x 800	1.78	16:9	120	V	V	V	V	V	V	
	1080p	1920 x 1080	1.78	16:9	120	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
					50	V	V	V	V	V	V	
	WUXGA	1920 x 1200	1.6	16:10	120	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
4K	3840 x 2160	3840 x 2160	1.78	16:9	24	V	V	V	V	V	V	
					25	V	V	V	V	V	V	
					30	V	V	V	V	V	V	
					50	V	NA	NA	V	NA	NA	
					60	V	NA	NA	V	NA	NA	
	4096 x 2160 SMPTE	4096 x 2160	1.9	N/A	24	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio	V Sync (Hz)	DisplayPort							
					RGB			YCbCr 4:4:4			YCbCr 4:2:2	
					8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	VGA	640 x 350	1.33	85	V	V	V	V	V	V	V	
		640 x 400		85	V	V	V	V	V	V	V	
		640 x 480		60	V	V	V	V	V	V	V	
				72	V	V	V	V	V	V	NA	
				75	V	V	V	V	V	V	V	
				85	V	V	V	V	V	V	NA	
		720 x 400	1.8	70	V	V	V	V	V	V	NA	
				85	V	V	V	V	V	V	V	
	SVGA	800 x 600	1.33	4:3	60	V	V	V	V	V	V	
					72	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
					120	V	V	V	V	V	V	
		832 x 624	1.33	4:3	75	V	V	V	V	V	NA	
					60	V	V	V	V	V	V	
	XGA	1024 x 768	1.33	4:3	60	V	V	V	V	V	NA	
					70	V	V	V	V	V	NA	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
					120	V	V	V	V	V	V	
	SXGA	1152 x 864	1.33	4:3	75	V	V	V	V	V	V	
		1152 x 870	1.32		75	V	V	V	V	V	NA	
	WXGA	1280 x 768	1.67	5:3	60	V	V	V	V	V	NA	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	NA	
	WXGA	1280 x 800	1.6	16:10	60	V	V	V	V	V	NA	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
	SXGA	1280x960	1.33	4:3	60	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
		1280 x 1024	1.25	5:4	60	V	V	V	V	V	V	
					75	V	V	V	V	V	V	
					85	V	V	V	V	V	V	
	WXGA	1360 x 765	1.78	16:9	60	V	NA	NA	V	NA	NA	
		1360 x 768			60	V	V	V	V	V	V	
		1366 x 768			60	V	V	V	V	V	V	
	SXGA+	1400 x 1050	1.33	4:3	60	V	V	V	V	V	V	
	WXGA+	1440 x 900	1.6	16:10	60	V	V	V	V	V	NA	
					75	V	V	V	V	V	NA	
					85	V	V	V	V	V	V	
	WXGA++	1600 x 900	1.78	16:9	60	V	V	V	V	V	V	
	UXGA	1600 x 1200	1.33	4:3	50	V	V	V	V	V	NA	
					60	V	V	V	V	V	NA	
	WSXGA+	1680 x 1050	1.6	16:10	60	V	V	V	V	V	NA	
	WUXGA RB	1920 x 1200RB	1.6	16:10	50	V	V	V	V	V	NA	
					60	V	V	V	V	V	V	

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio	V Sync (Hz)	DisplayPort							
					RGB			YCbCr 4:4:4			YCbCr 4:2:2	
					8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
PC	2K	2560 x 1440RB	1.78	16:9	60	V	V	V	V	V	V	
TV	SDTV (480i)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	NA	
	SDTV (480i)	720 x 480	1.5	3:2	60	V	V	V	V	V	NA	
	SDTV (576i)	720 x 576	1.25	5:4	50	V	V	V	V	V	NA	
	EDTV (480p)	720 x 480	1.5	3:2	59.94	V	V	V	V	V	V	
	EDTV (480p)	720 x 480	1.5	3:2	60	V	V	V	V	V	V	
	EDTV (576p)	720 x 576	1.25	5:4	50	V	V	V	V	V	V	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	V	V	V	V	V	NA	
					59.94	V	V	V	V	V	NA	
					60	V	V	V	V	V	V	
	HDTV (720p)	1280 x 720	1.78	16:9	50	V	V	V	V	V	V	
					59.94	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
					120	V	V	V	V	V	V	
HD-SDI	SDTV (480i)	720 x 480	1.5	3:2	59.94	NA	NA	NA	NA	NA	NA	
						NA	NA	NA	NA	NA	NA	
	SDTV (576i)	720 x 576	1.25	5:4	50	NA	NA	NA	NA	NA	NA	
						NA	NA	NA	NA	NA	NA	
	HDTV (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
	HDTV (1080i)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
	HDTV (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	
3GA-SDI	HDTV (1080p)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
					25	NA	NA	NA	NA	NA	NA	
					29.97	NA	NA	NA	NA	NA	NA	
					30	NA	NA	NA	NA	NA	NA	
3GB-SDI	HDTV (1080p)	1920x1080 with 352M Payload ID	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	

# ADDITIONAL INFORMATION

Signal Type	Signal Format	Resolution	Aspect Ratio	V Sync (Hz)	DisplayPort							
					RGB			YCbCr 4:4:4			YCbCr 4:2:2	
					8 bit	10 bit	12 bit	8 bit	10 bit	12 bit	8 bit	
Mandatory 3D	Frame Packing (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	
	Frame Packing (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
	Side by Side (1080i)	1920 x 1080	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
	Side by Side (1080p)	1920 x 1080	1.78	16:9	24	NA	NA	NA	NA	NA	NA	
					50	NA	NA	NA	NA	NA	NA	
					59.9	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
	Top and Bottom (720p)	1280 x 720	1.78	16:9	50	NA	NA	NA	NA	NA	NA	
					59.94	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
	Top and Bottom (1080p)	1920 x 1080	1.78	16:9	23.98	NA	NA	NA	NA	NA	NA	
					24	NA	NA	NA	NA	NA	NA	
					59.9	NA	NA	NA	NA	NA	NA	
					60	NA	NA	NA	NA	NA	NA	
Frame Sequential 3D	SVGA	800 x 600	1.33	4:3	120	V	V	V	V	V	V	
	XGA	1024 x 768	1.33	4:3	120	NA	NA	NA	NA	NA	NA	
	HDTV	1280 x 720	1.78	16:9	120	V	V	V	V	V	V	
	HDTV	1280 x 800	1.78	16:9	120	V	V	V	V	V	V	
	1080p	1920 x 1080	1.78	16:9	120	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
					50	V	V	V	V	V	V	
	WUXGA	1920 x 1200	1.6	16:10	120	V	V	V	V	V	V	
					60	V	V	V	V	V	V	
4K	3840 x 2160	3840 x 2160	1.78	16:9	24	V	V	V	V	V	V	
					25	V	V	V	V	V	V	
					30	V	V	V	V	V	V	
					50	V	NA	NA	V	NA	V	
					60	V	NA	NA	V	NA	V	
	4096 x 2160 SMPTE	4096 x 2160	1.9	N/A	24	V	V	V	V	V	V	
					25	V	V	V	V	V	V	
					30	V	V	V	V	V	V	
					50	V	NA	NA	V	NA	V	
					60	V	NA	NA	V	NA	V	

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

## EDID table

VGA		
Established Timing:	Standard Timing:	Detail Timing:
720 x 400 @70Hz	1440 x 900 @75Hz	1920 x 1200 @59Hz
720 x 400 @88Hz	1280 x 800 @75Hz	1920 x 1080 @60Hz
640 x 480 @60Hz	1280 x 1024 @60Hz	
640 x 480 @67Hz	1360 x 765 @60Hz	
640 x 480 @72Hz	1440 x 900 @60Hz	
640 x 480 @75Hz	1400 x 1050 @60Hz	
800 x 600 @56Hz	1600 x 1200 @60Hz	
800 x 600 @60Hz	1680 x 1050 @60Hz	
800 x 600 @72Hz		
800 x 600 @75Hz		
832 x 624 @75Hz		
1024 x 768 @60Hz		
1024 x 768 @70Hz		
1024 x 768 @75Hz		
1280 x 1024 @75Hz		
1152 x 870 @75Hz		

DVI		
Established Timing:	Standard Timing:	Detail Timing:
720 x 400 @70Hz	1024 x 768 @120Hz	1920 x 1200 @59Hz
720 x 400 @88Hz	1280 x 800 @75Hz	1920 x 1080 @60Hz
640 x 480 @60Hz	1280 x 1024 @60Hz	640 x 480 @60Hz
640 x 480 @67Hz	1360 x 765 @60Hz	720 x 480 @60Hz
640 x 480 @72Hz	800 x 600 @120Hz	1280 x 720 @60Hz
640 x 480 @75Hz	1400 x 1050 @60Hz	1920 x 1080i @60Hz
800 x 600 @56Hz	1600 x 1200 @60Hz	720 x 480i @60Hz
800 x 600 @60Hz	1680 x 1050 @60Hz	720 x 576 @50Hz
800 x 600 @72Hz		1280 x 720 @50Hz
800 x 600 @75Hz		1920 x 1080i @50Hz
832 x 624 @75Hz		720 x 576i @50Hz
1024 x 768 @60Hz		1920 x 1080 @50Hz
1024 x 768 @70Hz		1920 x 1080 @24Hz
1024 x 768 @75Hz		1440 x 480 @60Hz
1280 x 1024 @75Hz		1920 x 1080 @25Hz
1152 x 870 @75Hz		

# ADDITIONAL INFORMATION

HDMI 1.4		
Established Timing:	Standard Timing:	Detail Timing:
720 x 400 @70Hz	1024 x 768 @120Hz	1920 x 1200 @59Hz
720 x 400 @88Hz	1280 x 800 @75Hz	1920 x 1080 @60Hz
640 x 480 @60Hz	1280 x 1024 @60Hz	640 x 480 @60Hz
640 x 480 @67Hz	1360 x 765 @60Hz	720 x 480 @60Hz
640 x 480 @72Hz	800 x 600 @120Hz	1280 x 720 @60Hz
640 x 480 @75Hz	1400 x 1050 @60Hz	1920 x 1080i @60Hz
800 x 600 @56Hz	1600 x 1200 @60Hz	720 x 480i @60Hz
800 x 600 @60Hz	1680 x 1050 @60Hz	720 x 576 @50Hz
800 x 600 @72Hz		1280 x 720 @50Hz
800 x 600 @75Hz		1920 x 1080i @50Hz
832 x 624 @75Hz		720 x 576i @50Hz
1024 x 768 @60Hz		1920 x 1080 @50Hz
1024 x 768 @70Hz		1920 x 1080 @24Hz
1024 x 768 @75Hz		1440 x 480 @60Hz
1280 x 1024 @75Hz		1920 x 1080 @25Hz
1152 x 870 @75Hz		1280 x 720 @120Hz
		1920 x 1080 @120Hz
		3840 x 2160 @24Hz
		3840 x 2160 @25Hz
		3840 x 2160 @30Hz
		4096 x 2160 @24Hz
		4096 x 2160 @25Hz
		4096 x 2160 @30Hz

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

HDMI 2.0		
Established Timing:	Standard Timing:	Detail Timing:
720 x 400 @70Hz	1024 x 768 @120Hz	1920 x 1200 @59Hz
720 x 400 @88Hz	1280 x 800 @75Hz	1920 x 1080 @60Hz
640 x 480 @60Hz	1280 x 1024 @60Hz	640 x 480 @60Hz
640 x 480 @67Hz	1360 x 765 @60Hz	720 x 480 @60Hz
640 x 480 @72Hz	800 x 600 @120Hz	1280 x 720 @60Hz
640 x 480 @75Hz	1400 x 1050 @60Hz	1920 x 1080i @60Hz
800 x 600 @56Hz	1600 x 1200 @60Hz	720 x 480i @60Hz
800 x 600 @60Hz	1680 x 1050 @60Hz	720 x 576 @50Hz
800 x 600 @72Hz		1280 x 720 @50Hz
800 x 600 @75Hz		1920 x 1080i @50Hz
832 x 624 @75Hz		720 x 576i @50Hz
1024 x 768 @60Hz		1920 x 1080 @50Hz
1024 x 768 @70Hz		1920 x 1080 @24Hz
1024 x 768 @75Hz		1440 x 480 @60Hz
1280 x 1024 @75Hz		1920 x 1080 @25Hz
1152 x 870 @75Hz		1280 x 720 @120Hz
		1920 x 1080 @120Hz
		3840 x 2160 @24Hz
		3840 x 2160 @25Hz
		3840 x 2160 @30Hz
		3840 x 2160 @50Hz
		3840 x 2160 @60Hz
		4096 x 2160 @24Hz
		4096 x 2160 @25Hz
		4096 x 2160 @30Hz
		4096 x 2160 @50Hz
		4096 x 2160 @60Hz

**Note:**

- “V” means supported and “NA” means not supported.
- “RB” means “reduced blanking”.

# ADDITIONAL INFORMATION

## Image size and projection distance


Platform			WUXGA (16:10)																			
DMD			0.96"																			
Projection Lens			BX-CTA11		BX-CTA18		BX-CTA19		BX-CTA20		BX-CTA21		BX-CTA22		BX-CTA23		BX-CTA27					
Throw Ratio Spec.(Wide/Tele)			0.65		0.75		0.84		1.02		1.02		1.36		1.2		1.5		1.50		2.00	
Zoom Ratio			1.15x		1.2x		1.33x		1.25x		1.33x		2x		1.8x		1.5x					
Throw Distance (m) (min/max)			0.67		16.51		0.90		21.97		1.10		29.29		1.34		33.39		1.64		43.51	
Projection screen size			Throw distance (m)																			
Diagonal (inch)	Height (m)	Width (m)	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele		
50	0.67	1.08	0.67	0.78	0.90	1.10	1.10	1.46	1.34	1.67	1.64	2.18	2.10	4.24	4.25	7.69	7.80	11.69				
60	0.81	1.29	0.81	0.94	1.09	1.32	1.32	1.76	1.60	2.00	1.96	2.61	2.52	5.09	5.10	9.23	9.35	14.02				
70	0.94	1.51	0.95	1.11	1.27	1.54	1.54	2.05	1.87	2.34	2.29	3.05	2.94	5.94	5.96	10.77	10.89	16.34				
80	1.08	1.72	1.10	1.27	1.45	1.76	1.76	2.34	2.14	2.67	2.62	3.48	3.36	6.79	6.81	12.30	12.44	18.67				
90	1.21	1.94	1.24	1.44	1.63	1.98	1.98	2.64	2.40	3.00	2.95	3.92	3.78	7.64	7.66	13.84	13.98	20.99				
100	1.35	2.15	1.38	1.61	1.81	2.20	2.20	2.93	2.67	3.34	3.27	4.35	4.20	8.49	8.51	15.38	15.53	23.32				
110	1.48	2.37	1.53	1.77	1.99	2.42	2.42	3.22	2.94	3.67	3.60	4.79	4.62	9.34	9.36	16.92	17.08	25.65				
120	1.62	2.58	1.67	1.94	2.17	2.64	2.64	3.52	3.21	4.01	3.93	5.22	5.04	10.18	10.21	18.45	18.62	27.97				
130	1.75	2.80	1.81	2.10	2.35	2.86	2.86	3.81	3.47	4.34	4.26	5.66	5.46	11.03	11.06	19.99	20.17	30.30				
140	1.88	3.02	1.96	2.27	2.53	3.08	3.08	4.10	3.74	4.67	4.58	6.09	5.88	11.88	11.91	21.53	21.72	32.62				
150	2.02	3.23	2.10	2.43	2.71	3.30	3.30	4.39	4.01	5.01	4.91	6.53	6.30	12.73	12.76	23.07	23.26	34.95				
160	2.15	3.45	2.24	2.60	2.89	3.52	3.52	4.69	4.27	5.34	5.24	6.96	6.72	13.58	13.61	24.61	24.81	37.27				
170	2.29	3.66	2.39	2.77	3.08	3.73	3.73	4.98	4.54	5.68	5.57	7.40	7.14	14.43	14.46	26.14	26.36	39.60				
180	2.42	3.88	2.53	2.93	3.26	3.95	3.95	5.27	4.81	6.01	5.89	7.83	7.56	15.28	15.31	27.68	27.90	41.92				
190	2.56	4.09	2.67	3.10	3.44	4.17	4.17	5.57	5.07	6.34	6.22	8.27	7.98	16.12	16.17	29.22	29.45	44.25				
200	2.69	4.31	2.82	3.26	3.62	4.39	4.39	5.86	5.34	6.68	6.55	8.70	8.40	16.97	17.02	30.76	31.00	46.57				
250	3.37	5.38	3.53	4.09	4.52	5.49	5.49	7.32	6.68	8.35	8.18	10.88	10.50	21.22	21.27	38.45	38.73	58.20				
300	4.04	6.46	4.25	4.92	5.43	6.59	6.59	8.79	8.01	10.02	9.82	13.05	12.60	25.46	25.52	46.14	46.46	69.83				
350	4.71	7.54	4.97	5.75	6.33	7.69	7.69	10.25	9.35	11.68	11.46	15.23	14.70	29.70	29.78	53.83	54.19	81.45				
400	5.38	8.62	5.68	6.58	7.24	8.79	8.79	11.72	10.68	13.35	13.10	17.40	16.80	33.95	34.03	61.52	61.93	93.08				
450	6.06	9.69	6.40	7.40	8.14	9.89	9.89	13.18	12.02	15.02	14.73	19.58	18.90	38.19	38.29	69.21	69.66	104.71				
500	6.73	10.77	7.12	8.23	9.05	10.98	10.98	14.65	13.35	16.69	16.37	21.75	21.00	42.43	42.54	76.89	77.39	116.33				
550	7.40	11.85	7.84	9.06	9.95	12.08	12.08	16.11	14.69	18.36	18.01	23.93	23.10	46.68	46.79	84.58	85.12	127.96				
600	8.08	12.92	8.55	9.89	10.86	13.18	13.18	17.58	16.03	20.03	19.64	26.11	25.20	50.92	51.05	92.27	92.86	139.59				
650	8.75	14.00	9.27	10.72	11.76	14.28	14.28	19.04	17.36	21.70	21.28	28.28	27.30	55.16	55.30	99.96	100.59	151.21				
700	9.42	15.08	9.99	11.54	12.67	15.38	15.38	20.51	18.70	23.37	22.92	30.46	29.40	59.40	59.56	107.65	108.32	162.84				
750	10.10	16.15	10.70	12.37	13.57	16.48	16.48	21.97	20.03	25.04	24.55	32.63	31.50	63.65	63.81	115.34	116.05	174.47				
800	10.77	17.23	11.42	13.20	14.47	17.58	17.58	23.43	21.37	26.71	26.19	34.81	33.60	67.89	68.06	123.03	123.79	186.10				
850	11.44	18.31	12.14	14.03	15.38	18.67	18.67	24.90	22.70	28.38	27.83	36.98	35.70	72.13	72.32	130.72	131.52	197.72				
900	12.12	19.39	12.85	14.86	16.28	19.77	19.77	26.36	24.04	30.05	29.47	39.16	37.80	76.38	76.57	138.41	139.25	209.35				
950	12.79	20.46	13.57	15.69	17.19	20.87	20.87	27.83	25.37	31.72	31.10	41.33	39.90	80.62	80.83	146.10	146.98	220.98				
1000	13.46	21.54	14.29	16.51	18.09	21.97	21.97	29.29	26.71	33.39	32.74	43.51	42.00	84.86	85.08	153.79	154.72	232.60				

**Note:** If the screen is larger than 300 inches, then fine text and images may not display clearly.

# ADDITIONAL INFORMATION

## Projection distance

The distance between the projector and its screen determines the approximate size of the image. The farther the projector is from the screen, the larger the projected image will be. The image size also varies depending on the aspect ratio, zoom and other settings.

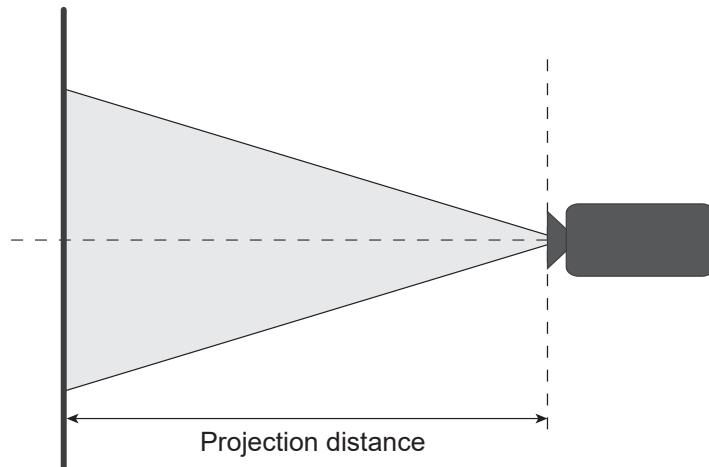

## Powered lens shift range

Projection Lens	Optical Lens Shift Range		Mechanical Shift Range	
	$\Delta H_o$	$\Delta V_o$	Max. of $\Delta H_m$	Max. of $\Delta V_m$
BX-CTA18, BX-CTA19	11%	27%	50%	120%

V: Height of the projected image


H: Width of the projected image

□ Projected image

⚠ When the lens is shifted beyond the described range of operation, screen edges may become darker or images may become out of focus.

⚠ The lens cannot be shifted to this area by system control. ( $\Delta H_{mc}$ : 23%,  $\Delta V_{mc}$ : 0%)

**Note:** The calculation is based on 1/2 image width and 1/2 image height.

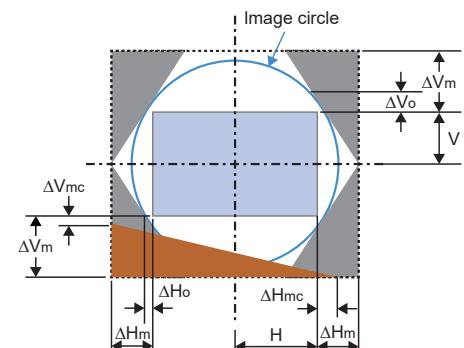

Projection Lens	Optical Lens Shift Range		Mechanical Shift Range	
	$\Delta H_o$	$\Delta V_o$	Max. of $\Delta H_m$	Max. of $\Delta V_m$
BX-CTA11	48%	102%	50%	120%

V: Height of the projected image


H: Width of the projected image

□ Projected image

⚠ When the lens is shifted beyond the described range of operation, screen edges may become darker or images may become out of focus.

**Note:**

- The calculation is based on 1/2 image width and 1/2 image height.
- Lens shift accuracy is 0.5 pixel per step.

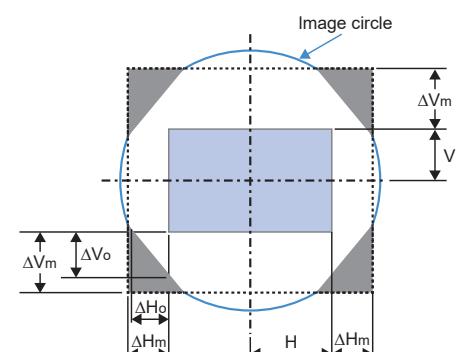

# ADDITIONAL INFORMATION

Projection Lens	Optical Lens Shift Range		Mechanical Shift Range	
	$\Delta H_o$	$\Delta V_o$	Max. of $\Delta H_m$	Max. of $\Delta V_m$
BX-CTA20, BX-CTA21, BX-CTA22, BX-CTA23, BX-CTA27	50%	120%	50%	120%


**V:** Height of the projected image

**H:** Width of the projected image

Projected image

When the lens is shifted beyond the described range of operation, screen edges may become darker or images may become out of focus.

**Note:** The calculation is based on 1/2 image width and 1/2 image height.

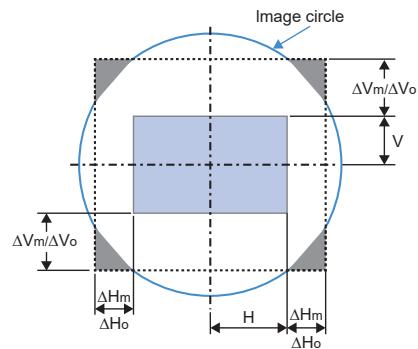


## **ADDITIONAL INFORMATION**

## **Projector dimensions and ceiling mount installation**

If you wish to use a third party ceiling mount kit, please ensure the screws used to attach a mount to the projector meet the following specifications:

- Screw type: M8\*1.25P x4
  - MIN. 10mm - MAX. 15mm
  - Tightening torque: 55Kgf-cm~60Kgf-cm

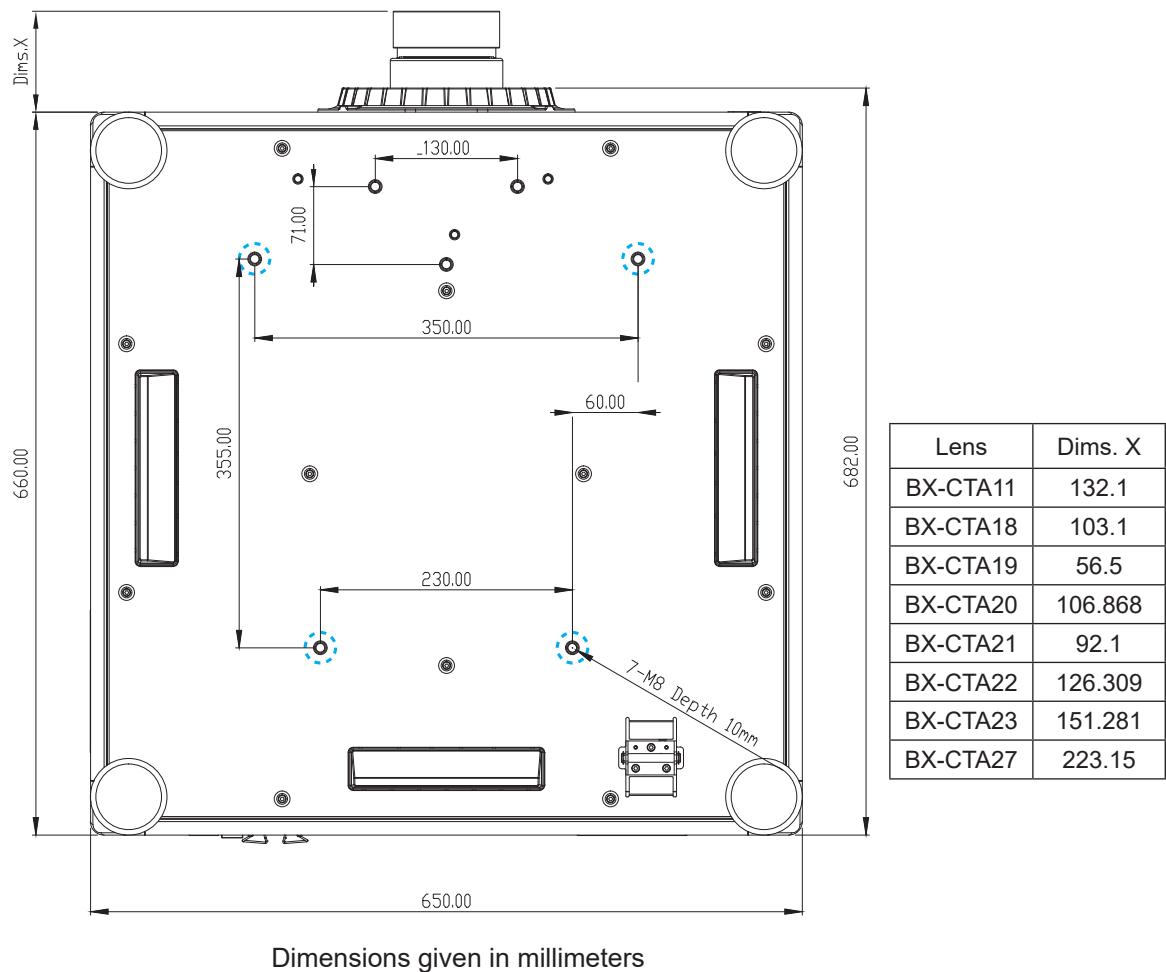


#### **Warning:**

- If you buy a ceiling mount from a third party, please be sure to use the correct screw size. Screw size will vary depending on the thickness of the mounting plate.
  - Be sure to keep at least a 10mm (1cm) gap between the ceiling and the bottom of the projector.
  - Avoid installing the projector near a heat source.
  - Please note that damage resulting from incorrect installation will void the warranty.

# ADDITIONAL INFORMATION

## IR remote codes

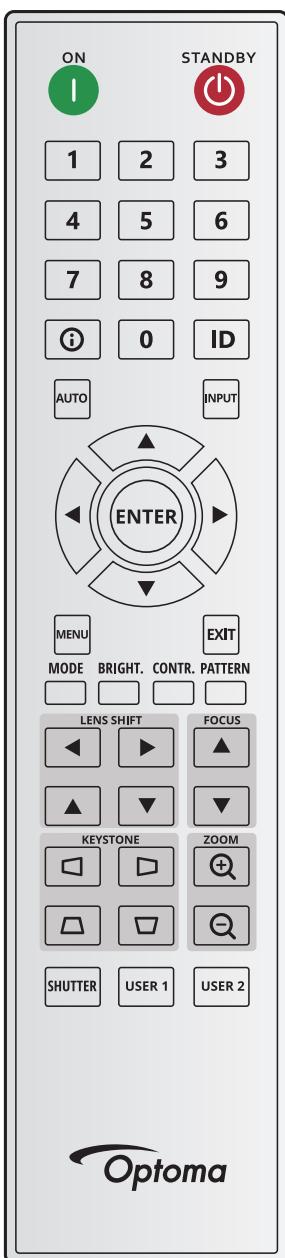

Key Legend	Key Position	Repeat Format	Address		Data		Description
			Byte 1	Byte 2	Byte 3	Byte 4	
ON (I)	1	F1	32	CD	2	FD	Press to turn on the projector.
OFF (P)	2	F1	32	CD	2E	D1	Press to turn off the projector.
1	3	F1	32	CD	72	8D	Use as numeric keypad number "1".
2	4	F1	32	CD	73	8C	Use as numeric keypad number "2".
3	5	F1	32	CD	74	8B	Use as numeric keypad number "3".
4	6	F1	32	CD	75	8A	Use as numeric keypad number "4".
5	7	F1	32	CD	77	88	Use as numeric keypad number "5".
6	8	F1	32	CD	78	87	Use as numeric keypad number "6".

# ADDITIONAL INFORMATION

Key Legend	Key Position	Repeat Format	Address		Data		Description
			Byte 1	Byte 2	Byte 3	Byte 4	
7	9	F1	32	CD	79	86	Use as numeric keypad number “7”.
8	10	F1	32	CD	80	7F	Use as numeric keypad number “8”.
9	11	F1	32	CD	81	7E	Use as numeric keypad number “9”.
Info (i)	12	F1	32	CD	82	7D	Press to display source image information.
0	13	F1	32	CD	25	DA	Use as numeric keypad number “0”.
ID	14	F1	32	CD	A7	58	Press to set remote ID. Please refer to “Remote control ID setup” on page 26.
Auto	15	F1	32	CD	4	FB	Press to automatically synchronize the projector to the input source.
Input	16	F1	32	CD	18	E7	Press to select an input signal.
UP (▲)	17	F1	32	CD	0F	F0	Press to select items or make adjustments to our selection.
LEFT (◀)	18	F1	32	CD	11	EE	Press to select items or make adjustments to our selection.
Enter	19	F1	32	CD	14	EB	Press to confirm your item selection.
RIGHT (▶)	20	F1	32	CD	10	EF	Press to select items or make adjustments to our selection.
DOWN (▼)	21	F1	32	CD	12	ED	Press to select items or make adjustments to our selection.
Menu	22	F1	32	CD	0E	F1	Press to display the on-screen display menus for projector.
Exit	23	F1	32	CD	2A	D5	Press to return to previous level or exit menus if at top level.
Mode	24	F1	32	CD	5	FA	Press to select the preset display mode.
Bright.	25	F1	32	CD	28	D7	Press to adjust amount of light in the image.
Contr.	26	F1	32	CD	29	D6	Press to adjust difference between dark and light.
Pattern	27	F1	32	CD	58	A7	Press to display a test pattern.
Lens Shift ▲	28	F1	32	CD	41	BE	Press to adjust the position of the image horizontally.
Lens Shift ▼	29	F1	32	CD	42	BD	
Focus ▲	30	F1	32	CD	86	79	Press to adjust focus to improve image clarity as desired.
Lens Shift ▲	31	F1	32	CD	34	CB	Press to adjust the position of the image vertically.
Lens Shift ▼	32	F1	32	CD	32	CD	Press to adjust the position of the image vertically.
Focus ▼	33	F1	32	CD	26	D9	Press to adjust focus to improve image clarity as desired.
Keystone □	34	F1	32	CD	87	78	Press to adjust the horizontal keystone.
Keystone □	35	F1	32	CD	51	AE	Press to adjust the horizontal keystone.
Zoom +	36	F1	32	CD	52	AD	Press to adjust zoom to achieve a desired image size.
Keystone □	37	F1	32	CD	53	AC	Press to adjust the vertical keystone.
Keystone □	38	F1	32	CD	54	AB	Press to adjust the vertical keystone.
Zoom -	39	F1	32	CD	55	AA	Press to adjust zoom to achieve a desired image size.
Shutter (AV Mute)	40	F1	32	CD	56	A9	Press to hide/unhide the screen picture.
User 1	41	F1	32	CD	57	A8	Press to assign user functions. Please refer to “Remote Setup” on page 69.
User 2	42	F1	32	CD	27	D8	Press to assign user functions. Please refer to “Remote Setup” on page 69.

# ADDITIONAL INFORMATION

## Troubleshooting

If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.

### Image problems

-  *No image appears on-screen*
  - Ensure all the cables and power connections are correctly and securely connected as described in the *Setup and Installation* section.
  - Ensure the pins of connectors are not crooked or broken.
  - Ensure that the Shutter (AV Mute) feature is not turned on.
-  *Image is out of focus*
  - Press the **Focus ▲** or **Focus ▼** button on the remote control or projector keypad to adjust the focus until the image is sharp and legible.
  - Make sure the projection screen is between the required distance from the projector. (Please refer to *Image size and projection distance* page 96).
-  *The image is stretched when displaying 16:10 DVD title*
  - When you play anamorphic DVD or 16:10 DVD, the projector will show the best image in 16:10 format on projector side.
  - If you play 4:3 format DVD title, please change the format as 4:3 in projector OSD.
  - Please setup the display format as 16:10 (wide) aspect ratio type on your DVD player.
-  *Image is too small or too large*
  - Press the **Zoom +** or **Zoom -** button on the remote control or projector keypad to adjust the projected image size.
  - Move the projector closer to or further from the screen.
  - From the OSD menu, select **Display > Aspect Ratio** to change the aspect ratio.
-  *Image has slanted sides:*
  - If possible, reposition the projector so that it is centered on the screen and below the bottom of the screen.
  - Press the **Keystone □/□/□/□** buttons on the remote control to adjust the screen shape.
-  *Image is reversed*
  - From the OSD menu, select **Display Setup > Projection > Rear** to reverse the image so you can project from behind a translucent screen.
-  *Active Image Setup Problems*

If the camera-based calibration results are not as expected, check the following conditions:

  - Only supports front projection and the portrait is available.
  - The functions in the Active Image Setup menu are available for the projections from 120 to 300 inches.
  - Avoid installing strong light or any reflective surface between the camera view and the projected image.
  - If any error message appears during the calibration please reference “Camera Trouble Shooting Guide” or contact Optoma for support.

# ADDITIONAL INFORMATION

## Other problems

### *The projector stops responding to all controls*

- If possible, turn off the projector, then unplug the power cord and wait at least 20 seconds before reconnecting power.


## Remote control problems

### *If the remote control does not work*

- Check that the operating angle of the remote control is pointed within  $\pm 30^\circ$  horizontally or  $\pm 20^\circ$  vertically to the IR receivers on the projector.
- Make sure there are not any obstructions between the remote control and the projector. Move to within 10 m (32.8 ft) of the projector.
- Make sure batteries are inserted correctly.
- Replace batteries if they are exhausted.

# ADDITIONAL INFORMATION

## LED status indicators

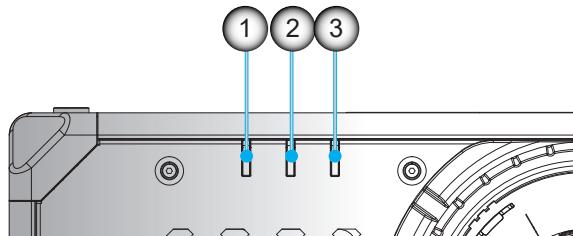

1. Light
2. Status
3. AV Mute

The LED status indicators are located on the rear of the projector. Each LED is defined below.

Message	Light			Status			AV Mute	
	Green	Orange	Red	Green	Orange	Red	Green	Orange
Standby State								
Power on (Warm up)						Flashing		
Power on & Laser diode on	Steady			Steady			Steady	
Power off (Cooling down)					Flashing			
AV mute is off (Image is displayed)	Steady			Steady			Steady	
AV mute is on (Image is black)	Steady			Steady				Steady
Projector communication/operation	Steady			Flashing			Steady	
Firmware upgrade				Flashing	Flashing			
Burnin	Steady			Steady			Steady	
Factory Reset			Steady	Steady				
Error (Over temperature)							Steady	
Error (Fan failure)							Flashing	
Error (Color Wheel failure)							Flashing	

**Note:** Keypad LED (Power Key) will be in steady red for standby mode.

# ADDITIONAL INFORMATION

## Specifications

Optical	Description
Resolution	WUXGA (1920 x 1200)
Lens	Power Zoom/Focus and full lens shift
Image size (diagonal)	50"~500"
Projection distance	Please refer to "Throw Distance" spec. in "Image size and projection distance" on page 96.

Electrical	Description
Inputs	2 x HDMI In (version 2.0) (with locking screw) 1 x DisplayPort 1.2a 1 x DVI-D 1 x VGA In 1 x HDBaseT 1 x 3G-SDI In 1 x 3D SYNC In
Outputs	1 x HDMI Out (version 2.0) (with locking screw) 1 x 3G-SDI Out 1 x 3D SYNC Out
Control port	2 x RS232 (D-sub 9 pin) (PC Control) 2 x Wired in/out (3.5mm phone jack) (Remote In/out) 1 x 12V Trigger (3.5mm phone jack / Black) 1 x USB type A (5V/0.5A) 1 x RJ-45 (LAN) 2 x IR Receiver (Front / Top)
Power requirement	100-240V~, 50/60Hz, 16A 200-240V~, 50/60Hz, 8A

Mechanical	Description
Installation orientation	360° rotation, no restrictions
Dimensions	650 (W) x 682 (D) x 300.9 (H) mm (w/o lens, with feet) 650 (W) x 682 (D) x 251 (H) mm (w/o lens, w/o feet)
Environmental conditions	Operating: 0~50°C(32~122°F); 10~85%RH, non-condensing Storage: -10~60°C(14~140°F); 5~90%RH, non-condensing <b>Note:</b> If temperature is >40°C(104°F) or altitude >5000 ft, then the system will dim output brightness to ensure the normal operation of the projector.

**Note:** All specifications are subject to change without notice.

# ADDITIONAL INFORMATION

## Manual Warp Control Instruction

1. The Warp/Blend control option needs to be switched to the OSD option. Steps: Menu -> Display -> Geometric Correction -> Warp Control -> Advanced.
2. Changing the grid color can help to distinguish between grid color lines on each projector when completing the warping adjustment. The Warp/Blend grid color options include: Green (default), Magenta, Red, and Cyan. Steps: Menu -> Display -> Geometric Correction -> Advanced Warp -> Grid Color.




3. Set Blend overlap size. Steps: Menu -> Display -> Geometric Correction -> Advanced Warp -> Blend Setting -> Blend Width. The options and effective range of overlap size as follows:
  - (a) Left: 0 (0%) / 192 (10%) ~ 960 (50%)
  - (b) Right: 0 (0%) / 192 (10%) ~ 960 (50%)
  - (c) Top: 0 (0%) / 120 (10%) ~ 600 (50%)
  - (d) Bottom: 0 (0%) / 120 (10%) ~ 600 (50%)

### 3.1 Setup projectors and then set the overlap size according to the actual projection overlap.

- A. Make sure the overlap size for is smaller than the overlap size of actual projection.
- B. Turning on the blend width screen for all the projectors helps determine the effective overlap range.


See below for settings for a 1x2 layout as an example, and follow the steps below:

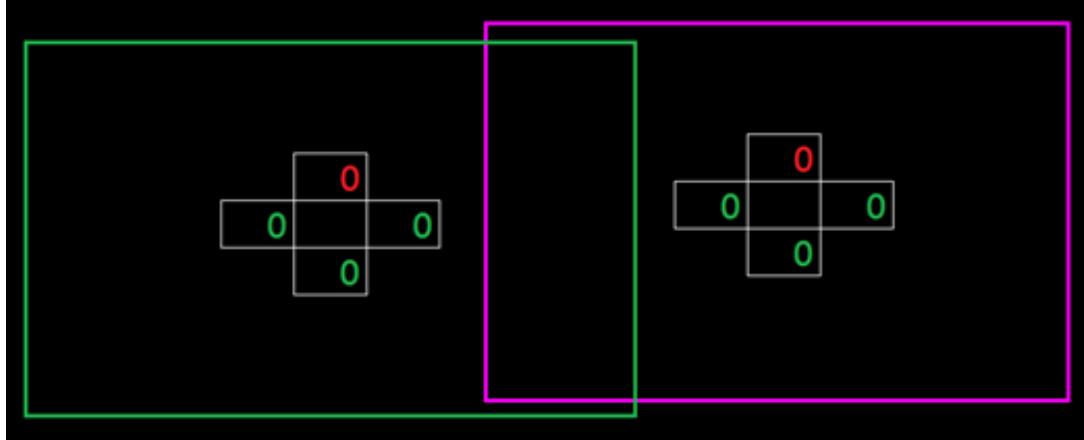

### 3.2 Adjust the overlap size of right boundary of left projector first.


- A. The left side of the overlap area will shift along with the values of the blend setting. Overlap area is shown by a square with light color.
- B. Adjust overlap size until the left side of overlap area of left projector does not exceed the left boundary of right projector.

# ADDITIONAL INFORMATION

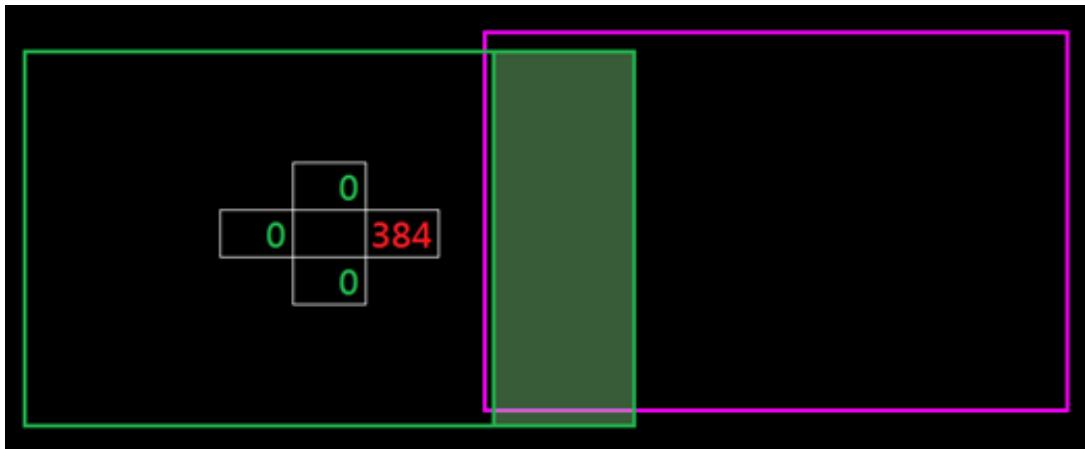

3.3 Adjust the overlap size of left boundary of right projector.

- A. The right side of overlap area will shift along with the values of blend setting. Overlap area is shown by a square with light color.
- B. Adjust the value of the blend setting to the same as the overlap size of the right boundary of left projector.
- C. Make sure the right side of overlap area does not exceed the right boundary of left projector.
- D. If not, reduce the value of blend setting until the result matches the condition of step C.
- E. If the value of the blend setting of the right projector is less than left projector, adjust the value of left projector to the same as right projector.

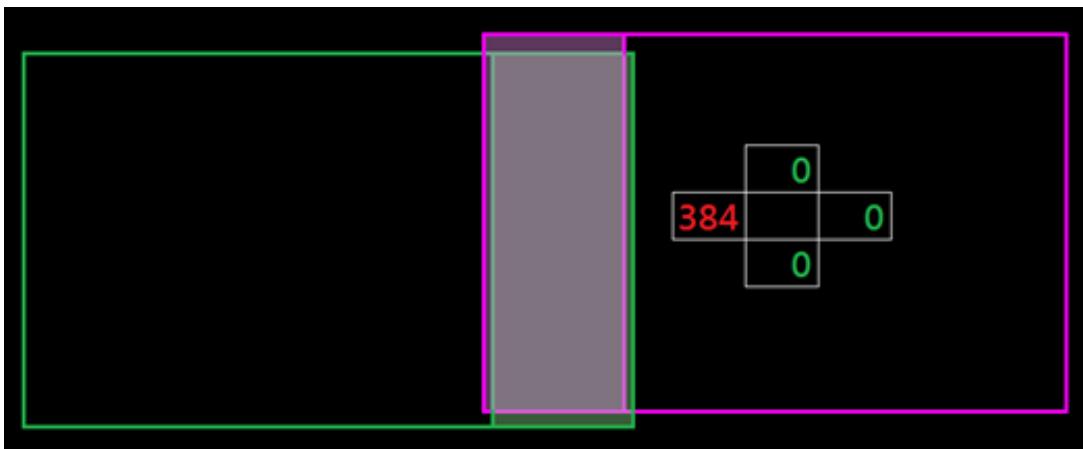

4. Use grid points and warp inner to complete the warping calibration.

- A. Grid points options include: 2x2 (default), 3x3, 5x5, 9x9, and 17x17.

**Note:**

1. Use  $\uparrow$ ,  $\downarrow$ ,  $\leftarrow$  or  $\rightarrow$  buttons to select the grid point.
2. Press Enter button to select the point.
3. Then press  $\uparrow$ ,  $\downarrow$ ,  $\leftarrow$  or  $\rightarrow$  buttons to shift the selected point location.
4. Press  $\leftarrow$  to return to the previous page.


- B. Warp inner: Turn On/Off inner control.

**Note:** Warp inner does not support 2x2 grid point.

- C. The overlap area is divided into four parts equally in warping pattern.
- D. Use the warp adjustment to align the grid lines of the overlap with the two projectors to finish

# ADDITIONAL INFORMATION

manual blending. Follow the steps below:

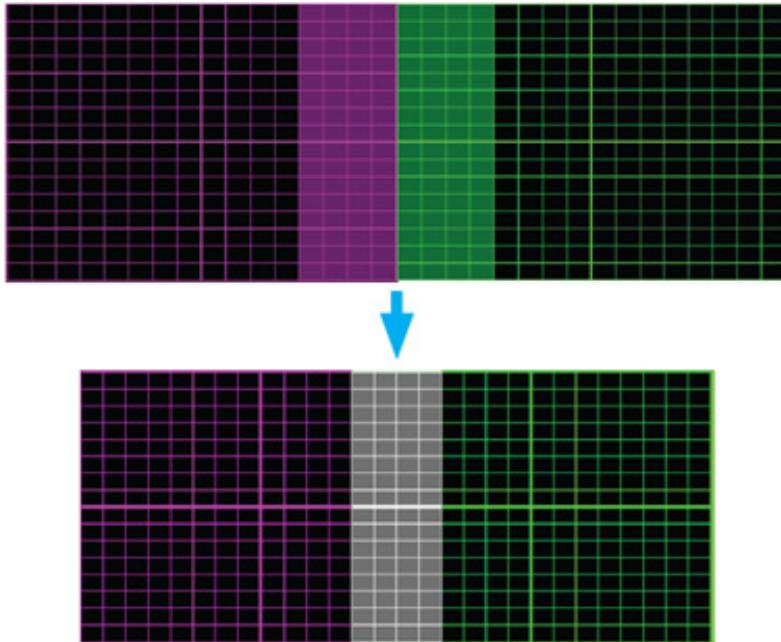

- (1) Select grid point 2x2 and align boundary of projectors with the side of overlap areas.
- (2) Depending on the installation situation select grid points 3x3, 5x5, 9x9, or 17x17 to adjust the grid line.
- (3) Turn on warp inner to adjust the inner grid.
- (4) All the grid lines are aligned. Press “Exit” button to exit grid pattern and then manual blending setting is finished.
5. When the grid lines are warped from straight to curve, the grid lines may become distorted or jagged. To avoid this users can adjust the warp sharpness to blur or sharpen the edge of the images.

# ADDITIONAL INFORMATION

## RS232 protocol function list

Baud Rate : 115200 (default, depends on user setting)

Data Bits: 8

Parity: None

Stop Bits: 1

Flow Control : None

UART16550 FIFO: Disable

### ■ Write Command

~	X	X	X	X	X	n	CR	
Lead Code	Projector ID				Command	space	variable	carriage return
Prefix	00~99 (Default: 00)				000~999		0~9999	suffix

Pass:

Fail:

### ■ Read Command

~	X	X	X	X	X	n	CR	
Lead Code	Projector ID				Command	space	variable	carriage return
Prefix	00~99 (Default: 00)				000~999		0~9999	suffix

### Response Format

Pass:

Fail:

### ■ System Automatically Send

**Note:** There is a <CR> after all ASCII commands 0D is the HEX code for <CR> in ASCII code.

# ADDITIONAL INFORMATION

Character to HEX table

Character	HEX
~	7E
0	30
1	31
2	32
3	33
4	34
5	35
6	36
7	37
8	38
9	39
Space	20
CR (Enter)	0D

e.g.

ASCII to HEX

RS232 Command	~	0	0	1	9	5		1	CR
HEX	7E	30	30	31	39	35	20	31	0D

Main Menu: Image

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command		
							Command		Response		Command	
							CMD	space	Set	Para.	Fail	Pass
Picture Mode				[None]			~XX20	1			F	P
				Presentation			~XX20	2			F	P
				Bright			~XX20	23			F	P
				Super Bright (Depends on model)			●	~XX20	3		F	P
				Cinema			~XX20	21			F	P
				HDR			~XX20	4			F	P
				sRGB			~XX20	13			F	P
				DICOM SIM.			~XX20	19			F	P
				Blending			~XX20	9			F	P
				3D			~XX20	18			F	P
Dynamic Range				2D High Speed			~XX20	6,26,30~37			F	P
				User			●	~XX565	0		F	P
				Off			●	~XX565	1		F	P
				Auto			●	~XX566	0		F	P
				HDR Picture Mode			●	~XX566	1		F	P
				Bright			●	~XX566	2		F	P
				Standard			●	~XX566	3		F	P
				Film			●	~XX35	1		F	P
				Detail			●	~XX35	3		F	P
				Brightness	0-100	1	●	~XX21	0~100		F	P
Contrast				Contrast	0-100	1	●	~XX22	0~100		F	P
				Sharpness	1 - 15	1	●	~XX23	1~15		F	P
				Gamma			●	~XX35	4		F	P
				Film			●	~XX35	21		F	P
				Graphics			●	~XX35	9		F	P
				Standard(2,2)			●	~XX35	10		F	P
				Vivid			●	~XX35	11		F	P
				3D			●	~XX35	5		F	P
				Blackboard			●	~XX35	6		F	P
				DICOM SIM.			●	~XX35	12		F	P
Dynamic Contrast				1.8			●	~XX35	8		F	P
				2.0			●	~XX191	0		F	P
				2.4			●	~XX191	1		F	P
				2.6			●	~XX253	1~15		F	P
				Speed	1-15	1	●	~XX254	0~3		F	P
				Strength	0-3	1	●	~XX255	50~100		F	P
				Level	50%-100%	1%	●	~XX218	0		F	P
				Extreme Black	Off		●	~XX218	1		F	P
				AV Mute Timer	On		●	~XX256	0~20		F	P
				Black Signal Level	0.05-10.0s	0.5s	●	~XX257	0~5		F	P
Color Settings				Color	0-100	1	●	~XX45	0~100		F	P
				Tint	0-100	1	●	~XX44	0~100		F	P
				Color Temperature	Warm		●	~XX36	4		F	P
					Standard		●	~XX36	1		F	P
					Cool		●	~XX36	2		F	P
				White Balance	Red Gain	1	●	~XX24	0~100		F	P
				Green Gain	0~100	1	●	~XX25	0~100		F	P
110 English				Blue Gain	0~100	1	●	~XX26	0~100		F	P
				Red Offset	0~100	1	●	~XX27	0~100		F	P
				Green Offset	0~100	1	●	~XX28	0~100		F	P

# ADDITIONAL INFORMATION

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command			
							CMD	space	Set Para.	Command	Response	Command	Response
		Blue Offset		0~100	1	•	~XX29	0~100		F	P		
	White Enhancement			0~10	1	•	~XX34	0~10		F	P		
	Color Space			Auto			~XX37	1		F	P		
				RGB (0~255)			~XX37	2		F	P		
				RGB (16~235)			~XX37	4		F	P		
				REC709			~XX37	5		F	P		
				REC601			~XX37	6		F	P		
	Color Matching	Auto Test Pattern		Off		•	~XX411	0		F	P		
				On			~XX411	1		F	P		
		Red	Hue	0~254	1		~XX327	0~254		F	P		
			Saturation	0~254	1	•	~XX333	0~254		F	P		
			Luminance	0~254	1		~XX339	0~254		F	P		
		Green	Hue	0~254	1		~XX328	0~254		F	P		
			Saturation	0~254	1		~XX334	0~254		F	P		
			Luminance	0~254	1		~XX340	0~254		F	P		
		Blue	Hue	0~254	1		~XX329	0~254		F	P		
			Saturation	0~254	1	•	~XX335	0~254		F	P		
			Luminance	0~254	1		~XX341	0~254		F	P		
		Cyan	Hue	0~254	1		~XX330	0~254		F	P		
			Saturation	0~254	1	•	~XX336	0~254		F	P		
			Luminance	0~254	1		~XX342	0~254		F	P		
		Magenta	Hue	0~254	1		~XX332	0~254		F	P		
			Saturation	0~254	1	•	~XX338	0~254		F	P		
			Luminance	0~254	1		~XX344	0~254		F	P		
		Yellow	Hue	0~254	1		~XX331	0~254		F	P		
			Saturation	0~254	1	•	~XX337	0~254		F	P		
			Luminance	0~254	1		~XX343	0~254		F	P		
		White	Red	0~254	1		~XX345	0~254		F	P		
			Green	0~254	1	•	~XX346	0~254		F	P		
			Blue	0~254	1		~XX347	0~254		F	P		
		Reset				X	~XX215	1		F	P		
Wall Color			Off				~XX506	0		F	P		
			Blackboard				~XX506	1		F	P		
			Light Yellow				~XX506	7		F	P		
			Light Green				~XX506	3		F	P		
			Light Blue				~XX506	4		F	P		
			Pink				~XX506	5		F	P		
			Gray				~XX506	6		F	P		
3D Setup	3D Mode		Off			•	~XX230	4		F	P		
			Active 3D				~XX230	0		F	P		
			Passive 3D				~XX230	5		F	P		
	3D Format		Auto				~XX405	0		F	P		
			Frame Packing				~XX405	7		F	P		
			Side by Side			•	~XX405	1		F	P		
			Top and Bottom				~XX405	2		F	P		
			Frame Sequential				~XX405	3		F	P		
	3D Tech		DLP-link			•	~XX230	1		F	P		
			3D Sync				~XX230	3		F	P		
	3D-2D		3D				~XX400	0		F	P		
			L			•	~XX400	1		F	P		
			R				~XX400	2		F	P		

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command			
							CMD	space	Set Para.	Command	Response	Command	Response
	3D Sync Out			To Emitter			~XX232	0		F	P		
				To Next Projector		•	~XX232	1		F	P		
	3D Invert			Off			~XX231	0		F	P		
				On		•	~XX231	1		F	P		
	Frame Delay			1~200	1	•	~XX233	1~200		F	P		
	Reset				X	~XX234	1		F	P			
Save to User					X	~XX424	1		F	P			
Apply to User			User-Presentation				~XX20	31		F	P		
			User-Bright				~XX20	32		F	P		
			User-Super Bright				~XX20	30		F	P		
			User-Cinema				~XX20	33		F	P		
			User-HDR				~XX20	26		F	P		
			User-sRGB				~XX20	34		F	P		
			User-DICOM SIM.				~XX20	35		F	P		
			User-Blending				~XX20	36		F	P		
			User-3D				~XX20	6		F	P		
			User-2D High Speed				~XX20	37		F	P		
Reset					X	~XX509	1		F	P			

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Main Menu: Display

Level 2	Level 3	Level 4	Level 5	Level 6	Option / Value	Step	User Data	Write Command				Read Command					
								Command		Response		Command		Response			
								CMD	space	Set Para.	Fail	Pass	CMD	space	Value	Fail	Pass
Aspect Ratio					Auto		●	~XX60	7		F	P	~XX127	1	F	O k 7	
					4:3			~XX60	1		F	P	~XX127	1	F	O k 1	
					16:9			~XX60	2		F	P	~XX127	1	F	O k 2	
					16:10			~XX60	3		F	P	~XX127	1	F	O k 3	
					LBX			~XX60	5		F	P	~XX127	1	F	O k 5	
					Native			~XX60	6		F	P	~XX127	1	F	O k 6	
Digital Zoom	Proportional				Off		●	~XX364	0		F	P					
					On			~XX364	1		F	P					
					Horizontal			~XX504	50~400		F	P					
					Vertical			~XX505	50~400		F	P					
					Horizontal Shift			~XX365	0~100		F	P					
					Vertical Shift			~XX366	0~100		F	P					
					Reset			X	~XX364	9	F	P					
Image Shift					H. Position		●	~XX63	0~100		F	P					
					V. Position			~XX64	0~100		F	P					
					Reset			X	~XX172	1	F	P					
Geometric Correction	Warp Control				Basic		●	~XX142	1		F	P					
					Advanced			~XX142	5		F	P					
					AP			~XX142	2		F	P					
	Basic Warp	Keystone	Horizontal		0~40		●	~XX65	0~40		F	P					
					Vertical			~XX66	0~40		F	P					
		Pincushion	Horizontal		0~100		●	~XX300	0~100		F	P					
					Vertical			~XX301	0~100		F	P					
		4-Corner	Top Left (icon)		right (0~120)		●	~XX59	1		F	P					
					left (0~120)			~XX59	2		F	P					
					up (0~80)			~XX59	3		F	P					
					down (0~80)			~XX59	4		F	P					
			Top Right (icon)		right (0~120)		●	~XX59	5		F	P					
					left (0~120)			~XX59	6		F	P					
					up (0~80)			~XX59	7		F	P					
					down (0~80)			~XX59	8		F	P					
		Bottom Left (icon)			right (0~120)		●	~XX59	9		F	P					
					left (0~120)			~XX59	10		F	P					
	Advanced Warp	Grid Color			up (0~80)		●	~XX59	11		F	P					
					down (0~80)			~XX59	12		F	P					
					right (0~120)			~XX59	13		F	P					
					left (0~120)			~XX59	14		F	P					
		Grid Background			up (0~80)		●	~XX59	15		F	P					
					down (0~80)			~XX59	16		F	P					
		Warp Setting	Grid Points		2x2		●	~XX144	1		F	P					
					3x3			~XX144	2		F	P					
					5x5			~XX144	3		F	P					
					9x9			~XX144	4		F	P					
		Warp Inner			17x17		●	~XX144	5		F	P					
					Off			~XX146	0		F	P					
					On			~XX146	1		F	P					
		Warp Sharpness			0 ~ 9		●	~XX148	0~9		F	P					

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Level 2	Level 3	Level 4	Level 5	Level 6	Option / Value	Step	User Data	Write Command				Read Command																			
								Command		Response		Command		Response																	
								CMD	space	Set Para.	Fail	Pass	CMD	space	Value	Fail	Pass														
Blend Setting	Overlap Grid Number	Blend Width	4	X	X	XX169 1 XX169 2 XX169 3 XX169 4 XX169 5 XX170 1 XX170 2 XX170 3 XX170 4 XX170 5 XX170 6 XX170 7	F P F P F P F P F P F P F P F P F P F P																								
		Gamma	1.8 1.9 2 2.1 2.2 2.3 2.4	X																											
	Black Level	Area	Bottom Top	X																											
		Enable	Off On	X																											
		Edit Area	Add Point Remove Point	X																											
		Brightness	Brightness Red Green Blue Boundary Exit Red Green Blue Reset	RGB + 1 0-255 0-255 0-255 Off On 0-255 0-255 0-255 Bottom Top All	X X X X X X X X X X																										
Memory	Save Memory Apply Memory Clear Memory		Memory 1 - Memory 5	X	XX167 3 XX167 5 XX167 1 XX141 1~5 XX147 1~5 XX174 1	X	F P F P F P F P F P F P		XX137 1	F O k 1~5																					

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Level 2	Level 3	Level 4	Level 5	Level 6	Option / Value	Step	User Data	Write Command				Read Command								
								Command		Response		Command		Response						
								CMD	Spec	Set Para.	Fail	Pass	CMD	Spec	Value	Fail	Pass			
	Reset						X	~XX561	1		F	P								
Edge Mask				0~10		1	•	~XX61	0~10		F	P								
Freeze Screen				Unfreeze			X	~XX04	0		F	P								
				Freeze				~XX04	1		F	P								
Test Pattern				Off				~XX195	0		F	P								
				Green Grid				~XX195	3		F	P								
				Magenta Grid				~XX195	4		F	P								
				White Grid				~XX195	1		F	P								
				White				~XX195	2		F	P								
				Black				~XX195	11		F	P								
				Red				~XX195	5		F	P								
				Green				~XX195	6		F	P								
				Blue				~XX195	7		F	P								
				Yellow				~XX195	8		F	P								
				Magenta				~XX195	9		F	P								
				Cyan				~XX195	10		F	P								
				ANSI Contrast 4x4				~XX195	14		F	P								
				Color bar				~XX195	13		F	P								
				Full screen				~XX195	15		F	P								
PIP/PBP	Screen			Off				~XX302	0		F	P								
				PIP			•	~XX302	1		F	P								
				PBP				~XX302	2		F	P								
	Main Source			[no Signal]									~XX121	1	F	O	k	0		
				VGA				~XX12	5		F	P			~XX121	1	F	O	k	2
				HDMI1				~XX12	1		F	P			~XX121	1	F	O	k	7
				HDMI2				~XX12	15		F	P			~XX121	1	F	O	k	8
				DVI-D				~XX12	2		F	P			~XX121	1	F	O	k	1
				Display Port				~XX12	20		F	P			~XX121	1	F	O	k	15
				3G-SDI				~XX12	22		F	P			~XX121	1	F	O	k	18
				HDBaseT				~XX12	21		F	P			~XX121	1	F	O	k	16
	Sub Source			[no Signal]									~XX131	1	F	O	k	0		
				VGA				~XX305	2		F	P			~XX131	1	F	O	k	2
				HDMI1				~XX305	1		F	P			~XX131	1	F	O	k	7
				HDMI2				~XX305	4		F	P			~XX131	1	F	O	k	8
				DVI-D				~XX305	9		F	P			~XX131	1	F	O	k	1
				Display Port				~XX305	17		F	P			~XX131	1	F	O	k	15
				3G-SDI				~XX305	11		F	P			~XX131	1	F	O	k	17
				HDBaseT				~XX305	10		F	P			~XX131	1	F	O	k	16
	Swap						X	~XX306	1		F	P								
	Size			Small				~XX304	3		F	P								
				Medium			•	~XX304	2		F	P								
	Location			PBP, Main Left				~XX304	1		F	P								
				PBP, Main Top				~XX303	5		F	P								
				PBP, Main Right				~XX303	6		F	P								
				PBP, Main Bottom				~XX303	7		F	P								
				PIP, Bottom Right				~XX303	8		F	P								
				PIP, Bottom Left				~XX303	4		F	P								
				PIP, Top Left				~XX303	3		F	P								
				PIP, Top Right				~XX303	1		F	P								
	Reset						X	~XX303	2		F	P								
								~XX173	1		F	P								

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

## Main Menu: Input Settings

Level 2	Level 3	Level 4	Option / Value	Step	User Data	Write Command					Read Command				
						Command			Response		Command			Response	
						CMD	spat	Set Para.	Fail	Pass	CMD	spat	Value	Fail	Pass
Auto Source			Off		●	~XX563	0		F	P					
			On			~XX563	1		F	P					
Quick Resync			Off		●	~XX315	0		F	P					
			On			~XX315	1		F	P					
Active Inputs			VGA		●	~XX408	5		F	P					
			HDMI1			~XX408	1		F	P					
			HDMI2			~XX408	15		F	P					
			DVI-D			~XX408	2		F	P					
			Display Port			~XX408	20		F	P					
			3G-SDI			~XX408	22		F	P					
Latency Adjustment			Normal		●	~XX220	0		F	P					
			2D Ultra			~XX220	1		F	P					
Backup Input	Auto Switch	Off			●	~XX264	0		F	P					
			On			~XX264	1		F	P					
		Current Signal	(read only)		X										
			HDMI1		~XX265		7		F	P					
			HDMI2		~XX265		8		F	P					
			HDBaseT		~XX265		16		F	P					
		Second Input	Display Port		●										
			HDMI1				~XX266	7		F	P				
			HDMI2				~XX266	8		F	P				
			HDBaseT				~XX266	16		F	P				
		Backup Input Status	Display Port		●										
			Active/Inactive (read only)				X								
			Changed/No Change (read only)				X								
		Backup Input Info.	Current Signal (read only)				X								
			Active/Inactive (read only)		X										
			Changed/No Change (read only)				X								

Level 2	Level 3	Level 4	Option / Value	Step	User Data	Write Command					Read Command				
						Command			Response		Command			Response	
						CMD	spat	Set Para.	Fail	Pass	CMD	spat	Value	Fail	Pass
VGA			First Input		X										
			Resolution (read only)												
			Horz Refresh (read only)												
			Color Space (read only)												
			HDR Yes/No (read only)												
			Second Input		X										
			Resolution (read only)												
			Horz Refresh (read only)												
			Color Space (read only)												
			HDR Yes/No (read only)												
HDMI		Output	HDMI 1		●				~XX309	5	F	P			
			HDMI 2												
		HDMI 1 EDID	1.4			●			~XX236	1	F	P			
			2												
HDBaseT		HDMI 2 EDID	1.4		●				~XX237	1	F	P			
			2												
		EDID	1.4												
			2		●				~XX238	1	F	P			
		Reset				X			~XX178	1	F	P			

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

## Main Menu:Device Setup

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command			
							Command		Response	Command		Response	
							CMD	Value	Set Para.	Fail	Pass	CMD	Value
Language				English	•	X	~XX70 1	1	F	P			
				Deutsch			~XX70 2	2	F	P			
				Français			~XX70 3	3	F	P			
				Italiano			~XX70 4	4	F	P			
				Español			~XX70 5	5	F	P			
				Português			~XX70 6	6	F	P			
				Polski			~XX70 7	7	F	P			
				Nederlands			~XX70 8	8	F	P			
				Norsk			~XX70 10	10	F	P			
				繁體中文			~XX70 13	13	F	P			
				簡體中文			~XX70 14	14	F	P			
				日本語			~XX70 15	15	F	P			
				한국어			~XX70 16	16	F	P			
				Русский			~XX70 17	17	F	P			
				Magyar			~XX70 18	18	F	P			
				ไทย			~XX70 21	21	F	P			
Projection	Ceiling	Auto		Auto	•	X	~XX523 3	3	F	P			
				On			~XX523 2	2	F	P			
		Off		Off			~XX523 1	1	F	P			
				On			~XX524 0	0	F	P			
Lens Settings	Focus	+ (icon)		+ (icon)	•	X	~XX308 1	1	F	P			
		- (icon)		- (icon)			~XX308 2	2	F	P			
	Zoom	+ (icon)		- (icon)	•	X	~XX307 1	1	F	P			
		- (icon)		- (icon)			~XX307 2	2	F	P			
	Lens Shift	Up (icon)		Down (icon)	X	X	~XX84 3	3	F	P			
		Down (icon)		Left (icon)			~XX84 4	4	F	P			
		Left (icon)		Right (icon)			~XX84 5	5	F	P			
		Right (icon)					~XX84 6	6	F	P			
	Lens Memory	Save Memory		Memory 1 - Memory 5	X	X	~XX360 1~5	1~5	F	P			
		Apply Memory		Memory 1 - Memory 5			~XX359 1~5	1~5	F	P			
		Clear Memory					~XX361 1	1	F	P			
Active Image Setup	Lens Calibration				•	X	~XX525 1	1	F	P			
		Lock		Unlock			~XX349 1	1	F	P			
	Reset				X	X	~XX349 2	2	F	P			
							~XX175 1	1	F	P			
							~XX308 3	3	F	P			
Schedule	Active Focus				X	X	~XX261 1	1	F	P			
	Active Color Uniformity	Calibration			X	X	~XX222 1	1	F	O	k 0		
		Target Selection	Pop-up pattern										
Schedule		Reset			X	X	~XX261 9	9	F	P			
		Date and Time		----/-/- --:--									
		Schedule Mode		Off	•	X	~XX284 0	0	F	P			
				On			~XX284 1	1	F	P			
		View Today		Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday									
<b>Note:</b> Some commands are not supported, it depends on models.													

# ADDITIONAL INFORMATION

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command		
							Command	Response	Command	Response	Command	Response
								CMD	Value	Fail	Pass	
Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday	Schedule Enable		Off			•	~XX284 0~n	F	P			
			On				~XX284 1~n	F	P			
	Event 01-16	Time	00:00 ~ 23:59				~XX471 dhmmmnnaabb	F	P			
		Function	Off				~XX471 dhmmmnnaabb	F	P			
			Power Settings				~XX471 dhmmmnnaabb	F	P			
			Input Source				~XX471 dhmmmnnaabb	F	P			
			Light Source Mode				~XX471 dhmmmnnaabb	F	P			
			Shutter				~XX471 dhmmmnnaabb	F	P			
		Event	Off				~XX471 dhmmmnnaabb	F	P			
		(Function = Power Settings)	Power On				~XX471 dhmmmnnaabb	F	P			
			Eco				~XX471 dhmmmnnaabb	F	P			
			Active				~XX471 dhmmmnnaabb	F	P			
			Communication				~XX471 dhmmmnnaabb	F	P			
		(Function = Input Source)	VGA			•	~XX471 dhmmmnnaabb	F	P			
			HDMI1				~XX471 dhmmmnnaabb	F	P			
			HDMI2				~XX471 dhmmmnnaabb	F	P			
			DVI-D				~XX471 dhmmmnnaabb	F	P			
			Display Port				~XX471 dhmmmnnaabb	F	P			
			3G-SDI				~XX471 dhmmmnnaabb	F	P			
			HDBaseT				~XX471 dhmmmnnaabb	F	P			
		(Function = Light Source Mode)	Normal Mode				~XX471 dhmmmnnaabb	F	P			
			Eco Mode				~XX471 dhmmmnnaabb	F	P			
			Custom Brightness				~XX471 dhmmmnnaabb	F	P			
		(Function = Shutter)	Shutter On				~XX471 dhmmmnnaabb	F	P			
			Shutter Off				~XX471 dhmmmnnaabb	F	P			
		Reset	Yes / Cancel (Dialog box)			X	~XX472 n~nn	F	P			
	Copy Events To	Monday					~XX473 1~n	F	P			
		Tuesday					~XX473 2~n	F	P			
		Wednesday					~XX473 3~n	F	P			
		Thursday					~XX473 4~n	F	P			
		Friday					~XX473 5~n	F	P			
		Saturday					~XX473 6~n	F	P			
		Sunday					~XX473 7~n	F	P			
	Reset the Day					X	~XX471 9~n	F	P			
	Reset Schedule					X	~XX284 9	F	P			
Date and Time	Clock Mode		Use NTP Server			X	~XX474 1	F	P			
			Manual				~XX474 3	F	P			
	Date		2000 ~ 2037 (Year)				~XX475 nnnn	F	P			
			01 ~ 12 (Month)			X	~XX476 nn	F	P			
	Time		01 ~ 31 (Day)				~XX477 nn	F	P			
			00 ~ 23 (Hour)			X	~XX478 nn	F	P			
			00 ~ 59 (Minute)				~XX479 nn	F	P			
	Daylight Saving Time		Off			X	~XX480 0	F	P			
			On				~XX480 1	F	P			
	NTP Server		time.google.com				~XX481 1	F	P			
			asia.pool.ntp.org				~XX481 2	F	P			
			europe.pool.ntp.org				~XX481 3	F	P			
			north-america.pool.ntp.org				~XX481 4	F	P			
	Time Zone		UTC+14:00				~XX482 1	F	P			
			UTC+13:00				~XX482 2	F	P			
			UTC+12:45				~XX482 3	F	P			
			UTC+12:00				~XX482 4	F	P			
			UTC+11:00				~XX482 5	F	P			
			UTC+10:30				~XX482 6	F	P			
			UTC+10:00				~XX482 7	F	P			
			UTC+09:30				~XX482 8	F	P			
			UTC+09:00				~XX482 9	F	P			

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command			
							Command	Response	CMD	Value	Response	CMD	
				UTC+08:45		X	~XX482 10	F					
				UTC+08:00			~XX482 11	F	P				
				UTC+07:00			~XX482 12	F	P				
				UTC+06:30			~XX482 13	F	P				
				UTC+06:00			~XX482 14	F	P				
				UTC+05:45			~XX482 15	F	P				
				UTC+05:30			~XX482 16	F	P				
				UTC+05:00			~XX482 17	F	P				
				UTC+04:30			~XX482 18	F	P				
				UTC+04:00			~XX482 19	F	P				
				UTC+03:30			~XX482 20	F	P				
				UTC+03:00			~XX482 21	F	P				
				UTC+02:00			~XX482 22	F	P				
				UTC+01:00			~XX482 23	F	P				
				UTC+00:00			~XX482 24	F	P				
				UTC-01:00			~XX482 25	F	P				
				UTC-02:00			~XX482 26	F	P				
				UTC-03:00			~XX482 27	F	P				
				UTC-03:30			~XX482 28	F	P				
				UTC-04:00			~XX482 29	F	P				
				UTC-05:00			~XX482 30	F	P				
				UTC-06:00			~XX482 31	F	P				
				UTC-07:00			~XX482 32	F	P				
				UTC-08:00			~XX482 33	F	P				
				UTC-09:00			~XX482 34	F	P				
				UTC-09:30			~XX482 35	F	P				
				UTC-10:00			~XX482 36	F	P				
				UTC-11:00			~XX482 37	F	P				
				UTC-12:00			~XX482 38	F	P				
				Update Interval		X	~XX483 1	F	P				
				Hourly			~XX483 3	F	P				
				Daily		X	~XX484 1	F	P				
Power Settings				Power Mode (Standby)			~XX114 0	F	P				
				Active			~XX114 1	F	P				
				Communication			~XX114 3	F	P				
				Off			~XX113 0	F	P				
				On			~XX113 1	F	P				
				0-180 m			~XX106 0~180	F	P				
				0-16 h			~XX107 0~960	F	P				
Light Source Settings				12V Trigger			~XX192 0	F	P				
				Reset			~XX192 1	F	P				
				Light Source Mode			~XX177 1	F	P				
				Normal			~XX110 1	F	P				
				Eco Mode			~XX110 2	F	P				
				Custom Power			~XX110 9	F	P				
				Custom Brightness			~XX326 30~100	F	P				
Shutter				Brightness Level			~XX522 0	F	P				
				Constant Brightness			~XX522 1	F	P				
				Light Sensor Calibration			~XX242 1	F	O k 0				
Security				Fade-In			~XX267 1~10	F	P				
				Fade-Out			~XX268 1~10	F	P				
				Startup			~XX269 0	F	P				
Security Timer				Shutter Off			~XX269 1	F	P				
				Shutter On			~XX78 0 ~nnnn	F	P				
				Off			~XX78 1 ~nnnn	F	P				
Logo Setup				On			~XX537 00~35	F	P				
				Month			~XX538 00~29	F	P				
				Day			~XX544 1 -	F	O k 00~35				
							~XX544 2	F	O k 00~29				

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command			Read Command		
							Command	Response	CMD	Value	Response	CMD
				Hour		•	~XX539 00~23	F	P			
				Change Password		X	~XX77 MMDDHH	F	P			
On Screen Display				Menu Location			~XX406 mnnn~nnnn	F	P			
				Top Left			~XX72 1	F	P			
				Top Right			~XX72 2	F	P			
				Center			~XX72 3	F	P			
				Bottom Left			~XX72 4	F	P			
				Bottom Right			~XX72 5	F	P			
				0-9			~XX526 0~9	F	P			
Logo Setup				Menu Transparency			~XX515 0	F	P			
				Menu Timer			~XX515 1	F	P			
				5s			~XX515 3	F	P			
				10s			~XX515 4	F	P			
				15s			~XX515 5	F	P			
				30s			~XX515 6	F	P			
				60s			~XX102 0	F	P			
Backlight				Information Hide			~XX102 1	F	P			
				Background			~XX104 1	F	P			
				Blue			~XX104 0	F	P			
				Black			~XX104 5	F	P			
				White			~XX104 7	F	P			
				Logo			~XX82 1	F	P			
				Logo Capture			~XX82 3	F	P			
User Data				Delete Logo			~XX82 4	F	P			
				Captured Logo			~XX82 2	F	P			
				User Logo			~XX407 1	F	P			
				Keypad			~XX362 0	F	P			
				Power Key			~XX362 1	F	P			
				High Altitude			~XX362 3	F	P			
				Save All Settings			~XX362 4	F	P			
System Update (FOTA)				Load All Settings			~XX101 0	F	P			
				Auto			~XX101 1	F	P			
				Auto Download			~XX258 1~5	F	P			
				Update			~XX259 1~5	F	P			
				Reset OSD			~XX168 0	F	P			
				Reset to Default			~XX168 1	F	P			
				Reset Selective			~XX168 3	F	P			
Reset				Image			~XX168 4	F	P			
				Display			~XX173 1	F	P			

# ADDITIONAL INFORMATION

## Main Menu: Communication

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command				Read Command						
							Command			Response		Command		Response			
							CMD	space	Set Para.	Fail	Pass	CMD	space	Value	Fail	Pass	
Projector ID				0~99		●	~XX79	00~99		F	P	~XX558	1	F	O	k	00~99
Remote Setup	Remote Code			0~99		●	~XX350	00~99		F	P	~XX138	1	F	O	k	0~9
	Quick Switch Code			Off			~XX314	0		F	P	~XX138	3	F	O	k	0
				1~9		●	~XX314	0~9		F	P	~XX138	3	F	O	k	0~9
	IR Function	Front	Off			●	~XX11	4		F	P	~XX542	1	F	O	k	0
			On			●	~XX11	5		F	P	~XX542	1	F	O	k	1
		Top	Off			●	~XX11	6		F	P	~XX542	2	F	O	k	0
			On			●	~XX11	7		F	P	~XX542	2	F	O	k	1
	HDBaseT		Off			●	~XX11	10		F	P	~XX542	3	F	O	k	0
			On			●	~XX11	9		F	P	~XX542	3	F	O	k	1
User1		Freeze Screen					~XX117	1		F	P						
		Blank Screen					~XX117	2		F	P						
		PIP/PBP					~XX117	3		F	P						
		Aspect Ratio					~XX117	4		F	P						
		Information Hide					~XX117	5		F	P						
		Network setup					~XX117	6		F	P						
		Projector ID					~XX117	7		F	P						
		Color Matching					~XX117	8		F	P						
		Reset Selective					~XX117	9		F	P						
	User2	Freeze Screen					~XX118	1		F	P						
Network Setup		Blank Screen					~XX118	2		F	P						
		PIP/PBP					~XX118	3		F	P						
		Aspect Ratio					~XX118	4		F	P						
		Information Hide					~XX118	5		F	P						
		Network setup					~XX118	6		F	P						
		Projector ID					~XX118	7		F	P						
		Color Matching					~XX118	8		F	P						
		Reset Selective					~XX118	9		F	P						
	LAN Interface	RI-45			X		~XX460	1		F	P						
		HDBaseT					~XX460	2		F	P						
Email Notification	MAC Address	(read only)			X							~XX555	1	F	O	k	nn:nn:nn:nn:nn:nn
	Network Status	(read only) Connected			X							~XX87	1	F	O	k	1
		(read only) Disconnected										~XX87	1	F	O	k	0
	DHCP	Off			X		~XX461	0		F	P	~XX150	17	F	O	k	0
		On					~XX461	1		F	P	~XX150	17	F	O	k	1
	IP Address	---	---	---	X							~XX87	3	F	O	k	nn:nn:nn:nn:nn:nn
	Subnet Mask	---	---	---	X												
	Gateway	---	---	---	X												
	DNS	---	---	---	X												
	Apply				X		~XX462	9		F	P						
Control	Network Reset				X		~XX462	1		F	P						
	Email 1				X							~XX443	1	F	k	n@nnnn.nnnn.nnnn	
		Email 1 Address			●							~XX443	2	F	k	n@nnnn.nnnn.nnnn	
	Email 2				X												
		Email 2 Address			●												
	Event				X												
	Fan Error	Off/Email			●		~XX463	2/1		F	P						
	Power On/Off	Off/Email			●		~XX463	4/3		F	P						
	Video Loss	Off/Email			●		~XX463	6/5		F	P						
	Laser	Off/Email			●		~XX463	8/7		F	P						
	Reset				X		~XX464	1		F	P						

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command					Read Command				
							Command			Response		Command			Response	
							CMD	space	Set Para.	Fail	Pass	CMD	space	Value	Fail	Pass
Crestron Setup Apply	IP Address	On					~XX454	1	1~nnn.nnn.nnn.nnn	F	P					
	IPID	2-255					~XX465	1	~nnn	F	P					
	Port	0~65535					~XX466	1	~nnnnn	F	P					
	PJ Link	Off					~XX467	1	~nnnnnn	F	P					
	Authentication	On					~XX454	9		F	P					
	Password Service	(read only)					~XX456	0		F	P					
	PJ Link Setup Apply					X	~XX456	1		F	P					
	Extron	Off					~XX457	0		F	P					
	AMX	On					~XX458	1		F	P					
	Telnet	Off					~XX459	0		F	P					
	HTTP	On					~XX459	1		F	P					
	Reset					X	~XX181	1		F	P					
Baud Rate	Serial Port In	1200										~XX153	1	F	O	k 1200
		2400										~XX153	1	F	O	k 2400
		4800										~XX153	1	F	O	k 4800
		9600										~XX153	1	F	O	k 9600
		19200										~XX153	1	F	O	k 19200
		38400										~XX153	1	F	O	k 38400
		57600										~XX153	1	F	O	k 57600
		115200										~XX153	1	F	O	k 115200
	Serial Port Out	1200										~XX153	3	F	O	k 1200
		2400										~XX153	3	F	O	k 2400
Reset		4800										~XX153	3	F	O	k 4800
		9600										~XX153	3	F	O	k 9600
		19200										~XX153	3	F	O	k 19200
		38400										~XX153	3	F	O	k 38400
		57600										~XX153	3	F	O	k 57600
		115200										~XX153	3	F	O	k 115200

Main Menu: Information

Level 2	Level 3	Level 4	Level 5	Option / Value	Step	User Data	Write Command					Read Command					
							Command			Response		Command			Response		
							CMD	space	Set Para.	Fail	Pass	CMD	space	CMD Value	Fail	Pass	
Communication	Regulatory											~XX151	3	F	O	k nnnnnnnn	
	Serial Number											~XX353	1	F	O	k nnnnnnnnnnnnnnn	
	Projection Hours											~XX150	21	F	O	k nnnnn (nnnnn= hour digits)	
	Standby Mode																
	Light Source Mode													~XX108	1	F	O k nnnnn (nnnnn= hour digits)
	Light Source Hours													~XX108	1	F	O k nnnnn (nnnnn= hour digits)
	Total Hours													~XX108	3	F	O k nnnnn (nnnnn= hour digits)
	Normal													~XX108	4	F	O k nnnnn (nnnnn= hour digits)
	Eco Mode													~XX108	7	F	O k nnnnn (nnnnn= hour digits)
	Custom Power													~XX150	23	F	O k nnn..nn (e.g. Ok48)
	Ambient Temp													~XX150	18	F	O k nnn..nn (e.g. Ok48)
	Temperature													~XX558	1	F	O k 00~99
	AC Voltage													~XX138	1	F	O k 0~9
	Projector ID													~XX122	1	F	O k nnnnnn (FW)+
	Remote Code																
	Main Version																

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

## Other RS232

Level 1	Level 2	Level 3	Write Command			Read Command		
			Command	Space	Set Para.	Response	Command	Space
			CMD	Space	Fail		CMD Value	Fail
<b>When projector in standby, RS232 have to support</b>								
Power On			~XX00	1		F	~XX124	1
Power On with password			~XX00	1	~nnnn	F		
Information	Info String						~XX150	1
Light Source Hours							~XX108	1
<b>Other Items</b>								
Power Off			~XX00	0		F	~XX124	1
Power On			~XX00	1		F	~XX124	1
Re-Sync			~XX01	1				
AV Mute	Off		~XX02	0		F	~XX355	1
	On		~XX02	1		F	~XX355	1
Freeze	Unfreeze		~XX04	0				
	Freeze		~XX04	1				
3D Sync Out	To Emitter		~XX232	0				
	To Next Projector		~XX232	1				
3D Frame Delay	1~200		~XX233	1~nnn		F	~XX130	1
Output 3D state	2D						~XX130	1
	3D							
System Auto Send	Standby Mode							
	Warming up						I	N
	Cooling Down						N	F
	Out of Range						O	0
	lightsource Fail ( LED Fail)						I	N
	Thermal Switch Error						F	O
	Fan Lock						I	1
	Over Temperature						I	N
	LightSource Hours Running Out						F	O
	Cover Open						I	2
	lightsource Ignite Fail						I	N
	Format Board Power On Fail						F	O
	Color Wheel Unexpected Stop						I	3
	Over Temperature						I	N
	FAN 1 Lock						F	O
	FAN 2 Lock						I	5
	FAN 3 Lock						I	N
	FAN 4 Lock						F	O
	FAN 5 Lock						I	12
	LAN fail then restart						I	N
	LD lower than 60%						F	O
	LD NTC (1) Over Temperature						I	13
	LD NTC (2) Over Temperature						I	N
	High Ambient Temperature						F	O
	System Ready						I	14
							I	N
	FAN 6 Lock						F	O
	FAN 7 Lock						I	15
	FAN 8 Lock						I	N
	FAN 9 Lock						F	O
	FAN 10 Lock						I	16
	FAN 11 Lock						I	N
	FAN 12 Lock						F	O
	FAN 13 Lock						I	17

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Write Command		Read Command	
			Command	Response	Command	Response
System Temperature Level	FAN 14 Lock				~XX155 1 F	O k 34
	Green/Normal				~XX155 1 F	O k 1
	Orange/Notice				~XX155 1 F	O k 2
	Red/Warning				~XX155 1 F	O k 3
Fan Status Level	Green/Normal				~XX159 1 F	O k 1
	Orange/Notice				~XX159 1 F	O k 2
	Red/Warning				~XX159 1 F	O k 3
Device Type	Projector				~XX149 1 F	O k 1
Model Name	Optoma WUXGA				~XX151 1 F	O k 5
Camera Status					~XX221 1 F	O k a=0 Camera disconnect a=1 Camera supported
OSD Lock	On(~nnnn: security password)		~XX239 1 ~nnnn F		~XX229 1 F	O k 1
	Off		~XX239 2 ~nnnn F		~XX229 1 F	O k 0
Regulatory Model					~XX151 3 F	O k
Software Version					~XX122 1 F	O k nnnnnnnn
Fan Speed	Fan 1 Speed	0000~9999			~XX351 1 F	O k 0000~9999
	Fan 2 Speed	0000~9999			~XX351 2 F	O k 0000~9999
	Fan 3 Speed	0000~9999			~XX351 3 F	O k 0000~9999
	Fan 4 Speed	0000~9999			~XX351 4 F	O k 0000~9999
	Fan 5 Speed	0000~9999			~XX351 5 F	O k 0000~9999
	Fan 6 Speed	0000~9999			~XX351 6 F	O k 0000~9999
	Fan 7 Speed	0000~9999			~XX351 7 F	O k 0000~9999
	Fan 8 Speed	0000~9999			~XX351 8 F	O k 0000~9999
	Fan 9 Speed	0000~9999			~XX351 9 F	O k 0000~9999
	Fan 10 Speed	0000~9999			~XX351 10 F	O k 0000~9999
	Fan 11 Speed	0000~9999			~XX351 11 F	O k 0000~9999
	Fan 12 Speed	0000~9999			~XX351 12 F	O k 0000~9999
	Fan 13 Speed	0000~9999			~XX351 13 F	O k 0000~9999
	Fan 14 Speed	0000~9999			~XX351 10 F	O k 0000~9999
System Temperature					~XX352 1 F	O k 0000~9999
Information	Info String				~XX150 1 F	O k abbbbccdddee (Note*)
	Native Resolution				~XX150 2 F	O k nnn..nn(e.g. Ok1920x1080)
	Main Source				~XX150 3 F	O k nnn..nn (e.g. OkHDMI)
	- Resolution				~XX150 4 F	O k nnn..nn(e.g. Ok1920x1080)
	- Signal Format				~XX150 5 F	O k nnn..nn
	- Pixel Clock				~XX150 6 F	O k nnn..nn
	- Horz Refresh				~XX150 7 F	O k nnn..nn
	- Vert Refresh				~XX150 8 F	O k nnn..nn
	Sub Source				~XX150 9 F	O k nnn..nn
	- Resolution				~XX150 10 F	O k nnn..nn(e.g. Ok1920x1080)
	- Signal Format				~XX150 11 F	O k nnn..nn (e.g. OkHDMI)
	- Pixel Clock				~XX150 12 F	O k nnn..nn
	- Horz Refresh				~XX150 13 F	O k nnn..nn
	- Vert Refresh				~XX150 14 F	O k nnn..nn
	Light Source Mode				~XX150 15 F	O k nnn..nn
	Standby Power Mode	Active			~XX150 16 F	O k 1
		Eco.			~XX150 16 F	O k 0
		Communication			~XX150 16 F	O k 3
	DHCP	Off			~XX150 17 F	O k 0
		On			~XX150 17 F	O k 1
	System Temperature				~XX150 18 F	O k nnn..nn (e.g. Ok48)
	Refresh rate				~XX150 19 F	O k nnn..nn (e.g. Ok60Hz)
Source Lock	On		~XX100 0 F			
	Off		~XX100 1 F			

**Note:** Some commands are not supported, it depends on models.

# ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Write Command		Read Command	
			Command	Response	Command	Response
Display message on the OSD			~XX210 nn...n (50 charactors)	F		
Filter Wheel Index			~XX528 0000~9999	F		
Phosphor Wheel Index			~XX529 0000~9999	F		
<b>Remote Control Simulation</b>						
Power			~XX140 1	F		
Power Off			~XX140 2	F		
Up			~XX140 10	F		
Left			~XX140 11	F		
Enter (for projection MENU)			~XX140 12	F		
Right			~XX140 13	F		
Down			~XX140 14	F		
V Keystone +			~XX140 15	F		
V Keystone -			~XX140 16	F		
Brightness			~XX140 19	F		
Menu			~XX140 20	F		
DVI-D			~XX140 22	F		
VGA-1			~XX140 23	F		
AV Mute			~XX140 24	F		
Contrast			~XX140 28	F		
Zoom +			~XX140 32	F		
Zoom -			~XX140 33	F		
Focus +			~XX140 34	F		
Focus -			~XX140 35	F		
Mode			~XX140 36	F		
info			~XX140 40	F		
Re-sync			~XX140 41	F		
HDMI 1			~XX140 42	F		
HDMI 2			~XX140 43	F		
Source			~XX140 47	F		
1			~XX140 51	F		
2			~XX140 52	F		
3			~XX140 53	F		
4			~XX140 54	F		
5			~XX140 55	F		
6			~XX140 56	F		
7			~XX140 57	F		
8			~XX140 58	F		
9			~XX140 59	F		
0			~XX140 60	F		
Gamma			~XX140 61	F		
PIP			~XX140 63	F		
Lens H(left)			~XX140 64	F		
Lens H(Right)			~XX140 65	F		
Lens V(left)			~XX140 66	F		
Lens V(Right)			~XX140 67	F		
H Keystone +			~XX140 68	F		
H Keystone -			~XX140 69	F		
Hot Key (user1)(F1)			~XX140 70	F		
Hot Key (user2)(F2)			~XX140 71	F		
Pattern			~XX140 73	F		
Exit			~XX140 74	F		
Display Port			~XX140 76	F		
Mute			~XX140 77	F		

**Note:** Some commands are not supported, it depends on models.

## Optoma global offices

For service or support, please contact your local office.

### USA

Optoma Technology, Inc.  
47697 Westinghouse Drive.  
Fremont, Ca 94539

 888-289-6786  
 510-897-8601  
 [services@optoma.com](mailto:services@optoma.com)

### Canada

Optoma Technology, Inc.  
47697 Westinghouse Drive.  
Fremont, Ca 94539

 888-289-6786  
 510-897-8601  
 [services@optoma.com](mailto:services@optoma.com)

### Latin America

Optoma Technology, Inc.  
47697 Westinghouse Drive.  
Fremont, Ca 94539

 888-289-6786  
 510-897-8601  
 [services@optoma.com](mailto:services@optoma.com)

### Europe

Unit 1, Network 41, Bourne End Mills  
Hemel Hempstead, Herts,  
HP1 2UJ, United Kingdom  
[www.optoma.eu](http://www.optoma.eu)  
Service Tel : +44 (0)1923 691865

 +44 (0) 1923 691 800  
 +44 (0) 1923 691 888  
 [service@tsc-europe.com](mailto:service@tsc-europe.com)

### Benelux BV

Randstad 22-123  
1316 BW Almere  
The Netherlands  
[www.optoma.nl](http://www.optoma.nl)

 +31 (0) 36 820 0252  
 +31 (0) 36 548 9052

### France

Bâtiment E  
81-83 avenue Edouard Vaillant  
92100 Boulogne Billancourt, France  
 [savoptoma@optoma.fr](mailto:savoptoma@optoma.fr)

### Spain

C/ José Hierro,36 Of. 1C  
28522 Rivas VaciaMadrid,  
Spain

 +34 91 499 06 06  
 +34 91 670 08 32

### Deutschland

Am Nordpark 3  
41069 Mönchengladbach  
Germany

 +49 (0) 2161 68643 0  
 +49 (0) 2161 68643 99  
 [info@optoma.de](mailto:info@optoma.de)

### Scandinavia

Lerpeveien 25  
3040 Drammen  
Norway

PO.BOX 9515  
3038 Drammen  
Norway

 +47 32 98 89 90  
 +47 32 98 89 99  
 [info@optoma.no](mailto:info@optoma.no)

### Korea

<https://www.optoma.com/kr/>

### Japan

<https://www.optoma.com/jp/>

### Taiwan

<https://www.optoma.com/tw/>

### China

Room 2001, 20F, Building 4,  
No.1398 Kaixuan Road,  
Changning District  
Shanghai, 200052, China

 +86-21-62947376  
 +86-21-62947375  
[www.optoma.com.cn](http://www.optoma.com.cn)

### Australia

<https://www.optoma.com/au/>

