

Task Cards


5-Series
Creative Touch Interactive

Table of Contents

1. Create your Optoma Account
2. Customize your Home Screen
3. Change your Wallpaper
4. Customize your Toolbar
5. Adjust Volume & Brightness
6. Floating Menu Toolbar
7. Screen Recording
8. Annotation Tool
9. Screen Lock
10. Gestures
11. Launch a Whiteboard Lesson
12. Handwriting Recognition
13. Math Recognition
14. Insert a YouTube Video
15. Insert a Web Browser
16. Casting your Laptop Screen
17. Casting Smart Controls
18. Multi-Window mode
19. Picture-in-Picture
20. Caring for your panel


Create your Optoma Account

- 1 Scan the QR code to create your account from your mobile device OR tap "Sign in" to enter your credentials manually
- 2 Sign in with your Google, Microsoft, or Apple Credentials
- 3 Follow the prompts to finalize this process

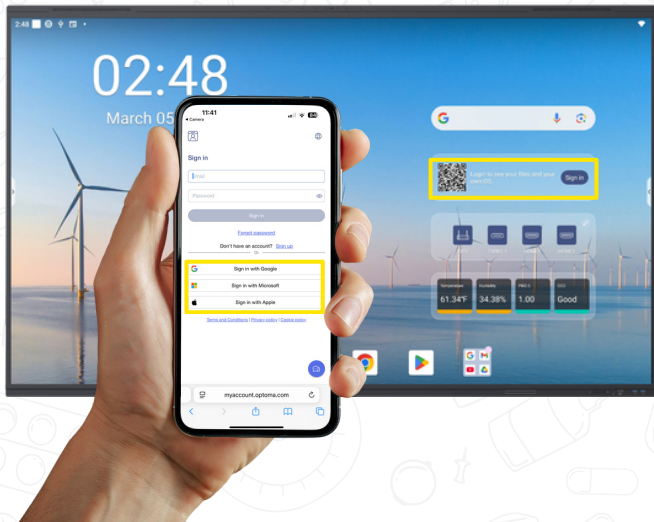



Customize your Home Screen

 - 1 Press & hold the app or widget to move, remove, or uninstall
- 2 To pin an app to the home screen, tap & drag it onto the home screen
- 3 To create a folder, tap and hold your desired app, then drag it on top of another app
- 4 Next, tap your profile icon on the login widget to open your account settings.
- 5 Last, tap the refresh  circle on your profile icon to save your customizations



Change your Wallpaper

- 1 Open the Settings  menu from the side tool bar
- 2 Tap "Personalize," then "Wallpaper"
- 3 Choose one of the available options or upload a custom 4K image or background.
- 4 Next, tap your profile icon on the login widget to open your account settings.
- 5 Last, tap the refresh  circle on your profile icon to save your customizations

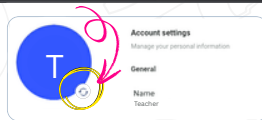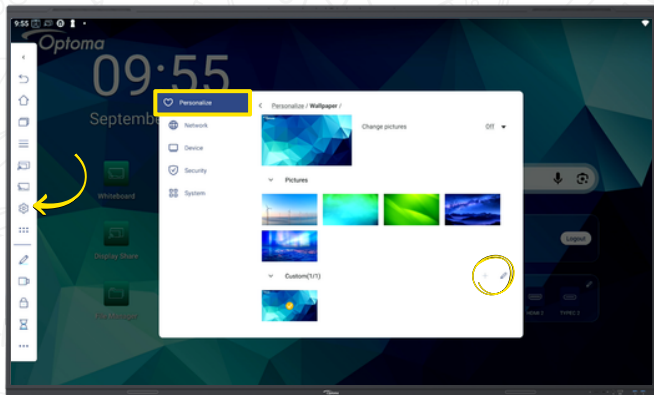

Customize your Toolbar

- 1 Open the side toolbar and tap the 3 dots at the bottom
- 2 Tap the “Edit” button in the top right corner
- 3 Tap the  or  to add or remove tools from the tool bar




Adjust Volume & Brightness

- 1 Open the Shortcut menu by swiping up from the very bottom of the screen OR tap the 3 lines icon  in the side tool bar
- 2 Adjust the Volume and Brightness by dragging the slider



Floating Menu Toolbar

- 1 Open the Floating menu toolbar by doing a 2-finger press anywhere on the screen
- 2 To move the tool bar, tap the center circle and drag to the desired location

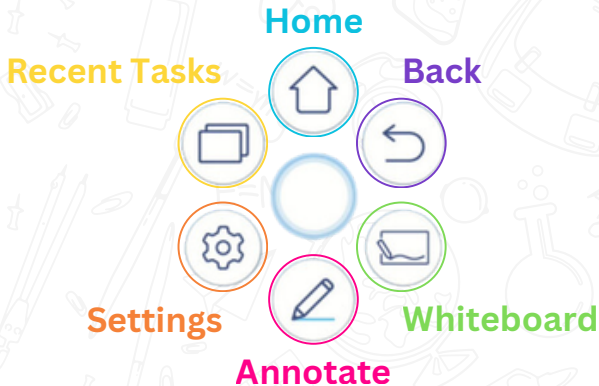

Screen Recording

- 1 Open the side tool bar and tap the camera icon
- 2 Tap the settings icon to toggle on your camera and adjust your video resolution
- 3 Then, tap the red button to begin recording
- 4 To access your recordings, go to the "Record" folder in the File Manager




Annotation Tool

- 1 To annotate over a website or document, simply remove your stylus from the quick launch pen holder.
- 2 Alternatively, open the side tool bar and tap the pencil icon
- 3 When finished, Save, Share via QR code, Insert into a Whiteboard file, or tap the ✕ to close




Screen Lock

- 1 Tap the lock  icon in the side tool bar
- 2 Tap the "Confirm" button to set a screen lock
- 3 Choose a screen lock option and follow the prompts to complete setup

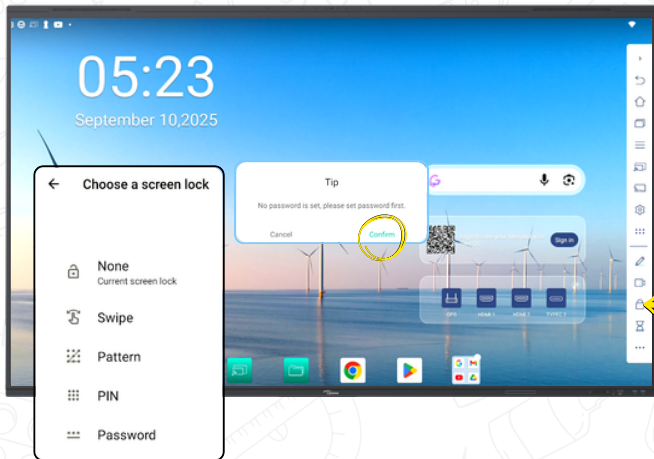


Gestures

- 1 Open the Settings  menu from the side tool bar
- 2 Tap “Gestures” on the Personalize tab
- 3 Enable Gestures by tapping the toggle switch
- 4 Choose a gesture and assign a function

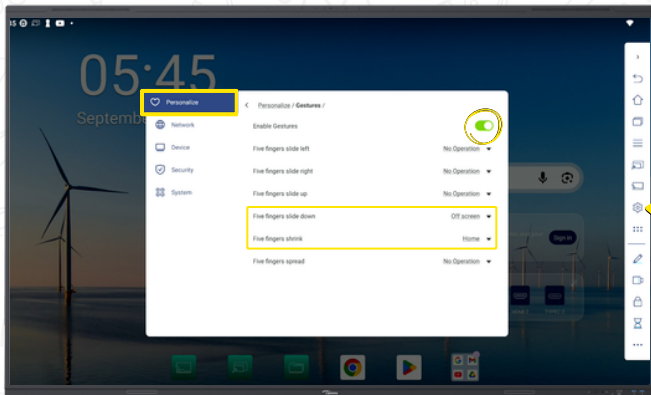


Launch a Whiteboard Lesson

- 1 From the home screen, simply remove the pen from the quick-launch pen holder
- 2 Alternatively, choose the Whiteboard icon from the side tool bar or the app from the home screen
- 3 The blank presentation is selected by default, tap the create button to open
- 4 To choose a background template, tap "Create new session." Choose your template, then tap "Create"

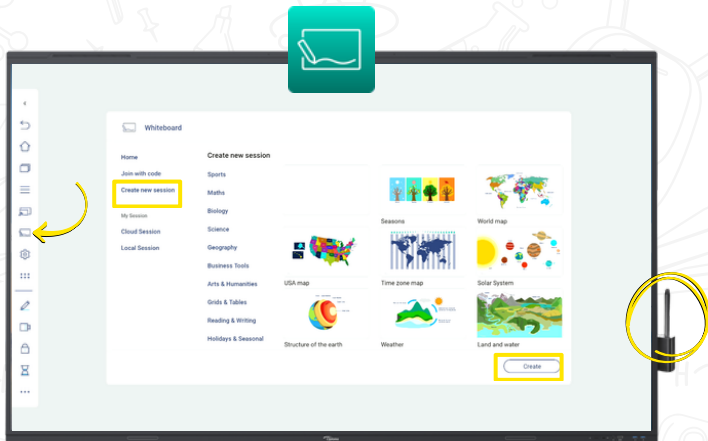


Handwriting Recognition

- 1 Use the pencil tool to write your desired text
- 2 Next, tap the selection tool and draw a circle around your writing to select
- 3 Then, tap the handwriting recognition tool
- 4 Verify the correct spelling and tap the ✓ to confirm

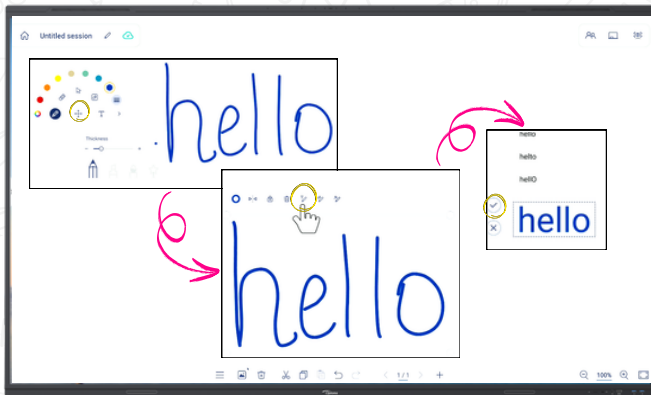


Math Recognition

- 1 Use the pencil tool to write your desired math problem
- 2 Next, tap the selection tool and draw a circle around your writing to select
- 3 Then, tap the formula recognition tool to convert

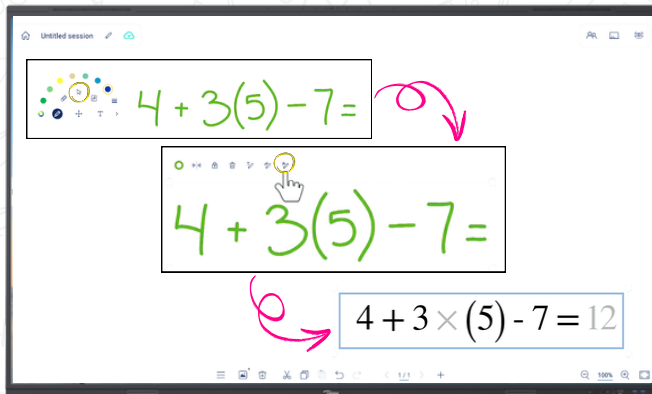


Insert a YouTube Video

- 1 Tap the arrow > button on the floating toolbar
- 2 Tap the media  icon
- 3 Choose YouTube or Google image and begin your search
- 4 Select your desired image or video and tap "Import"

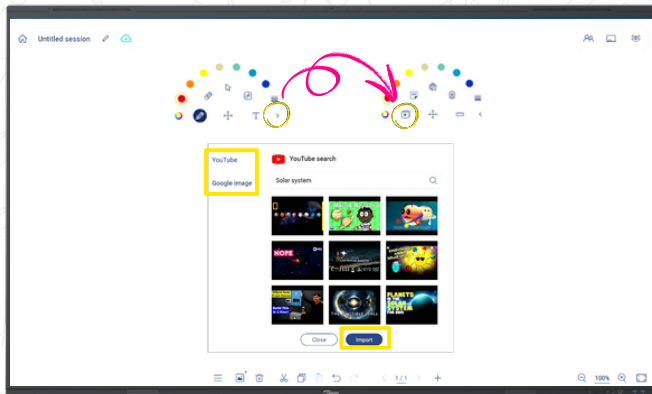


Insert a Web Browser

- 1 Tap the arrow button > on the floating toolbar
- 2 Tap the browser icon
- 3 Use the on-screen keyboard to type your search terms or web address

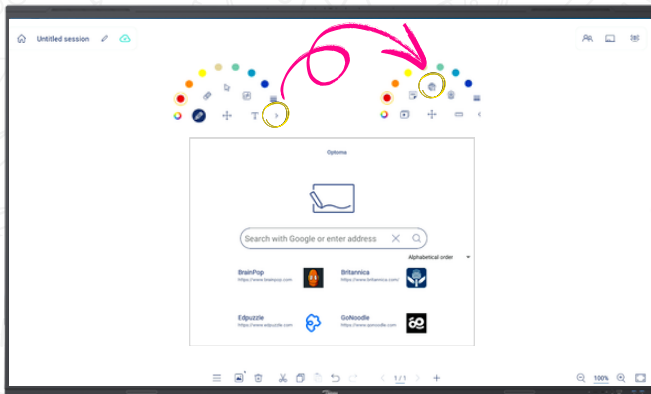


Casting your Laptop Screen

- 1 Open Display Share by tapping the app on the home screen OR tapping the Display Share icon in the side tool bar
- 2 From your computer, open the Display Share application
- 3 Select YOUR display from the list and click "Connect"
- 4 Enter your 6-digit password and click "OK"
- 5 Click "Share Screen" or "Mirror" to begin

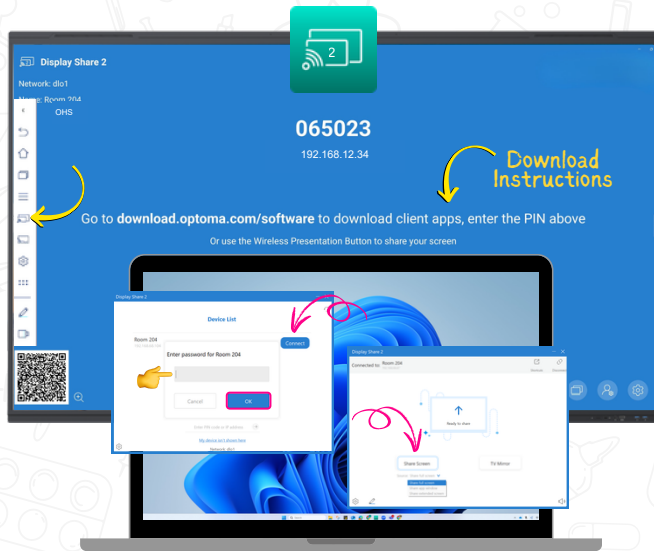


Casting Smart Controls

- 1 Open Display Share by tapping the app on the home screen OR tapping the Display Share icon in the side tool bar
- 2 Open the Display Share app on your mobile device
- 3 Select YOUR display from the list
- 4 Enter the 6-digit password, then tap "OK"
- 5 Tap "Remote" for access to the Mouse, Touch Pad, Keys, & Apps

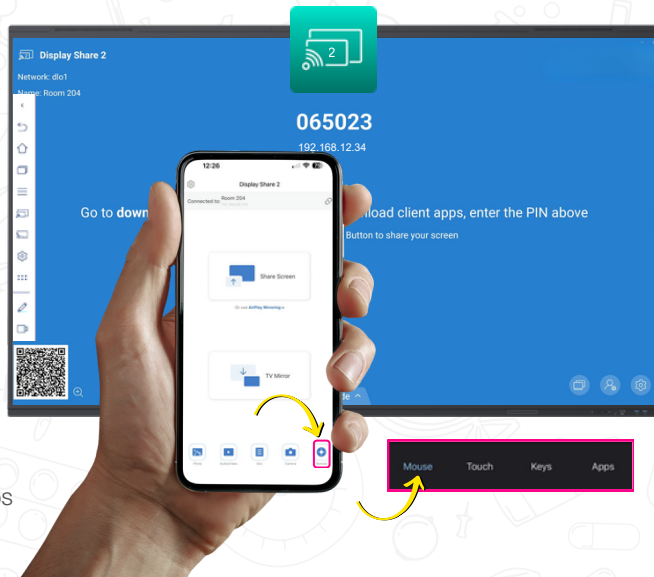

Multi-Window Mode


- 1 Open the Settings  menu from the side tool bar
- 2 Look for “Multi-Window mode” on the “Personalize” tab and toggle it on
- 3 This will prompt your device to restart. Confirm by tapping the “Restart” button

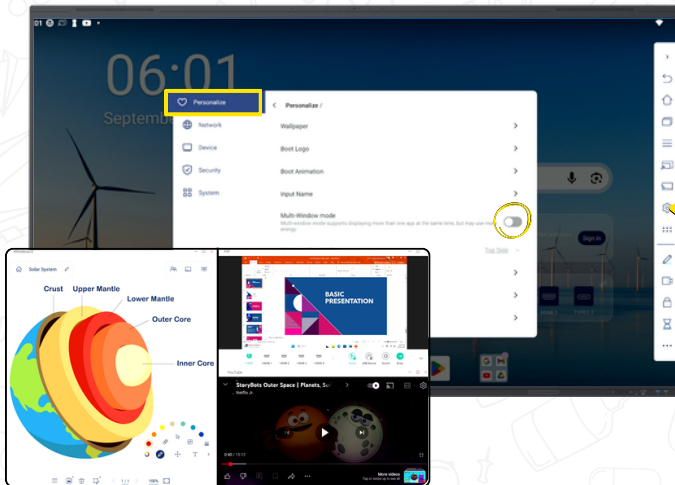

Picture-in-Picture

- 1 Open the Shortcut menu by swiping up from the very bottom of the screen OR tap the 3 lines icon  in the side tool bar
- 2 Tap "PIP mode" to open the Picture-in-Picture window
- 3 Choose your desired input
- 3 Tap  to turn on "Touch" and adjust size, sound, and position as desired.

Note: USB-C or HDMI & USB touch cable required

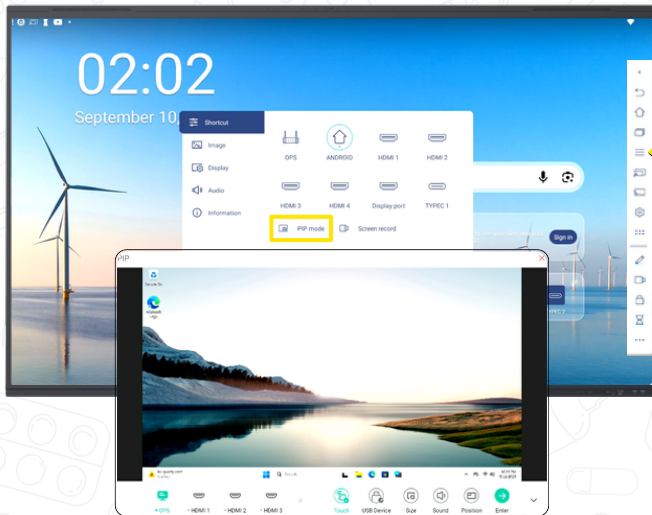

Caring for your Panel

Creative Touch Interactive Flat Panel Cleaning Instructions

1

Mix a 50/50 solution
of isopropyl alcohol & water



2

Spray on a soft microfiber cloth.
Do NOT spray directly on screen



3

Turn off and unplug your display.
Wipe gently, being sure to avoid
touching the outer frame.



*Avoid ammonia, bleach, harsh soaps, coarse cloths, and direct spraying to prevent liquid from damaging touch sensors in the frame.

Optoma

Need Assistance?

hi



Karleen Vaughn, Ed.S.

Education Consultant

karleen.vaughn@optoma.com

[Schedule Training](#)



Technical Support

support@optoma.com

[Submit a ticket](#)

