
DLP® Projector

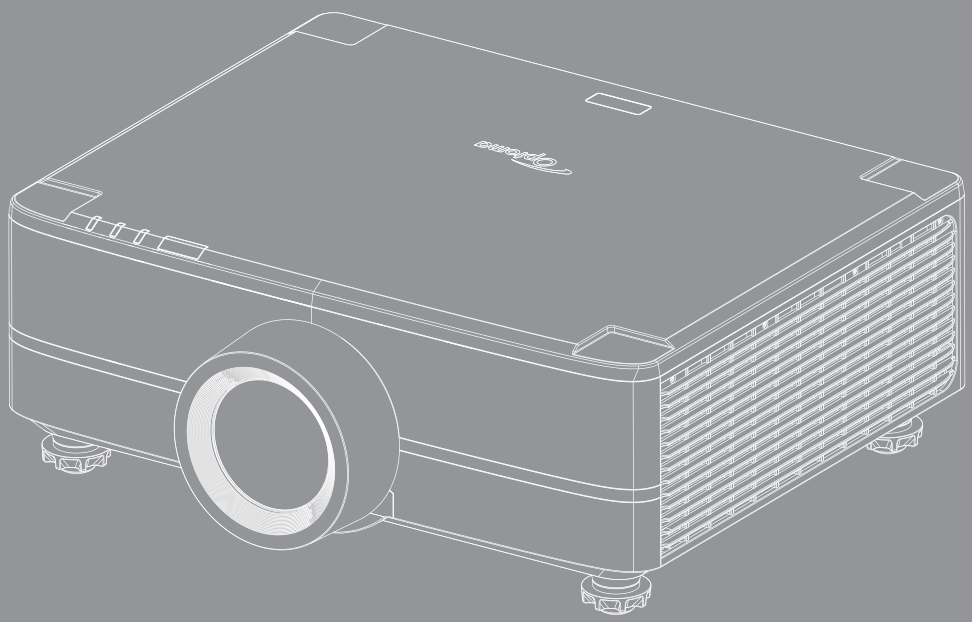

User manual

TABLE OF CONTENTS

SAFETY 4

Important Safety Instruction 4
Light Intensity Hazard Distance 6
Laser Safety Information 6
Product Safety Labels 7
Copyright 8
Disclaimer 8
Trademark Recognition 8
FCC Notice 8
Declaration of Conformity for EU countries 9
WEEE 9

INTRODUCTION 10

Package Overview 10
Standard Accessories 10
Product Overview 11
Connections 12
Keypad 13
Remote control 14

SETUP AND INSTALLATION 16

Installing the Projection Lens 16
Connecting Sources to the Projector 18
Adjusting the Projector Image 19
Adjusting the Projection Image Shift 20
Adjusting the Projector's Zoom and Focus 23
Adjusting the Projector Position 24
Remote Setup 25

USING THE PROJECTOR 27

Powering On / Off the Projector 27
Menu navigation and features 29
OSD menu tree 30
Image menu 44
Display menu 49
Input Settings menu 56
Device Setup menu 57
Communication menu 63
Info menu 68

ADDITIONAL INFORMATION..... 69

Compatible Resolutions..... 69
RS232 Port Setting and Signals Connection..... 72
Image Size and Projection Distance..... 73
Ceiling Mount Installation 74
IR remote codes 75
Troubleshooting 77
LED Indicators and Lightning Messages 78
Specifications 79
Manual Warp Control Instruction 80
RS232 protocol function list..... 83
Optoma global offices..... 92

SAFETY

	The lightning flash with arrow head within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Please follow all warnings, precautions and maintenance as recommended in this user manual.

Important safety instructions



- Do not stare into the beam, RG2.
  As with any bright source, do not stare into the direct beam, RG2 IEC 62471-5:2015.
- Do not block any ventilation openings. To ensure reliable operation of the projector and to protect from overheating, it is recommended to install the projector in a location that does not block ventilation. As an example, do not place the projector on a crowded surface. Do not put the projector in an enclosure such as a book case or a cabinet that restricts air flow.
- To reduce the risk of fire and/or electric shock, do not expose the projector to rain or moisture. Do not install near heat sources such as radiators, heaters, stoves or any other apparatus such as amplifiers that emits heat.
- Do not let objects or liquids enter the projector. They may touch dangerous voltage points and short out parts that could result in fire or electric shock.
- Do not use under the following conditions:
  - In extremely hot, cold or humid environments.
    (i) Ensure that the ambient room temperature is within 5°C~40°C (41°F~104°F)
    (ii) Relative humidity is 10% ~ 85%
  - In areas susceptible to excessive dust and dirt.
  - Near any appliance generating a strong magnetic field.
  - In direct sunlight.
- Do not use the unit if it has been physically damaged or abused. Physical damage/abuse would be (but not limited to):
  - Unit has been dropped.
  - Power supply cord or plug has been damaged.
  - Liquid has been spilled on to the projector.
  - Projector has been exposed to rain or moisture.
  - Something has fallen in the projector or something is loose inside.
- Do not place the projector on an unstable surface. The projector may fall over resulting in injury or the projector may become damaged.
- Do not block the light coming out of the projector lens when in operation. The light will heat the object and cause it to melt, burn or start a fire.
- Please do not open or disassemble the projector as this may cause electric shock.
- Do not attempt to service the unit yourself. Opening or removing covers may expose you to dangerous voltages or other hazards. Please call Optoma before you send the unit for repair.
- See projector enclosure for safety related markings.
- The unit should only be repaired by authorized service personnel.
- Only use attachments/accessories specified by the manufacturer.
- Do not look straight into the projector lens during operation. The bright light may harm your eyes.

- Turn off and unplug the power plug from the AC outlet before cleaning the product.
- Use a soft dry cloth with mild detergent to clean the projector housing. Do not use abrasive cleaners, waxes or solvents to clean the unit.
- Disconnect the power plug from the AC outlet if the product will not be used for a long period of time.
- Do not setup the projector in places where it might be subjected to vibration or shock.
- Do not touch the lens with bare hands.
- Do not clean the lens when the projector is turned on. Any damage resulting from doing so will void the warranty.
- Remove battery/batteries from remote control before storage. If the battery/batteries are left in the remote for long periods, they may leak.
- Do not use or store the projector in places where smoke from oil or cigarettes may be present, as it can adversely affect the quality of the projector performance.
- Please follow the correct projector orientation installation as non standard installation may affect the projector performance.
- Use a power strip and/or surge protector. As power outages and brown-outs can KILL devices.
- For professional/commercial use only. Not intended for use in locations where children are present.

- Ground the power cord:
  – This device is designed to be used with the power cord grounded. Failure to ground the power cord may result in electric shock. Ensure the power cord is properly grounded and directly connected to a wall outlet.

  – Do not use a 2-pin adapter.

- Disclaimer: Operating this equipment in residential areas may cause radio interference.

- We recommend you install this projector above the reach of children.

⚠ Warning:

– MOUNT ABOVE THE HEADS OF CHILDREN. The use of a ceiling mount is recommended with this product to place it above the eyes of children.

– Do not remove the earthing pin on the mains plugs. This apparatus is equipped with a three prong earthing type mains plug. This plug will only fit an earthing-type mains socket. This is a safety feature. If you are unable to insert the plug into the mains socket, contact an electrician. Do not defeat the purpose of the earthing plug.

CAUTION:

– This equipment is equipped with a three-pin grounding-type power plug. Do not remove the grounding pin on the power plug. This plug will only fit a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician. Do not defeat the purpose of the grounding plug.



– ⚠ Hot surface, do not touch.

– Do not place your hands, face, or other objects in front of the projector lens while the projector is operating. Doing so can cause the object to get extremely hot, and possibly resulting in a fire or damage due to the heat emitted from the light output. Things placed in front of the lens may overheat and burn or start a fire.

– Do not spray flammable gas to get rid of dust and dirt that accumulate in the lens. Doing so could cause a fire.

Light Intensity Hazard Distance

This product is classified as CLASS 1 LASER PRODUCT - RISK GROUP 3 of IEC 60825-1:2014, EN 60825-1:2014+A11:2021 and also complies with 21 CFR 1040.10 and 1040.11 except for conformance as a Risk Group 2 LIP as defined in IEC 62471-5:Ed. 1.0. For more information, see Laser Notice No. 57, dated May 8, 2019.

When set up with BX-CTA13 lens (throw ratio greater than 2.9), this projector may become Class 1 Laser Product-Risk Group 3 (RG3); with other lens (throw ratio less than 2.9).

Projection Lens	Throw Ratio	Classification and Requirements for Laser Illuminated Projectors (LIPs)	
• BX-CAA01/ BX-CTA01	• 0.95-1.22	• HD: N/A	• IEC 62471-5: 2015 • IEC 60825-1: 2014 • CLASS 1 LASER PRODUCT RISK GROUP 2
• BX-CAA03/ BX-CTA03	• 1.52-2.92		
• BX-CAA06/ BX-CTA06	• 1.22-1.52		
• BX-CTA15	• 0.75-0.95		
• BX-CTA17	• 0.65-0.75		

Projection Lens	Throw Ratio	Classification and Requirements for Laser Illuminated Projectors (LIPs)	
• BX-CTA13	• 2.9-5.5	• HD: 1.5 meters	• IEC 62471-5: 2015 • IEC 60825-1: 2014 • CLASS 1 LASER PRODUCT RISK GROUP 3

Laser radiation safety information


To ensure safe operation, read all laser safety precautions before installing and operating the projector.

- This projector is class 1 laser product of IEC/EN 60825-1:2014 and risk group 2 with the requirements of IEC 62471-5:2015.
- This projector uses extremely high brightness laser. Do not stare directly into the light beam, as the extremely high brightness may cause permanent eye damage. (Risk Group 2 of IEC 62471-5:2015).
- No direct exposure to the beam shall be permitted. (Risk Group 3 of IEC 62471-5:2015).
- This product is not for household use.
- Possibly hazardous optical radiation emitted from this product.
- This projector has a built-in Class 4 laser module. Never attempt to disassemble or modify the laser module.
- Any operation or adjustment not specifically instructed in the User manual creates the risk of hazardous laser radiation exposure.
- Do not stare into beam when the projector is on. When turning on the projector, make sure no one within projection range is looking into the lens.
- Follow the control, adjustment, or operation procedures to avoid damage or injury from exposure to laser radiation.
- The instructions for the assembly, operation, and maintenance include clear warnings to avoid possible exposure to hazardous laser radiation.

- We recommend you install this projector above the reach of children.
- Notice is given to supervise children and to never allow them to stare into the projector beam at any distance from the projector.
- Notice is given to use caution when using the remote control for starting the projector while in front of the projection lens.
- Notice is given to the user to avoid the use of optical aids such as binoculars or telescopes inside the beam.
- The Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulation.
- Cet appareil numerique de la class A respecte toutes les exigences du Reglement sur le materiel brouilleur du Canada.


Product safety labels

Light beam related safety labels

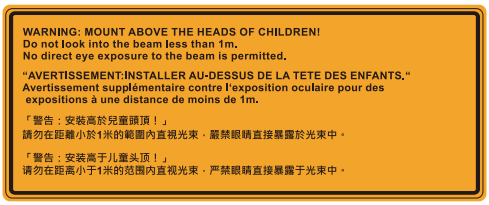Label image	Label description
	"WARNING: MOUNT ABOVE THE REACH AND SIGHT OF CHILDREN." The use of a ceiling mount is recommended with this product to place it above the eye level of children. Additional warning against eye exposure for close exposures less than 1 m.
	**Warning!** Do not look into the beam. No direct eye exposure to the beam is permitted. Not for household use. RG3 Hazard Distance: Refer to Page 6.



This product is classified as Class 1 Laser Product-Risk Group 2 of IEC 60825-1:2014. EN 60825-1:2014+A11:2021 and also complies with 21 CFR 1040.10 and 1040.11 as a Risk Group 2, LIP (Laser Illuminated Projector) as defined in IEC 62471-5:Ed.1.0. For more information, see Laser Notice No. 57, dated May 8, 2019.

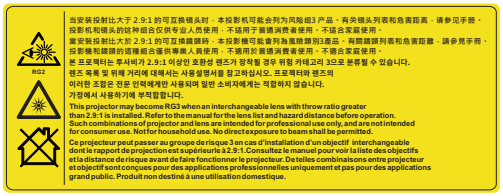

This projector may become RG3 when an interchangeable lens with throw ratio greater than 2.9:1 is installed. Refer to the manual for the lens list and hazard distance before operation. Such combinations of projector and lens are intended for professional use only, and are not intended for consumer use. Not for household use. No direct exposure to beam shall be permitted.

Copyright

This publication, including all photographs, illustrations and software, is protected under international copyright laws, with all rights reserved. Neither this manual, nor any of the material contained herein, may be reproduced without written consent of the author.

© Copyright 2026

Disclaimer

The information in this document is subject to change without notice. The manufacturer makes no representations or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. The manufacturer reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of the manufacturer to notify any person of such revision or changes.

Trademark recognition

Kensington is a U.S. registered trademark of ACCO Brand Corporation with issued registrations and pending applications in other countries throughout the world.

HDMI, the HDMI Logo, and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

DLP®, DLP Link and the DLP logo are registered trademarks of Texas Instruments and BrilliantColor™ is a trademark of Texas Instruments.

HDBaseT™ and the HDBaseT Alliance logo are trademarks of the HDBaseT Alliance.

All other product names used in this manual are the properties of their respective owners and are Acknowledged.

FCC

This device has been tested and found to comply with the limits for a Class A digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Notice: Shielded cables

All connections to other computing devices must be made using shielded cables to maintain compliance with FCC regulations.

Caution

Changes or modifications not expressly approved by the manufacturer could void the user's authority, which is granted by the Federal Communications Commission, to operate this projector.

Operation conditions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference and
2. This device must accept any interference received, including interference that may cause undesired operation.

Notice: Canadian users

This Class A digital apparatus complies with Canadian ICES-003.

Remarque à l'intention des utilisateurs canadiens

Cet appareil numerique de la classe A est conforme a la norme NMB-003 du Canada.

Declaration of conformity for EU countries

- EMC Directive 2014/30/EU (including amendments)
- Low Voltage Directive 2014/35/EU
- Radio Equipment Directive 2014/53/EU (if product has RF function)
- RoHS Directive 2011/65/EU

WEEE



Disposal instructions

Do not throw this electronic device into the trash when discarding. To minimize pollution and ensure utmost protection of the global environment, please recycle it.


INTRODUCTION

Package Overview

Carefully unpack and verify that you have the items listed below under standard accessories. Some of the items under optional accessories may not be available depending on the model, specification and your region of purchase. Please check with your place of purchase. Some accessories may vary from region to region.

The warranty card is only supplied in some specific regions. Please consult your dealer for detailed information.


Standard Accessories

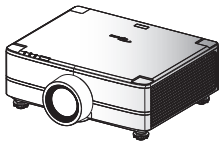

Projector



Remote control



AC power cord

☑ Warranty Card(*)
☑ Quick Start User Manual

Documentation



Lens ring for BX-CTA13

Note:


- *The actual remote control may vary depending on the region.*
- *(*) For European warranty Information, please visit www.optoma.com.*


Please scan the OPAM warranty QR code or visit the following URL:
https://www.optoma.com/us/support/warranty-and-return-policy/


Please scan the Asia-Pacific QR code or visit the following URL:
https://www.optoma.com/support/download

INTRODUCTION

Product Overview

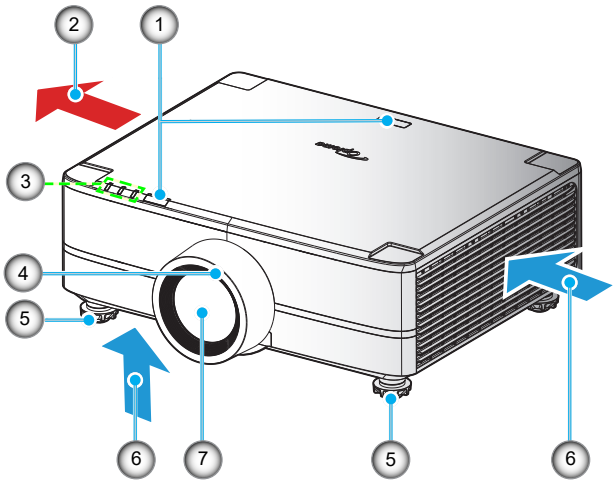

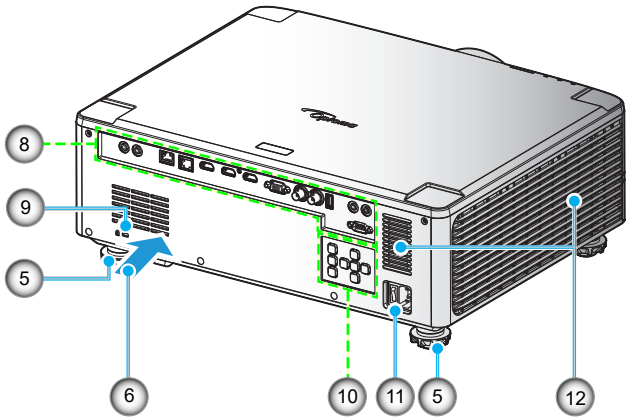

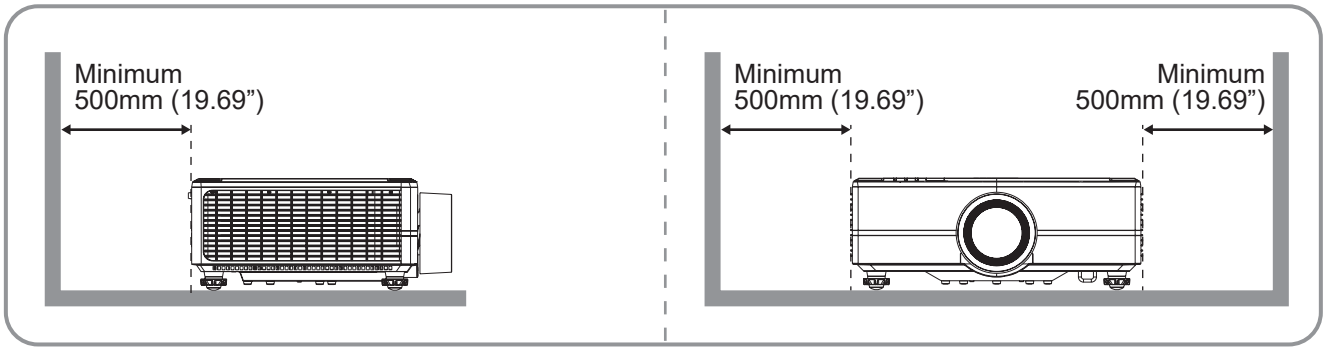


Note:

- *Do not block projector intake and exhaust vents.*
- *When operating the projector in an enclosed space, allow at least 500mm (19.69”) clearance around the intake and exhaust vents.*

No.	Item	No.	Item
1.	IR Receiver	7.	Projection Lens
2.	Ventilation (Outlet)	8.	Input / Output
3.	LED Indicators	9.	Kensington™ Lock Port
4.	Deco Ring (1.6x lens / 1.26x lens models)	10.	Control Panel
5.	Tilt-Adjustment Foot	11.	Power Socket / Power Switch
6.	Ventilation (Inlet)	12.	Speakers

INTRODUCTION


Connections

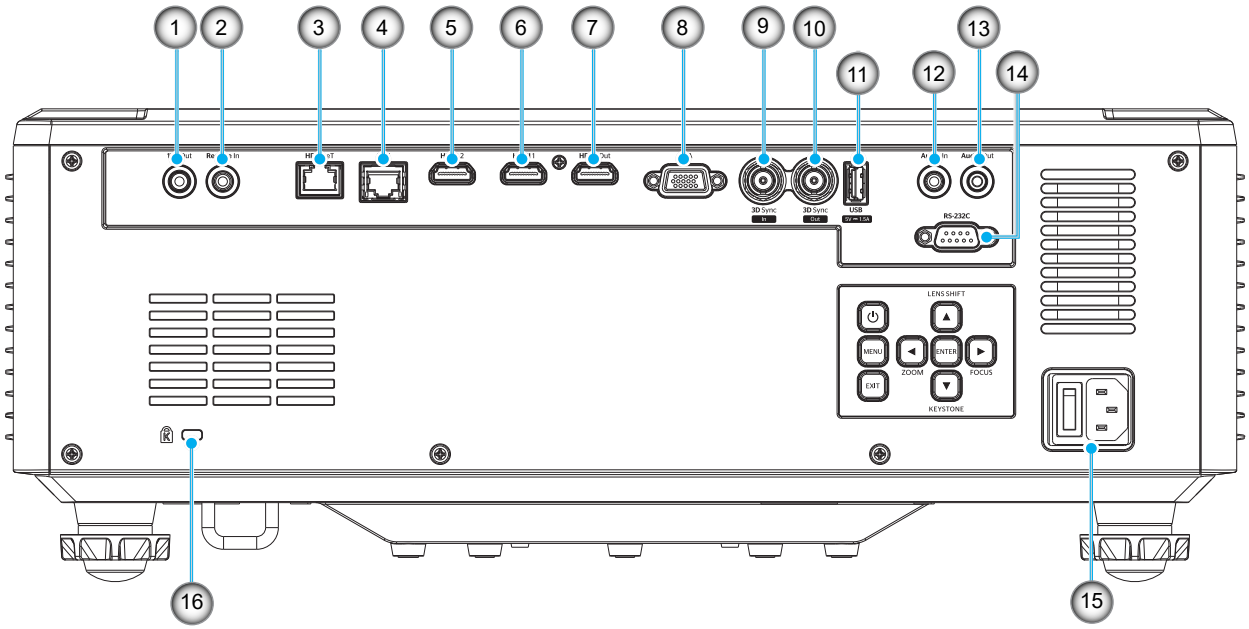

No.	Item	Cable	Example Connections[1]
1.	12V Out Connector	12V Trigger Cable	Motorized screen, Curtain, etc
2.	Remote In Connector	Wired Remote Control Cable or IR Receiver Cable (3.5mm TRS type[2])	RCU
3.	HDBaseT Connector	RJ-45 Cable	Media Play
4.	LAN Connector	RJ-45 Cable	Local or Company Network
5.	HDMI 2 Connector	HDMI Cable	Computer, Game, Console, Media Play
6.	HDMI 1 Connector	HDMI Cable	Computer, Game, Console, Media Play
7.	HDMI Out Connector	HDMI Cable	Screen
8.	VGA Connector	VGA Cable	Computer
9.	3D Sync In Connector	3D Sync Cable	Computer
10.	3D Sync Out Connector	3D Emitter Cable	3D Emitter
11.	USB Connector (Power 5V⎓1.5A)[3]	USB (A to A) Cable	USB Flash Drive
12.	Audio In Connector	Audio In Cable	Media Play
13.	Audio Out Connector	Audio Out Cable	Speaker, Media Play
14.	RS-232C Connector	RS232 Cable	Computer
15.	Power Socket / Power Switch	Power Cord	Projector
16.	Kensington™ Lock Port	Protection Cable	Projector

Note:


1. *These are just a few examples of what you can connect. There may be more options available for each port.*
2. *3.5mm TRS type.*

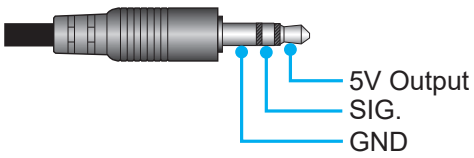

3. *Not recommended for charging a cell phone.*

INTRODUCTION


Keypad

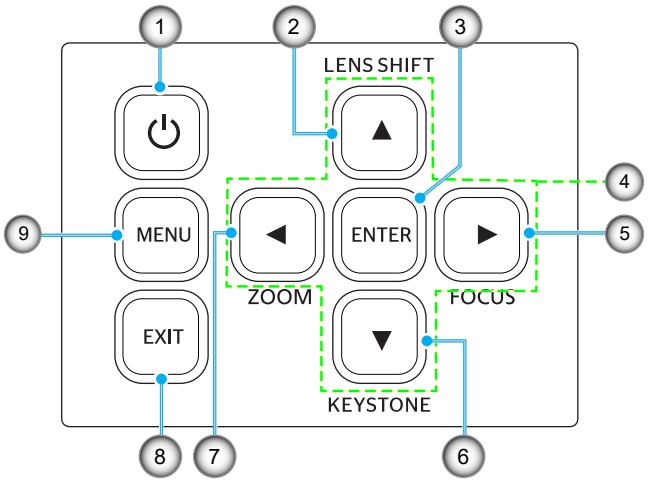

No.	Button	Function
1.	Power Button	Turns the projector on or off.
2.	Lens Shift	Adjust the lens vertical / horizontal position.
3.	Enter	Confirm the settings.
4.	Four Directional Select Keys	Navigation keys.
5.	Focus	Adjust the image focus.
6.	Keystone Correction	Adjust the keystone correction.
7.	Zoom	Adjust the image size.
8.	Exit	Returns to previous menu or exit menu if at top level.
9.	Menu	Shows the main menu on screen.

INTRODUCTION

Remote control

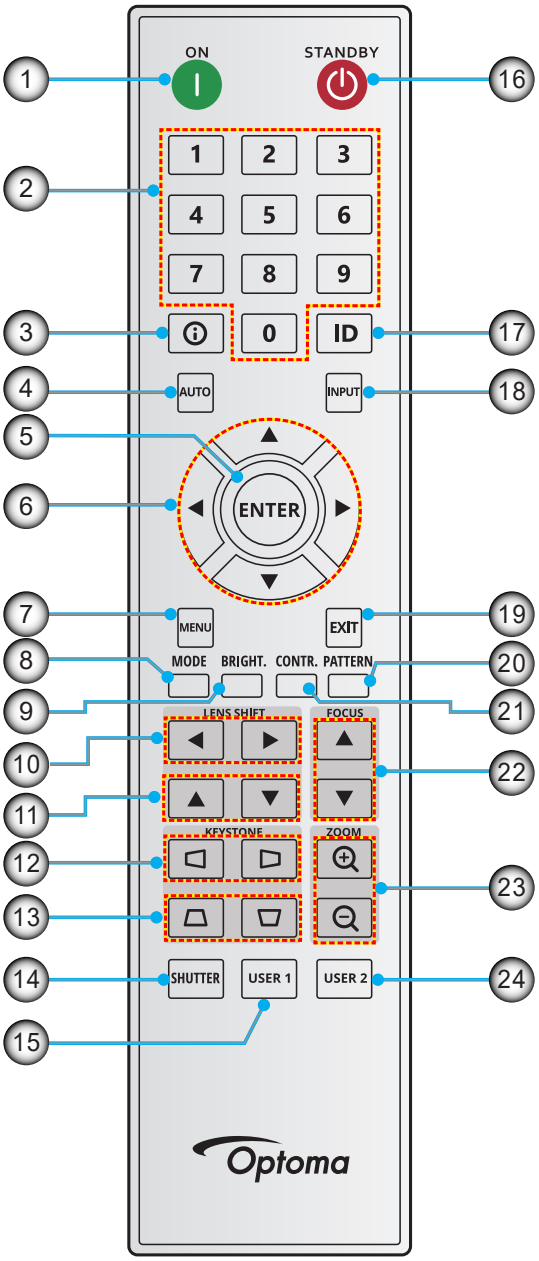

No.	Button	Function
1.	Power On	Turn the projector on.
2.	Number Keys	Input numbers (0-9).
3.	Info	Display information on the screen image.
4.	Auto	Automatically synchronize the projector to an input source.
5.	Enter	Press to confirm the selection.
6.	Arrow Keys	Use arrow keys to navigate through the menu or select the appropriate settings.
7.	Menu	Show the main menu on the screen.
8.	Mode	Press to select the preset display mode.
9.	Brightness	Set the brightness of the image.

INTRODUCTION

No.	Button	Function
10.	Left Shift (Horizontal)	Adjust the image position horizontally.
11.	Left Shift (Vertical)	Adjust the image position vertically.
12.	Keystone (Horizontal)	Adjust a horizontally keystone image.
13.	Keystone (Vertical)	Adjust a vertically keystone image.
14.	Shutter	Momentarily turn off/on the screen (AV Mute).
15.	User 1	Press to assign custom functions. See user guide for more info.
16.	Standby	Turn the projector off.
17.	ID	Set the projector address.
18.	Input	Select an input source manually.
19.	Exit	Back to previous menu.
20.	Pattern	Display test pattern.
21.	Contrast	Set the contrast of the image.
22.	Focus	Adjust the image focus.
23.	Zoom	Adjust the image size.
24.	User 2	Press to assign custom functions. See user guide for more info.

Note: *Some keys may have no function for models that do not support these features.*

SETUP AND INSTALLATION

Installing the projection lens

Before setting up the projector, install the projection lens in to the projector.

在安装或替换镜头前，关掉投影机的电源。

在镜头安装联接过程中，避免使用遥控器或投影机按键板的按钮调节侧平移镜头或缩放/聚焦。

Before installing or replacing the lens, switch off the power to the projector.


Avoid using the remote control or projector keypad button to adjust the lens shift or zoom/focus while the lens attachment process is carried out.

IMPORTANT!

- *Before installing or replacing the lens, make sure the projector's power switch is turned off.*
- *During lens installation, do not adjust the lens shift, zoom, or focus either using the remote control or the projector keypad.*
- *To prevent damage to the lens and avoid personal injury, do not clean the lens when the projector is turned on. Any damage resulting from doing so will void the warranty.*

Procedure:

1. Rotate the lens cap counterclockwise. Then remove the lens cap.

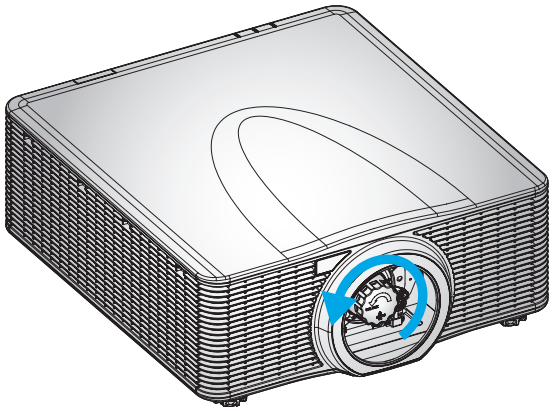

2. Install the lens into the projector.


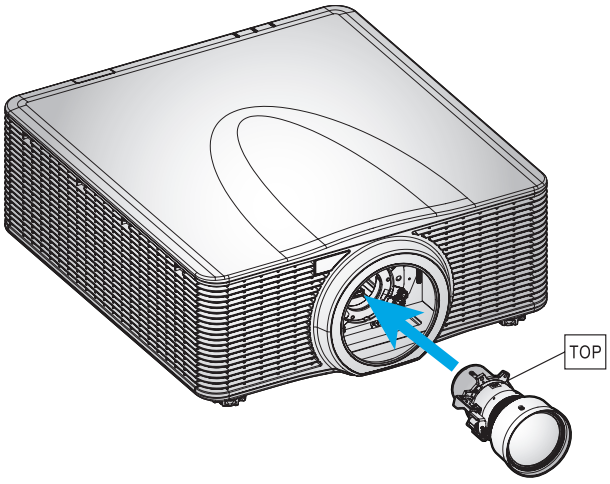



*Image shown is for illustration purposes only and may not represent the exact product model.

SETUP AND INSTALLATION

3. Rotate the lens clockwise to lock the lens in place.

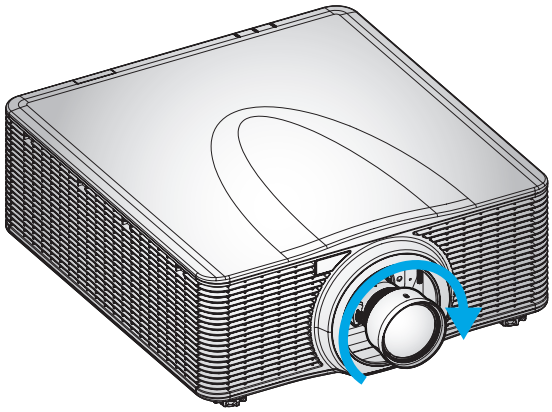

4. Firmly install the lens ring onto the lens.

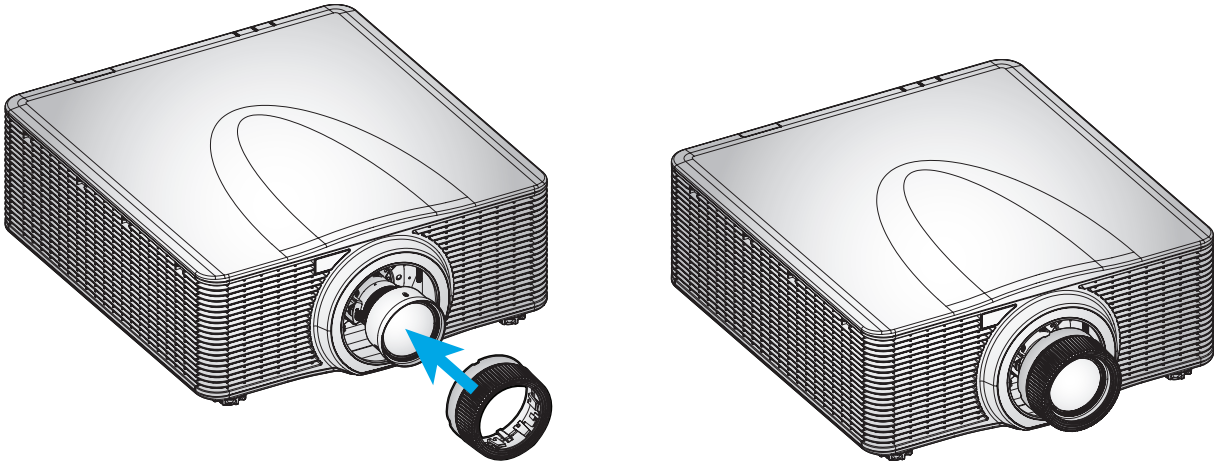


Note: *Remove the lens in the reverse order.*

*Image shown is for illustration purposes only and may not represent the exact product model.

SETUP AND INSTALLATION

Connecting Sources to the Projector

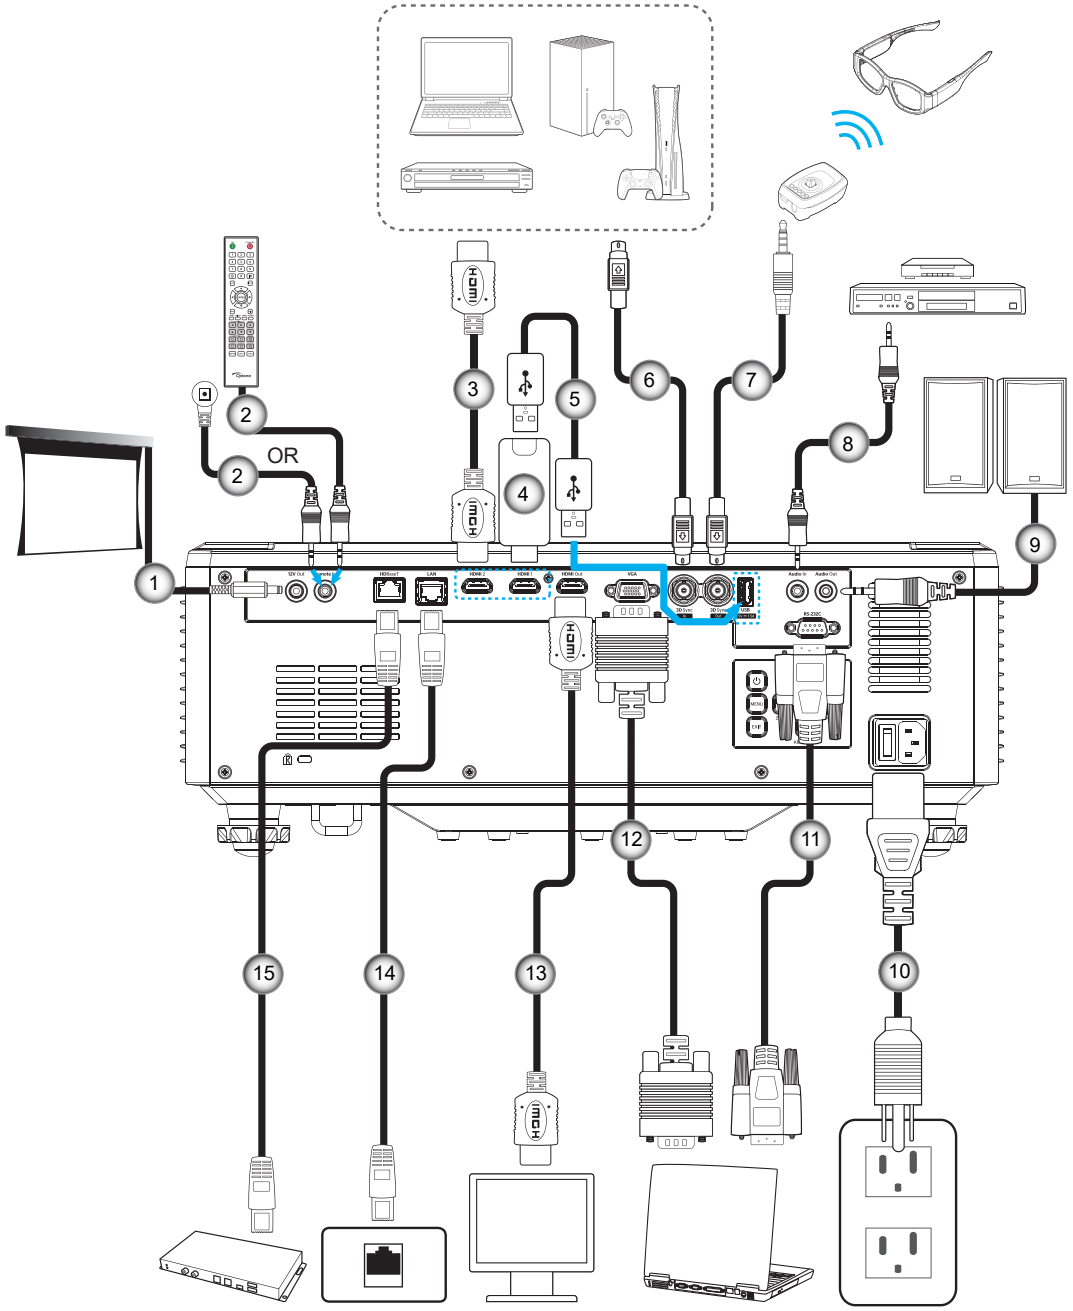

No.	Item
1.	12V DC Jack
2.	Wired Remote Control Cable or IR Receiver Cable (3.5mm TRS type)
3.	HDMI Cable
4.	HDMI Dongle
5.	USB (A to A) Cable

No.	Item
6.	3D Sync Cable
7.	3D Emitter Cable
8.	Audio In Cable
9.	Audio Out Cable
10.	Power Cord

No.	Item
11.	RS232 Cable
12.	VGA Cable
13.	HDMI Cable
14.	RJ-45 Cable
15.	RJ-45 Cable


SETUP AND INSTALLATION

Adjusting the Projector Image

Adjusting the Projector's Height

The projector is equipped with elevator feet for adjusting the image height.

1. Locate the adjustable foot you wish to adjust on the underside of the projector.
2. Rotate the adjustable foot clockwise or counterclockwise to raise or lower the projector.

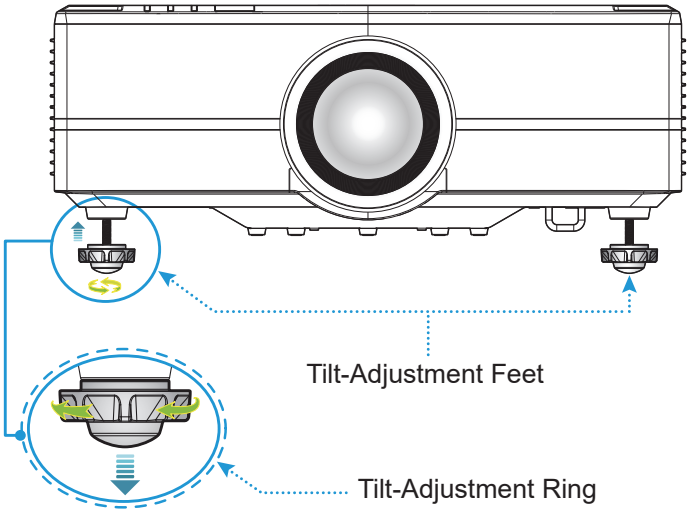


SETUP AND INSTALLATION

Adjusting the Projection Image Shift


The projection lens can be moved up, down, right, and left with the motor-driven lens shift function. This function makes the positioning of images easy on the screen. Lens shift is generally expressed as a percentage of the image height or width, see below illustration.

Vertical / Horizontal Lens Shift

When the lens is shifted to top:

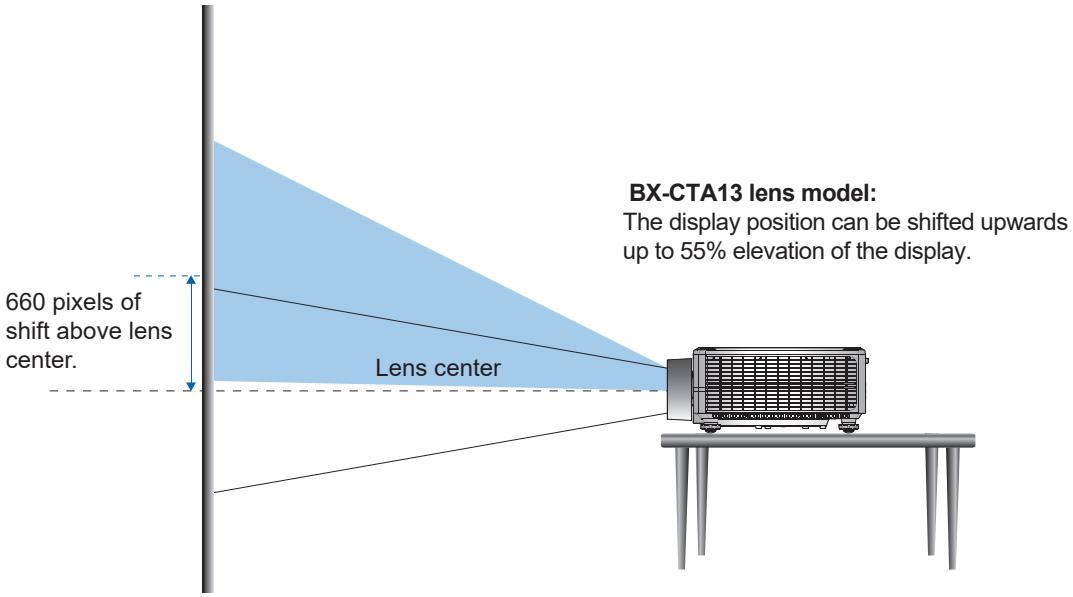


When the lens is shifted to bottom:

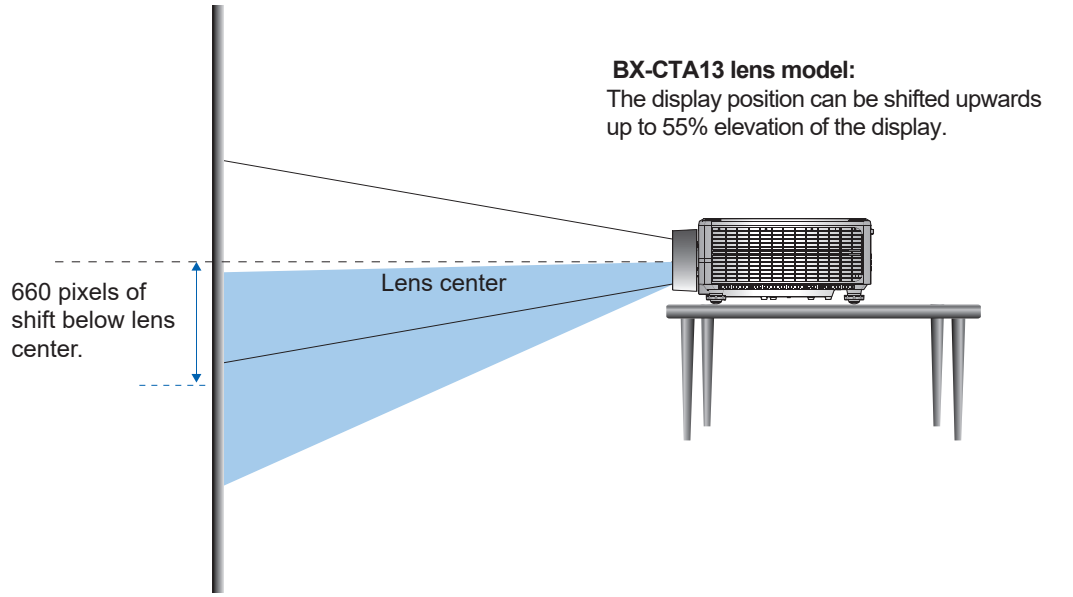


SETUP AND INSTALLATION

When the lens is shifted to the leftmost:

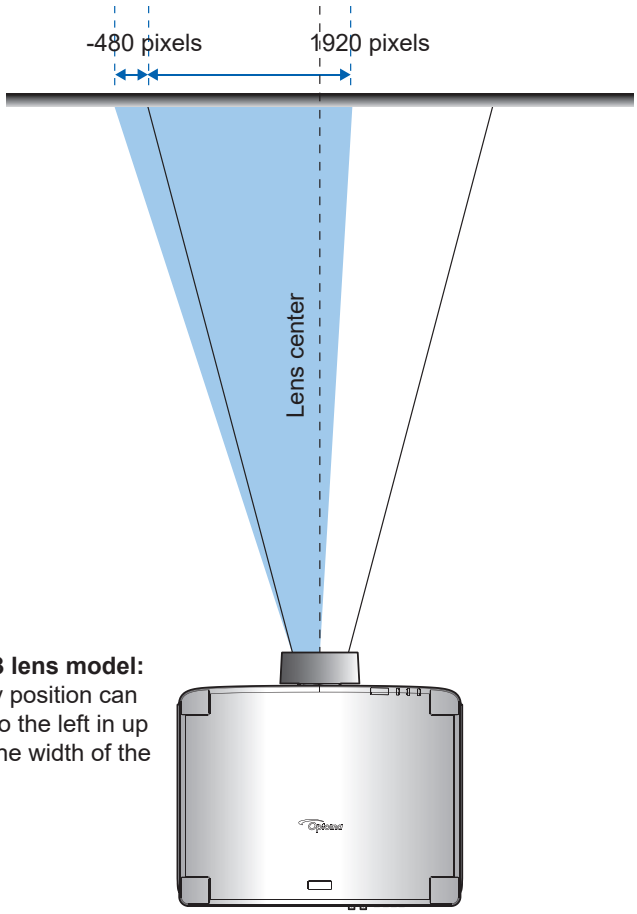

BX-CTA13 lens model:
The display position can be shifted to the left in up to 25% of the width of the display.

When the lens is shifted to the rightmost:

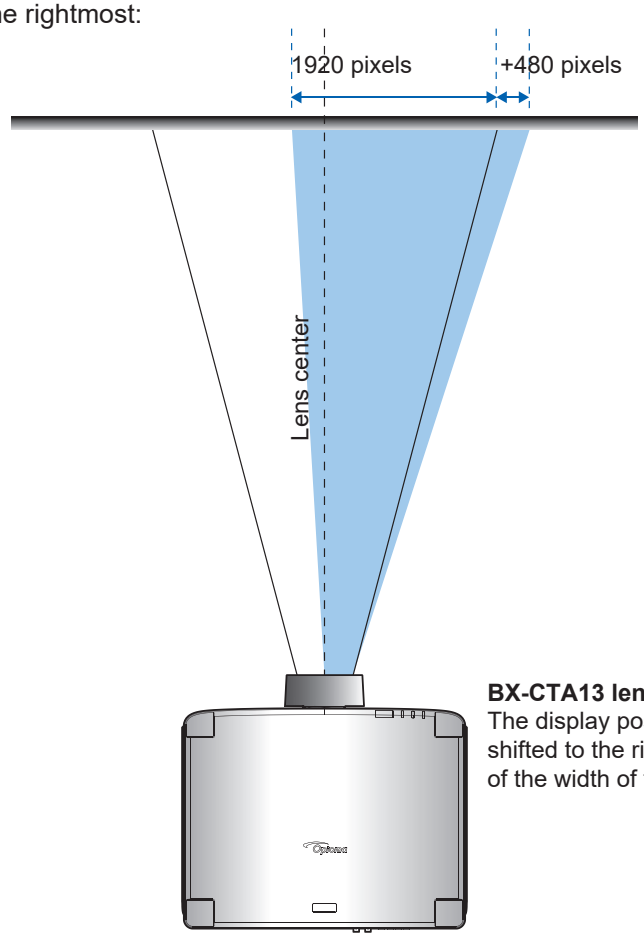


BX-CTA13 lens model:
The display position can be shifted to the right in up to 25% of the width of the display.

SETUP AND INSTALLATION

Projection distance

The distance between the projector and its screen determines the approximate size of the image. The farther the projector is from the screen, the larger the projected image will be. The image size also varies depending on the aspect ratio, zoom and other settings.

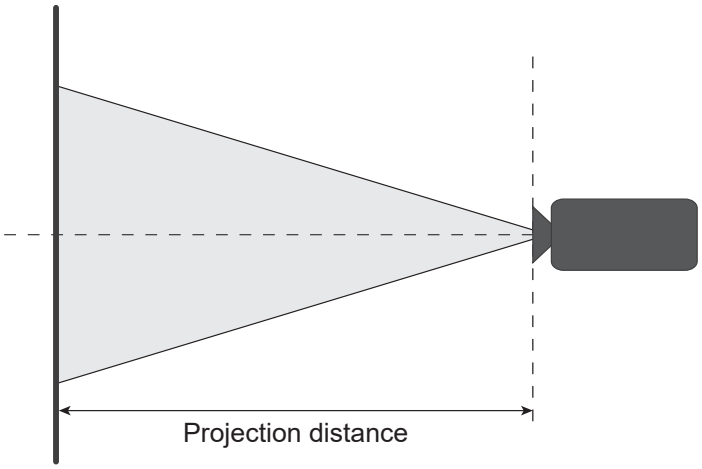

Powered lens shift range

Projection Lens	Optical Lens Shift Range		Become Dark Image		Mechanical Shift Range	
	ΔHo	ΔVo	ΔH	ΔV	Max. of ΔHm	Max. of ΔVm
BX-CTA15	30%	100%	2%	50%	40%	120%


V: Height of the projected image

H: Width of the projected image

☐ Projected image

When the lens is shifted beyond the described range of operation, screen edges may become darker or images may become out of focus.

Note: *The calculation is based on 1/2 image width and 1/2 image height.*

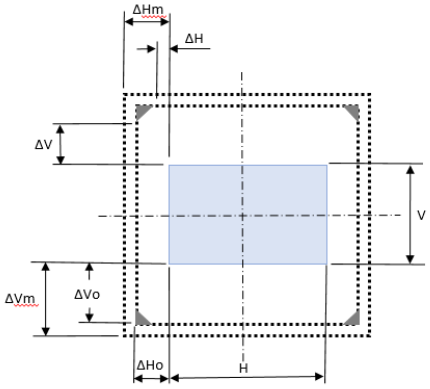

Projection Lens	Optical Lens Shift Range		Become Dark Image		Mechanical Shift Range	
	ΔHo	ΔVo	ΔH	ΔV	Max. of ΔHm	Max. of ΔVm
BX-CAA06/ BX-CTA06 BX-CTA17	30%	100%	20%	80%	40%	120%


V: Height of the projected image

H: Width of the projected image

☐ Projected image

When the lens is shifted beyond the described range of operation, screen edges may become darker or images may become out of focus.

Note: *The calculation is based on 1/2 image width and 1/2 image height.*

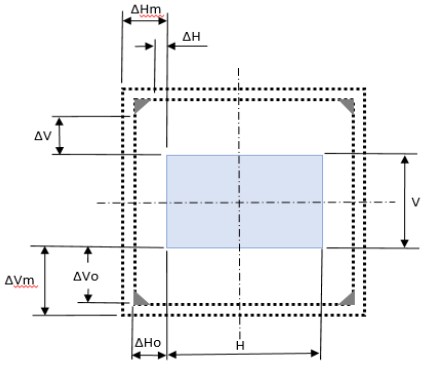

SETUP AND INSTALLATION

Projection Lens	Optical Lens Shift Range		Become Dark Image		Mechanical Shift Range	
	ΔHo	ΔVo	ΔH	ΔV	Max. of ΔHm	Max. of ΔVm
BX-CAA01/ BX-CTA01, BX-CAA03/ BX-CTA03 BX-CTA13	30%	100%	30%	100%	40%	120%


V: Height of the projected image

H: Width of the projected image

Projected image

When the lens is shifted beyond the described range of operation, screen edges may become darker or images may become out of focus.

Note: *The calculation is based on 1/2 image width and 1/2 image height.*

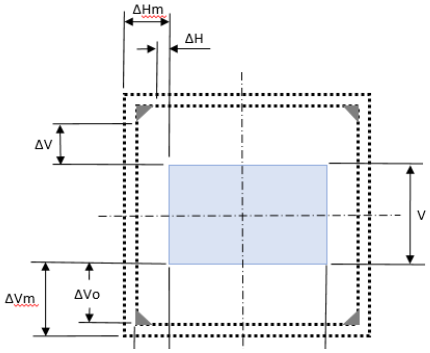


SETUP AND INSTALLATION

Adjusting the Projector's Zoom and Focus

Use the remote control or projector keypad to adjust the zoom and focus of the projected image.

- To adjust the image focus, press **Focus** and the ▲▼ buttons until the image is sharp and legible. (A)
- To adjust the image size, press **Zoom** and the 🔍+ 🔍− buttons on the remote control or ◀▶ on the keypad to get the required image size. (B)

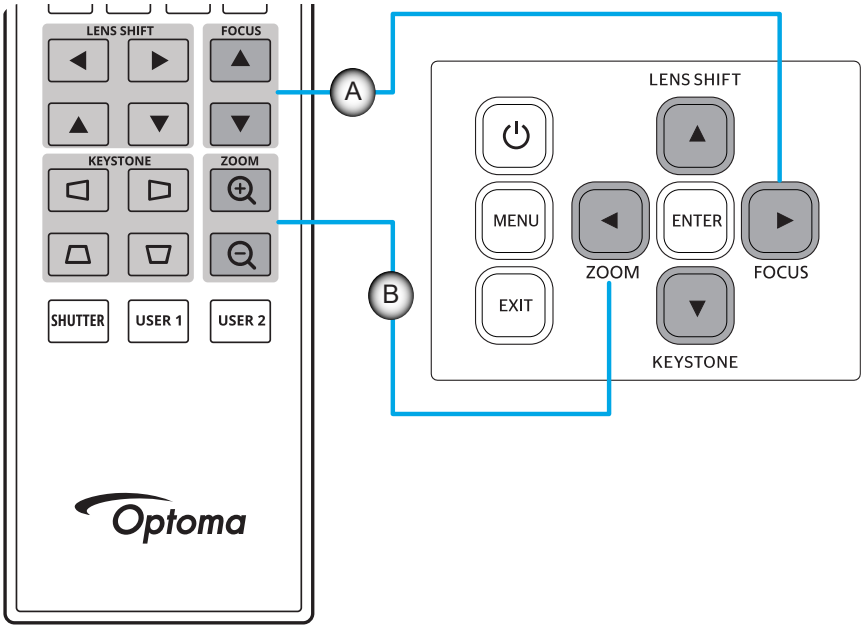


SETUP AND INSTALLATION


Adjusting the Projector Position

When you select a position for the projector, consider the size and shape of your screen, the location of your power outlets, and the distance between the projector and the rest of your equipment.

Follow these general guidelines:

- Position the projector on a flat surface at a right angle to the screen. The 1.6x/1.15x/1.26x lens models projector (with the standard lens) must be at least 50 inch (1.6x: 1.33m/ 1.15x: 0.69m/ 1.26x: 0.81m) from the projection screen.
- Position the projector to the desired distance from the screen. The distance from the lens of the projector to the screen, the zoom setting, and the video format determine the size of the projected image.
- Lens throw ratio:
  1.6x lens model:1.25 ~ 2.0
  1.15x lens model: 0.65 ~ 0.75
  1.26x lens model: 0.75 ~ 0.95
  360 degrees free orientation operation.

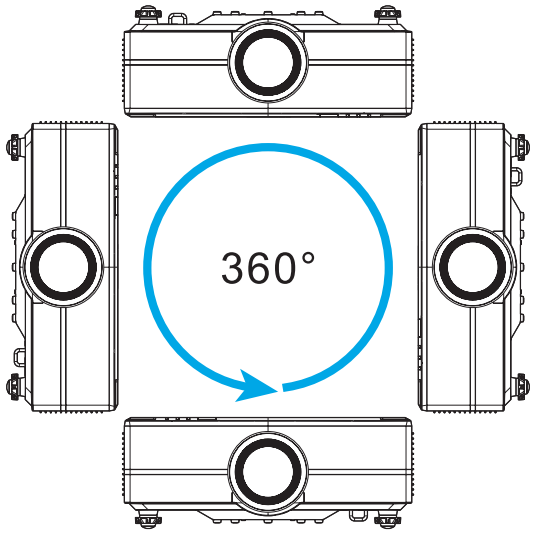

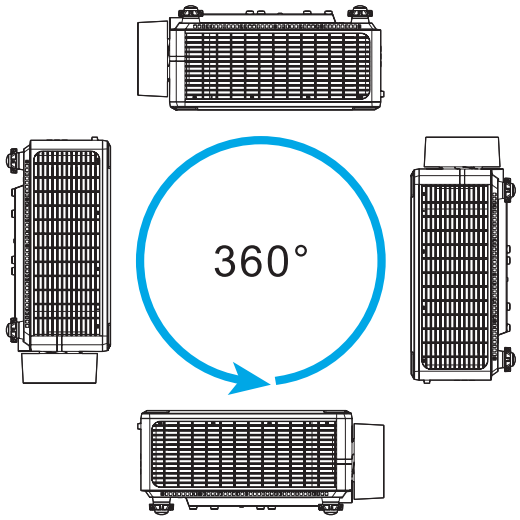

- When installing multiple projectors, keep at least 1000mm (39.4”) space between the adjacent projectors.
- For ceiling/wall mount installations, make sure to leave 15 mm (0.6”) between the ceiling mount and the bottom intake vents of the projector.


SETUP AND INSTALLATION

Remote Setup

Install / Replacing Remote Control Batteries

Two AAA size batteries are supplied for the remote control.

1. Remove the battery cover on the back of the remote control.
2. Insert AAA batteries in the battery compartment as illustrated.
3. Replace back cover on remote control.

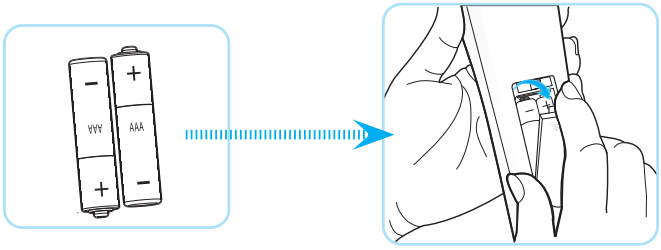

Note: *Replace only with the same or equivalent type batteries.*

CAUTION

Improper use of batteries can result in chemical leakage or explosion. Be sure to follow the instructions below.


- Do not mix batteries of different types. Different types of batteries have different characteristics.
- Do not mix old and new batteries. Mixing old and new batteries can shorten the life of new batteries or cause chemical leakage in old batteries.
- Remove batteries as soon as the are depleted. Chemicals that leak from batteries that come in contact with skin can cause a rash. If you find any chemical leakage, wipe thoroughly with a cloth.
- The batteries supplied with this product may have a shorter life expectancy due to storage conditions.
- If you will not be using the remote control for an extended period of time, remove the batteries.
- When you dispose of the batteries, you must obey the law in the relative area or country.

SETUP AND INSTALLATION

Remote Control Effective Range

Infra-Red (IR) remote control sensor is located on the top and front sides of the projector. Ensure to hold the remote control at an angle within 30 degrees perpendicular to the projector's IR remote control sensor to function correctly. The distance between the remote control and the sensor should not be longer than 20 meters (65.6 feet) when holding not longer than 30 meters (98.4 feet) when aiming the sensor at 0°.

- Make sure that there are no obstacles between the remote control and the IR sensor on the projector that might obstruct the infra-red beam.
- Make sure the IR transmitter of the projector/remote control is not being shined by sunlight or fluorescent lamps directly.
- Please keep the remote controller away from fluorescent lamps for over 2 m or the remote controller might become malfunction.
- If the remote control is close to Inverter-Type fluorescent lamps, it might become ineffective from time to time.
- If the remote control and the projector are within a very short distance, the remote control might become ineffective.
- When you aim at the screen, the effective distance is less than 5 m from the remote control to the screen and reflecting the IR beams back to the projector. However, the effective range might change according to screens.

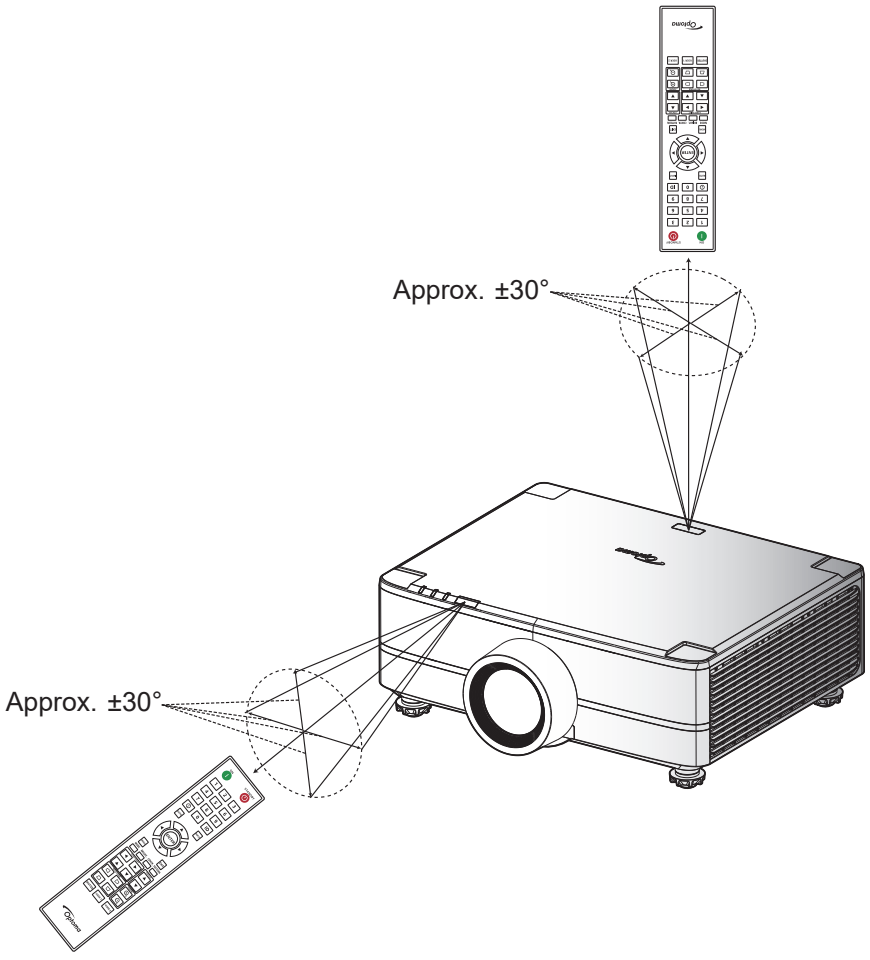


USING THE PROJECTOR

Powering On / Off the Projector


Powering On

1. Securely connect the power lead and signal/source cable. When connected, the power LED will turn red.
2. Set the power switch to the " | " (On) position and wait until the "⏻" button on the projector keypad is solid red.

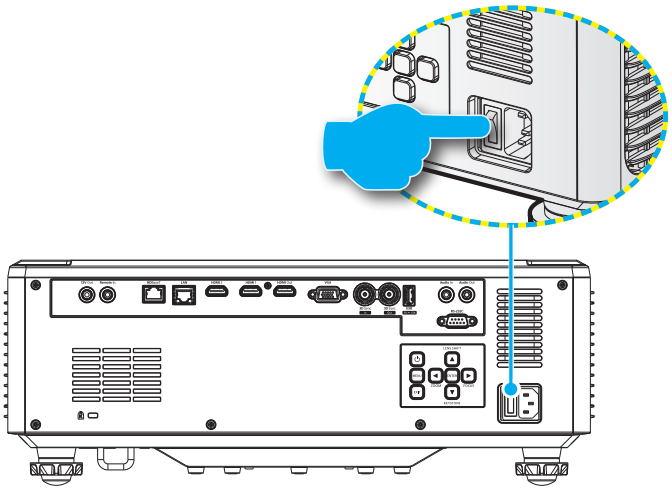

3. Turn on the projector by pressing the "⏻" button on the projector keypad or remote control.


   During startup the power LED is flashing red and during normal operation, the power LED is solid green.

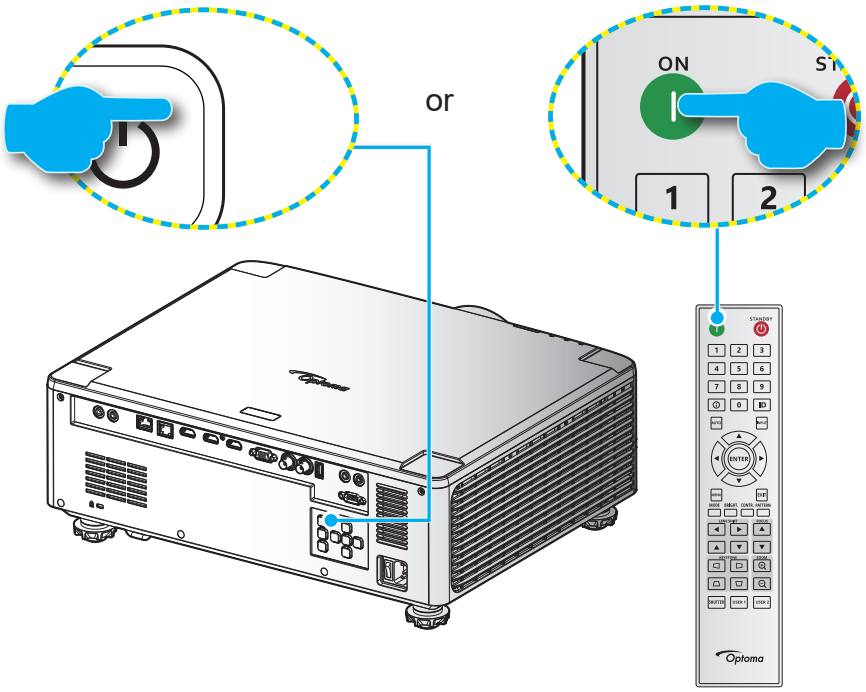

USING THE PROJECTOR

Powering Off

1. Turn off the projector by pressing the "⏻" button on the projector keypad or the ⏽ button on the remote control. The following message will be displayed:

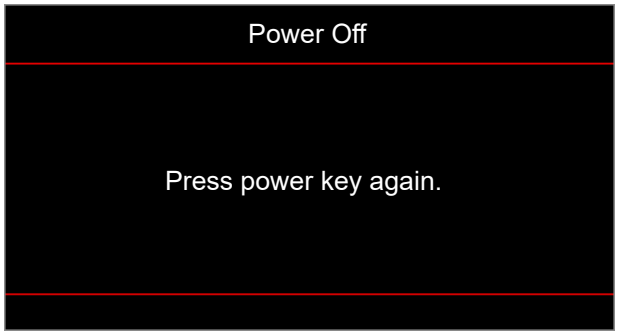

2. Press the ⏻ or ⏽ button again to confirm, otherwise the message will disappear after 15 seconds. When you press the ⏻ or ⏽ button for the second time, the projector will shut down.
3. During the cooling cycle, the power LED is flashing green. When the power LED turns solid red, this indicates the projector has entered standby mode. If you wish to turn the projector back on, you must wait until the cooling cycle has finished and the projector has entered standby mode. When the projector is in standby mode, simply press the "⏻" button on the projector or the remote control again to turn on the projector.
4. Disconnect the power cord from the electrical outlet and the projector.

Note:


- *It is not recommended that the projector is turned on immediately, right after a power off procedure.*
- *By default, the projector turns off automatically after 20 minutes of inactivity. You can modify the idle time length in "Auto Power off (min.)" menu in "System Settings → Power". If you want the projector to enter standby mode instead, disable auto power off and set the sleep time interval in "System Settings → Power →Sleep Timer (min.)".*

USING THE PROJECTOR

Menu navigation and features

The projector has multilingual on-screen display (OSD) menus that allow you to make image adjustments and change a variety of settings.

1. To open the OSD menu, press the **Menu** key on the remote control or projector keypad.
2. To select a main menu or sub menu, use the ▲▼ buttons to highlight it. Then, press the **Enter** button to enter the sub menu.
3. Press the **Exit** button to return to the previous menu or exit the OSD menu if at top level.
4. Setting methods to adjust the function value or selection an option.
   - To adjust the slide bar values, highlight the function, and use the ◀▶ buttons to change value.
   - To check or uncheck a checkbox, highlight the function, and press **Enter**.
   - To input a number or symbol, highlight the number or symbol, and use the ▲ ▼ buttons to make a selection. You can also use the number keys on the remote control or keypad.
   - To select a function option, use the ▲▼◀▶ buttons to make the selection. If no **Enter** icon shows at the navigation bar, the highlighted option is automatically applied. If there is an **Enter** icon at the navigation bar, press **Enter** to confirm your selection.

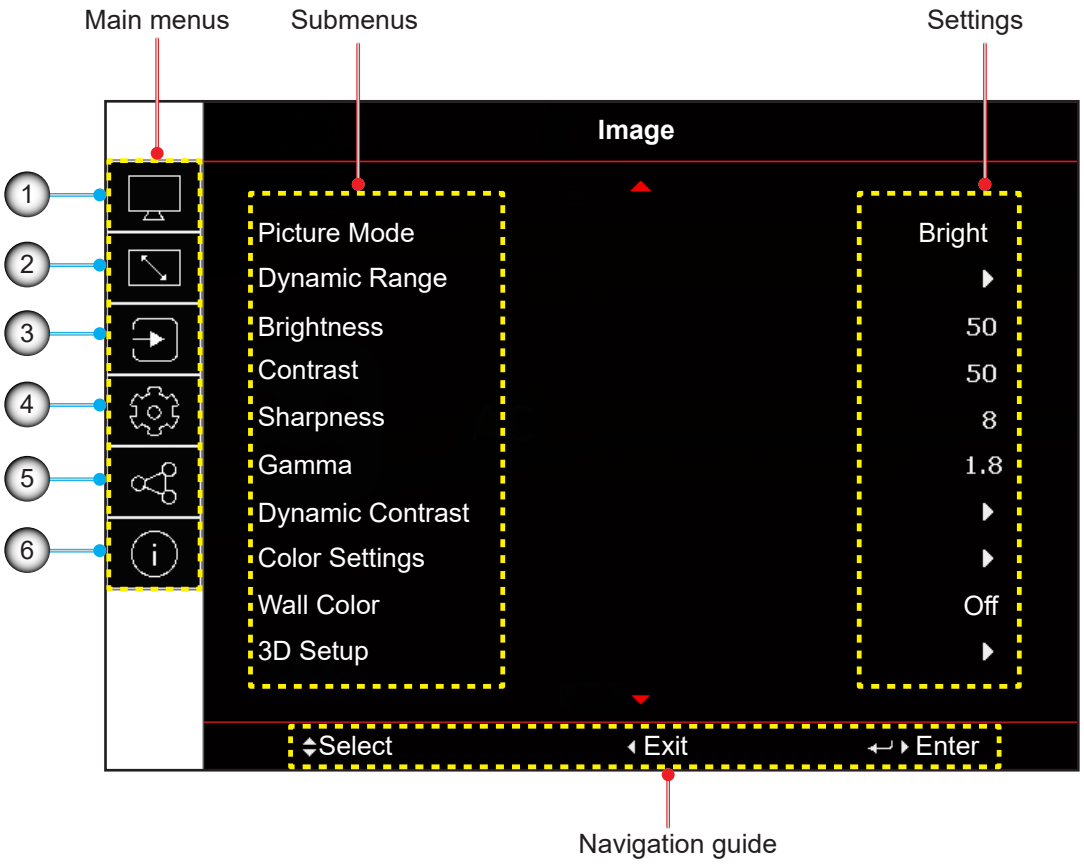

No	Item	No	Item
1.	Image menu	4.	Device setup menu
2.	Display menu	5.	Communication menu
3.	Input settings menu	6.	Information menu

USING THE PROJECTOR

OSD menu tree

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Image	Picture Mode					Presentation
						Bright [default]
						Cinema
						HDR
						sRGB
						DICOM SIM.
						Blending
						3D
						2D High Speed
						User
	Dynamic Range	HDR				Off
						Auto [default]
		HDR Picture Mode				Bright
						Standard [default]
						Film
						Detail
	Brightness					0~100 [default: 50]
	Contrast					0~100 [default: 50]
	Sharpness					1~15 [default: 10]
	Gamma					Film
						Graphics
						Standard(2.2)
						Vivid
						3D
						Blackboard
						DICOM SIM.
						1.8
						2.0
						2.4
						2.6
	Dynamic Contrast	Dynamic Black				Off [default]
						On
		Speed				1~15 [default: 1]
		Strength				0~3 [default: 2]
		Level				50%~100% [default: 100%]
		Extreme Black				Off [default]
						On
		AV Mute Timer				0s~10s [default: 0s]
		Black Signal Level				0~5 [default: 0]

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Image	Color Settings	Color				0~100 [default: 60]
		Tint				0~100 [default: 50]
		Color Temperature				Warm
						Standard [default]
						Cool
		Color Wheel Speed				2X
						3X [default]
		White Balance	Red Gain			0-100 [default: 50]
			Green Gain			0-100 [default: 50]
			Blue Gain			0-100 [default: 50]
			Red Offset			0-100 [default: 50]
			Green Offset			0-100 [default: 50]
			Blue Offset			0-100 [default: 50]
		White Enhancement				0~10 [default: 10]
		Color Space				Auto [default]
						RGB (0-255)
						RGB (16-235)
						REC709
						REC601
		Color Matching	Auto Test Pattern			Off
						On [default]
			Red	Hue		0~254 [default: 127]
				Saturation		0~254 [default: 127]
				Luminance		0~254 [default: 127]
			Green	Hue		0~254 [default: 127]
				Saturation		0~254 [default: 127]
				Luminance		0~254 [default: 127]
			Blue	Hue		0~254 [default: 127]
				Saturation		0~254 [default: 127]
				Luminance		0~254 [default: 127]
			Cyan	Hue		0~254 [default: 127]
				Saturation		0~254 [default: 127]
				Luminance		0~254 [default: 127]
			Magenta	Hue		0~254 [default: 127]
				Saturation		0~254 [default: 127]
				Luminance		0~254 [default: 127]
			Yellow	Hue		0~254 [default: 127]
				Saturation		0~254 [default: 127]
				Luminance		0~254 [default: 127]
			White	Red		0~254 [default: 127]
				Green		0~254 [default: 127]
				Blue		0~254 [default: 127]
			Reset			Yes
						Cancel [default]

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Image	Wall Color					Off [default]
						Blackboard
						Light Yellow
						Light Green
						Light Blue
						Pink
						Gray
	3D Setup	3D Mode				Off
						Active 3D [default]
		3D Format				Auto [default]
						Frame Packing
						Side by Side
						Top and Bottom
						Frame Sequential
		3D Tech				DLP-link
						3D Sync [default]
		3D-2D				3D [default]
						L
						R
		3D Sync Out				To Emitter [default]
						To Next Projector
		3D Invert				Off [default]
						On
		Frame Delay				1~200 [default: 1]
		Reset				Yes
						Cancel [default]
	Save to User					Yes
						Cancel [default]
	Apply to User					User-Presentation
						User-Bright [default]
						User-Cinema
						User-HDR
						User-sRGB
						User-DICOM SIM.
						User-Blending
						User-3D
						User-2D High Speed
	Reset					Yes
						Cancel [default]

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Display	Aspect Ratio					Auto [default]
						4:3
						16:9
						16:10
						LBX
						Native
	Digital Zoom	Proportional				Off [default]
						On
		Horizontal				50%~400% [default: 100]
		Vertical				50%~400% [default: 100]
		Horizontal Shift				0~100 [default: 50]
		Vertical Shift				0~100 [default: 50]
		Reset				Yes
						Cancel [default]
	Image Shift	H. Position				0~100 [default: 50]
		V. Position				0~100 [default: 50]
		Reset				Yes
						Cancel [default]
	Geometric Correction	Warp Control				Basic [default]
						Advanced
						AP
		Basic Warp	Keystone	Horizontal		0~40 [default: 20]
				Vertical		0~40 [default: 20]
			Pincushion	Horizontal		0~100 [default: 50]
				Vertical		0~100 [default: 50]
			4-Corner	Top Left		
				Top Right		
				Bottom Left		
				Bottom Right		
		Advanced Warp	Grid Color			Green [default]
						Magenta
						Red
						Cyan
			Grid Background			Black [default]
						Transparent
			Warp Setting	Grid Points		2x2 [default]
						3x3
						5x5
						9x9
						17x17
				Warp Inner		Off [default]
						On
				Warp Sharpness		0~9 [default: 9]
			Blend Setting	Blend Width		[default: 0]
				Overlap Grid Number		4 [default] / 6 / 8 / 10 / 12
				Gamma		1.8 /1.9 /2.0 /2.1 /2.2 [default] /2.3 /2.4

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Display	Geometric Correction	Advanced Warp	Black Level	Area		Bottom [default]
						Top
				Enable		Off [default]
						On
				Edit Area		
				Add Point		
				Remove Point		
				Brightness	Brightness	
					Red	0~255 [default: 20]
					Green	0~255 [default: 20]
					Blue	0~255 [default: 20]
					Exit	
				Red		0~255 [default: 20]
				Green		0~255 [default: 20]
				Blue		0~255 [default: 20]
				Reset	Bottom	Yes
						Cancel [default]
					Top	Yes
						Cancel [default]
					All	Yes
						Cancel [default]
		Memory	Save Memory			Memory 1 [default] ~Memory 5
			Apply Memory			Memory 1 [default] ~Memory 5
			Clear Memory			Yes
						Cancel [default]
		Reset				Yes
						Cancel [default]
	Edge Mask					0~10 [default: 0]
	Freeze Screen					Unfreeze [default]
						Freeze
	Test Pattern					Off [default]
						Green Grid
						Magenta Grid
						White Grid
						White
						Black
						Red
						Green
						Blue
						Yellow
						Magenta
						Cyan
						ANSI Contrast 4x4
						Color bar
						Full screen

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Display	PIP/PBP	Screen				Off [default]
						PIP
						PBP
		Main Source				VGA
						HDMI1
						HDMI2
						HDBaseT
		Sub Source				VGA
						HDMI1
						HDMI2
						HDBaseT
		Swap				Swap
		Size				Small [default]
						Medium
						Large
		Location				PBP, Main Left [default]
						PBP, Main Top
						PBP, Main Right
						PBP, Main Bottom
						PIP, Bottom Right [default]
						PIP, Bottom Left
						PIP, Top Left
						PIP, Top Right
	Reset					Yes
						Cancel [default]
Input Settings	Auto Source					Off
						On [default]
	Quick Resync					Off
						On [default]
	Active Inputs					VGA [default]
						HDMI1
						HDMI2
						HDBaseT
	Latency Adjustment					Normal [default]
						2D Ultra
	VGA	Phase				0 ~ 100 [default: 50]
		Resolution				[read only]
	HDMI	Output				HDMI 1 [default]
						HDMI 2
		HDMI 1 EDID				1.4
						2.0 [default]
		HDMI 2 EDID				1.4
						2.0 [default]
	Reset					Yes
						Cancel [default]

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Language					English [default]
						Deutsch
						Français
						Italiano
						Español
						Português
						Polski
						Nederlands
						Norsk
						繁體中文
						簡体中文
						日本語
						한국어
						Русский
						Magyar
						ไทย
	Projection	Ceiling				Auto [default]
						On
						Off
		Rear				Off [default]
						On
	Lens Settings	Focus				[Focus for adjust]
		Zoom				[Zoom for adjust]
		Lens Shift				[Pattern for adjust]
		Lens Shift Memory	Save Memory			Memory 1~Memory 5
			Apply Memory			Memory 1~Memory 5
			Clear Memory			Yes
						Cancel [default]
		Lens Calibration				Yes
						Cancel [default]
		Lens Lock				Lock
						Unlock [default]
		Reset				Yes
						Cancel [default]
	Schedule	Date and Time				Read Only
		Schedule Mode				Off [default]
						On
		View Today				Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday [Read only]

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Schedule	Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday	Schedule Enable			Off [default]
						On
			Event 01-08 Event 09-16	Time		00:00 ~ 23:59
				Function		Off [default] / Power Settings / Input Source / Light Source Mode / Shutter
				Event		Off [Function = Off]
				(Function = Power Settings)		Power On [Function = Power Settings] / Eco / Active / Communication
				(Function = Input Source)		VGA [Function = Input Source] / HDMI1 / HDMI2 / HDBaseT
				(Function = Light Source Mode)		Normal Mode [Function = Light Source Mode] / Eco Mode / Custom Brightness
				(Function = Shutter)		Shutter On [Function = Shutter] / Shutter Off
				Reset		Yes
						Cancel [default]
			Copy Events To			Monday / Tuesday / Wednesday / Thursday / Friday / Saturday / Sunday
			Reset the Day			Yes
						Cancel [default]
		Reset Schedule				Yes
						Cancel [default]
	Date and Time	Clock Mode				Use NTP Server [default]
						Manual
		Date				2000 ~ 2037 (Year) [default: 2020]
						01 ~ 12 (Month) [default: 1]
						01 ~ 31 (Day)[default: 1]
		Time				00 ~ 23 (Hour) [default: 0]
						00 ~ 59 (Minute) [default: 0]
		Daylight Saving Time				Off [default]
						On
		NTP Server				time.google.com [default]
						asia.pool.ntp.org
						europe.pool.ntp.org
						north-america.pool.ntp.org
		Time Zone				[default: UTC+00:00]
		Update Interval				Hourly [default]
						Daily
		Apply				Yes
						Cancel [default]

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Power Settings	Power Mode (Standby)				Eco
						Active
						Communication [default]
		Signal Power On				Off [default]
						On
		Auto Power Off				0 ~ 180m [default: 0m]
		Sleep Timer				0 ~ 16h [default: 0h]
		12V Trigger				Off [default]
						On
		Reset				Yes
						Cancel [default]
	Light Source Settings	Light Source Mode				Normal [default]
						Eco Mode
						Custom Power
		Custom Brightness	Brightness Level			30% ~ 100% [default: 100%]
			Constant Brightness			Off [default]
						On
	Shutter	Fade-In				0.5 ~ 5s [default: 0.5s]
		Fade-Out				0.5 ~ 5s [default: 0.5s]
		Startup				Shutter Off [default]
						Shutter On
	Audio	Mute				Off [default]
						On
		Volume				0 ~ 10 [default: 5]
	Security	Security				Off [default]
						On
		Security Timer	Month			0 ~ 35 [default: 0]
			Day			0 ~ 29 [default: 0]
			Hour			0 ~ 23 [default: 0]
		Change Password				
	On Screen Display	Menu Location				Top Left
						Top Right
						Center [default]
						Bottom Left
						Bottom Right
		Menu Transparency				0 ~ 9 [default: 0]
		Menu Timer				Off
						5s
						10s
						15s [default]
						30s
						60s
		Information Hide				Off [default]
						On
		Background				Blue
						Black
						White
						Logo [default]

USING THE PROJECTOR

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Device Setup	Logo Setup	Change Logo				Default Logo [default]
						Neutral
						User Logo
						Captured Logo
		Logo Capture				Yes
						Cancel [default]
		Delete Logo	Captured Logo			Yes
						Cancel [default]
			User Logo			Yes
						Cancel [default]
	High Altitude					Off [default]
						On
	User Data	Save all settings				Memory 1 [default] ~ Memory 5
		Load all settings				Memory 1 [default] ~ Memory 5
	System Update	Auto				Off [default]
						On
		Auto Download				Off
						On [default]
		Update				Cancel [default]
						Yes
	Reset	Reset OSD				Yes
						Cancel [default]
		Reset to default				Yes
						Cancel [default]
		Reset Selective	Image			Yes
						Cancel [default]
			Display			Yes
						Cancel [default]
			Input			Yes
						Cancel [default]
			Communication			Yes
						Cancel [default]
			Setup			Yes
						Cancel [default]
Communi-cation	Projector ID					0 ~ 99 [default: 0]
	Remote Setup	Remote Code				0 ~ 99 [default: 0]
		Quick Switch Code				Off [default]
						1 ~ 9
		IR Function	Front			Off
						On [default]
			Top			Off
						On [default]
			HDBaseT			Off [default]
						On

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Communi-cation	Remote Setup	User 1				Freeze Screen [default]
						Blank Screen
						PIP/PBP
						Aspect Ratio
						Information Hide
						Network setup
						Projector ID
						Color Matching
						Reset Selective
						Quick Switch Code
						Audio Mute
						Audio Volume
		User 2				Freeze Screen
						Blank Screen
						PIP/PBP [default]
						Aspect Ratio
						Information Hide
						Network setup
						Projector ID
						Color Matching
						Reset Selective
						Quick Switch Code
						Audio Mute
						Audio Volume
	Network Setup	LAN Interface				RJ-45 [default]
						HDBaseT
		MAC Address				[read only]
		Network Status				[read only] Connected
						[read only] Disconnected
		DHCP				Off [default]
						On
		IP Address				[default: 192.168.0.100]
		Subnet Mask				[default: 255.255.255.0]
		Gateway				[default: 192.168.0.51]
		DNS				[default: 0.0.0.0]
		Apply				Yes
						Cancel [default]
		Network Reset				Yes
	Email Notification	Email				
		Email 1				[read only]
		Email 2				[read only]
		Event				
		Fan Error				Off [default]
						Email
		Power On/Off				Off [default]
						Email

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Communi-cation	Email Notification	Video Loss				Off [default]
						Email
		Laser				Off [default]
						Email
		Reset				Yes
						Cancel [default]
	Control	Crestron				Off
						On [default]
		IP Address				[default: 192.168.0.2]
		IP ID				2 ~ 255 [default: 5]
		Port				0 ~ 65535 [default: 41794]
		Crestron Setup Apply				Yes
						Cancel [default]
		PJ Link				Off
						On [default]
		Authentication				Off [default]
						On
		Password				[read only]
		Service				[default: 192.168.0.3]
		PJ Link Setup Apply				Yes
						Cancel [default]
		Extron				Off
						On [default]
		AMX				Off
						On [default]
		Telnet				Off
						On [default]
		HTTP				Off
						On [default]
		Reset				Yes
						Cancel [default]
	Baud Rate	Serial Port In				1200
						2400
						4800
						9600
						19200
						38400
						57600
						115200 [default]
	Reset					Yes
						Cancel [default]

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Information	Device	Regulatory				
		Serial Number				
		Projection Hours				
	System Status	Standby Mode				
		Light Source Mode				
		Light Source Hours				
		Total Hours				
		Normal				
		Eco Mode				
		Custom Power				
		Ambient Temp				
		Temperature				
	Communication	Projector ID				
		Remote Code				
		Network				
		LAN Interface				
		MAC Address				
		Network Status				
		DHCP				
		IP Address				
		Subnet Mask				
		Gateway				
		DNS				
		Control				
		Crestron				
		Extron				
		PJ Link				
		AMX				
		Telnet				
		HTTP				
	Signal	Input Signal				
		Resolution				
		Signal Format				
		Pixel Clock				
		Horz Refresh				
		Vert Refresh				
		Color Space				
		Picture Mode				
		Second Signal				
		Resolution				
		Signal Format				
		Pixel Clock				
		Horz Refresh				
		Vert Refresh				
		Color Space				

Main Menu	Sub Menu 2	Sub Menu 3	Sub Menu 4	Sub Menu 5	Sub Menu 6	Values
Information	Firmware Version	Main Version				
		I-SCALER Version				
		F-MCU Version				
		M-MCU Version				
		A-MCU Version				
		LAN Version				
		Formatter Version				
		HDBaseT Version				
		Camera Version				

USING THE PROJECTOR

Image menu

Learn how to configure image settings.

Submenus

- Picture Mode
- Dynamic Range
- Brightness
- Contrast
- Sharpness
- Gamma
- Dynamic Contrast
- Color Settings
- Wall Color
- 3D Setup

Picture Mode

There are many factory presets optimized for various types of images.

Presentation

This mode is suitable for showing in front of public in connection to the PC.

Bright

Maximum brightness from PC input.

Cinema

Provides the best colors for watching movies.

HDR

Decodes and displays High Dynamic Range (HDR) content for the deepest blacks, brightest whites, and vivid cinematic color using REC.2020 color gamut. This mode will be automatically enabled if HDR is set to Auto (and HDR Content is sent to projector – 4K UHD Blu-ray, 1080p/4K UHD HDR Games, 4K UHD Streaming Video). While HDR mode is active, other display modes (Cinema, Reference, etc.) cannot be selected as HDR delivers color that is highly accurate, exceeding the color performance of the other display modes.

sRGB

Standardized accurate color.

DICOM SIM.

This mode can project a monochrome medical image such as an X ray radiography, MRI, etc.

Blending

When using multiple projectors, this mode can eliminate the visible banding and create a single bright, high resolution image across the screen.

3D

To experience the 3D effect, you need to have 3D glasses, make sure your PC/portable device has a 120 Hz signal output quad buffered graphics card and have a 3D Player installed.

2D High Speed

Displays the status of 2D High Speed mode.

User

Memorize user’s settings.

Note:

- *When 3D mode is selected, the Presentation, Bright, Cinema, HDR, sRGB, DICOM SIM., Blending, and 2D High Speed mode will be unavailable.*
- *When 2D High Speed mode is selected, the Presentation, Bright, Cinema, HDR, sRGB, DICOM SIM., Blending, and 3D mode will be unavailable.*
- *When Blending mode is selected, the HDR, 3D, and 2D High Speed will be unavailable*.

Dynamic Range

Configure the High Dynamic Range (HDR) setting and its effect when displaying video from 4K Blu-ray players and streaming devices.

Note: *Only HDMI supports the Dynamic Range function.*

HDR (High Dynamic Range)

- **Off**: Turn off HDR Processing. When set to Off, the projector will NOT decode HDR content.
- **Auto**: Auto detect HDR signal.

HDR Picture Mode

- **Bright**: Choose this mode for brighter more saturated colors.
- **Standard**: Choose this mode for natural looking colors with a balance of warm and cool tones.
- **Film**: Choose this mode for improved detail and image sharpness.
- **Detail**: The signal comes from OETF conversion to achieve the best color matchings.

Brightness

Adjust the brightness of the image.

Contrast

The contrast controls the degree of difference between the lightest and darkest parts of the picture.

Sharpness

Adjust the sharpness of the image.

Gamma

Set up gamma curve type. After the initial setup and fine tuning is completed, utilize the Gamma Adjustment steps to optimize your image output.

Film

For home theater.

Graphics

For PC / Photo source.

Standard (2.2)

For standardized setting.

Vivid

Best for playing games. In this mode, color saturation and brightness are well-balanced.

3D

Best for playing 3D videos.

Blackboard

Best for projecting on to a blackboard.

DICOM SIM.

Best for projecting monochrome medical images, such as X-ray diagram.

1.8 / 2.0 / 2.4 / 2.6

For specific PC / Photo source.

Note: *When Blending mode is selected, only gamma Standard2.2 is supported.*

Dynamic Contrast

Set up the Dynamic Contrast to maximize the contrast for dark content.

- **Dynamic Black:** Enable this function to automatically adjust the contrast ratio for video sources. It improves the black level in dark scenes by reducing the light output.
- **Speed:** Adjust the speed of the light source correction. The value ranges from 1 to 15. A lower value makes the correction slower and less aggressive while a higher value results in the faster correction.
- **Strength:** Set the strength of the dynamic contrast adjustment. The value ranges from 0 to 3, the higher the value the stronger the correction.
- **Level:** Adjust the light source when the brightness level of the current content gets lower than the set value. The value ranges from 50% to 100%. The higher the value, the larger the range to adjust the light source.
- **Extreme Black:** Enable this function to automatically increase the contrast ratio by turning off the laser light when black image is detected.
- **AV Mute Timer:** Set a timer for the laser light to turn off after detecting black content. The set value ranges from 0s to 10s.
- **Black Signal Level:** Set a black level value as the threshold for the Real Black function. The value can be adjusted from 0% to 5%, with 0 being the darkest black and 5 being the brightest.

Note:

- *When Dynamic Black is turned on, the Extreme Black will be unavailable.*
- *When Dynamic Black is turned off, the Speed, Strength, and Level will be unavailable.*
- *When Extreme Black is turned on, the Dynamic Black, Speed, Strength, and Level will be unavailable.*

Color Settings

Configure the color settings of the projected image to improve the color performance.

Color

Adjust the saturation of the selected color. The value indicates the color shifts from or towards the white in the center of the chromaticity diagram.

Tint

Adjust the color balance of red and green in video images.

Color Temperature

Adjust the color temperature of the projected image. The available options are Warm, Standard, or Cool.

Color Wheel Speed

Set the projector color wheel speed to 2X or 3X.

White Balance

Adjust the white balance of the projected image via gain and offset. Gain and offset are individual controls for each RGB channels used to set greyscale. The Gains calibrate the color of the dark parts and Bias calibrate the white parts.

- **Red / Green / Blue Gain:** Adjust the color of the image's bright areas.
- **Red / Green / Blue Offset:** Adjust the color of the image's dark areas.

White Enhancement

Adjust the image color brightness while providing more vibrant colors, in increments from 0 to 10.

Color Space

Select a color space that has been specifically tuned for the input signal. The available options are Auto (default), RGB (0~255), RGB (16~235), REC709, and REC601.

Color Matching

Change the color of a projected image by adjusting each color component in the image. The adjustable color includes Red, Green, Blue, Cyan, Yellow, and Magenta (R / G / B / C / Y / M).

- **Auto Test Pattern:** Enable the function to view a specific color pattern while adjusting.
- **R / G / B / C / Y / M:** Select a color for further adjustment.
  - **Hue**: Adjust the hue of the selected color. The value reflects the number of degrees of rotation around the chromaticity diagram from the original color. Increasing value indicates counterclockwise rotation, and decreasing value, clockwise rotation.
  - **Saturation**: Adjust the saturation of the selected color. The value indicates the color shifts from or towards the white in the center of the chromaticity diagram.
  - **Luminance**: Adjust the luminance of the selected color. Increase the value to brighten the image (add white to a color) or decrease the value to darken the image (add black to a color).
- **Reset:** Reset the function settings to factory default values.

Note: *When 3D, 2D High Speed, or Blending mode is selected, the Color Temperature and White Enhancement will be unavailable.*

Wall Color

Set the wall color of the projector to achieve best color performance for a specific wall. The available options are Off, Blackboard, Light Yellow, Light Green, Light Blue, Pink, and Gray.

3D Setup

3D video file combines two slightly different images (frames) of the same scene representing the different views that the left and right eyes see. When these frames are displayed fast enough and viewed with 3D glasses synchronized with the left and right frames, the viewer's brain then assemble the separate images into a single 3D image. 3D Menu provides options to set up the 3D functions to correctly display 3D videos.

3D Mode

Enable or disable the 3D function.

3D Format

Select a proper 3D format for the 3D input signal. The available options are Auto, Frame Packing, Side by Side, Top and Bottom, and Frame Sequential.

3D Tech

Select a proper 3D technology according to how the 3D sync signal is processed.

- **DLP-Link:** Select DLP-Link when the 3D sync signal is generated by the DLP Link technology built into the projector. DLP Link works only with the glasses that are compatible with DLP 3D technology and the 3D function is enabled.
- **3D Sync:** Select 3D Sync when the 3D sync out signal is sent to an emitter or another projector through the 3D sync out port.

3D-2D

Transform the 3D content to 2D images.

- **3D:** Play the 3D content normally.
- **L:** Play the left images of the 3D content.
- **R:** Play the right image of the 3D content.

3D Sync Out

Set up the transmission of the 3D sync output signal.

- **To Emitter:** Send the 3D sync signal to the emitter connected to the 3D sync out port.
- **To Next Projector:** Send the 3D sync signal to next projector when using multiple projectors.

3D Invert

When the 3D video does not appear correctly, use this function to invert the 3D left and right frames.

Frame Delay

Set a frame delay value for the projector to correct the time difference between the 3D signal being given and the result being executed.

Reset

Reset the function settings to factory default values.

Note: *When 2D High Speed or Blending mode is selected, the 3D Tech, 3D-2D, 3D Sync Out, 3D Invert, Frame Delay will be unavailable.*

Save to User

Save the image settings to the User mode.

Apply to User

Apply the image settings to User-Presentation, User-Bright, User-Cinema, User-HDR, User-sRGB, User-DICOM SIM., User-Blending, User-3D, or User-2D High Speed.

Reset

Reset all the image settings to factory default values.

USING THE PROJECTOR

Display menu

Learn how to configure the settings to properly project images according to your installation circumstances.

Submenus

- Aspect Ratio
- Digital Zoom
- Image Shift
- Geometric Correction
- Edge Mask
- Freeze Screen
- Test Pattern
- PIP/PBP

Aspect Ratio

Set the aspect ratio of the projected image. The available options are Auto (default), 4:3, 16:9, 16:10, LBX, or Native. Select Auto to display the detected image size.

- **Auto:** Automatically selects the appropriate display format.
- **4:3:** This format is for 4:3 input sources.
- **16:9:** This format is for 16:9 input sources, like HDTV and DVD enhanced for Wide screen TV.
- **16:10:** This format is for 16:10 input sources, like widescreen laptops.
- **LBX:** This format is for non-16x9, letterbox source and if you use external 16x9 lens to display 2.35:1 aspect ratio in full resolution.
- **Native:** This format displays the original image without any scaling.

Note:

- *Detailed information about LBX mode*
  - *Some Letter-Box Format DVDs are not enhanced for 16x9 TVs. In this situation, the image will not look right when displaying image in 16:9 mode. In this situation, please try to use the 4:3 mode to view the DVD. If the content is not 4:3, there will be black bars around the image in 16:9 display. For this type of content, you can use LBX mode to fill the image on the 16:9 display.*
  - *If you use an external anamorphic lens, this LBX mode also allows you to watch a 2.35:1 content (include Anamorphic DVD and HDTV film source) that supports anamorphic wide is enhanced for 16x9 Display in a wide 2.35:1 image. In this case, there are no black bars. Light source power and vertical resolution are fully utilized.*
- *When 3D or 2D High Speed mode is selected, the Aspect Ratio will be unavailable.*

WUXGA Scaling Table

	480i/p	576i/p	1080i/p	720p	PC
Auto	- Fix Aspect ratio of input source signal and scale it up to one of the height or width meets the DMD resolution. - If source is 4:3, auto resize to 1600 x 1200. - If source is 16:9 auto resize to 1920 x 1080. - If source is 16:10 auto resize to 1920 x 1200.				
4x3	Scale to 1600 x 1200.				
16x9	Scale to 1920 x 1080.				
16x10	Scale to 1920 x 1200.				
LBX	Scale to 1920x1440, then get the central 1920x1200 image to display.				
Native	Mapping centered.				

USING THE PROJECTOR

Digital Zoom

Digital adjust the size of the projected image.

Proportional

Enable the function to have the image's height and width changed at the same ratio.

Horizontal

Use the ◀ and ▶ buttons to change the width of the projected image.

Vertical

Use the ▲ and ▼ buttons to change the height of the projected image.

Horizontal Shift

Use the ◀ and ▶ buttons to adjust the horizontal shift the image.

Vertical Shift

Use the ▲ and ▼ buttons to adjust the vertical shift the image.

Reset

Reset digital zoom settings to factory default values.

Note: *When 3D or 2D High Speed mode is selected, the Digital Zoom will be unavailable.*

Image Shift

Adjust the projected image position.

H. Position

Use the ◀ and ▶ buttons to adjust the projected image position horizontally.

V. Position

Use the ▲ and ▼ buttons to adjust the projected image position vertically.

Reset

Reset image shift settings to factory default values.

Note: *When 3D or 2D High Speed mode is selected, the Image Shift will be unavailable.*

Geometric Correction

Configure the geometric settings to reshape the image for different projection surfaces.

Warp Control

Configure the geometric settings to reshape the image for different projection surfaces.


- **Basic:** Configure keystone, pincushion, 4-corner settings.
- **Advanced:** Configure grid color, grid background, warp setting, blend setting, and black level.
- **AP:** Use the warp and blend software tools to control the projector. When the software warp and blend control is enabled, the projector's built in geometry functions are disabled.

Basic Warp


Configure basic warp settings.

Note: *When Advanced or AP of Warp Control is selected, the Keystone, Pincushion, 4-Corner will be unavailable.*


- **Keystone:** Keystone function is used to adjust the images in asymmetric rectangle shape.
  - **Horizontal:** Adjust the left and right side of the projected image to make it an even rectangle. It is used for the images with unequal left and right sides.

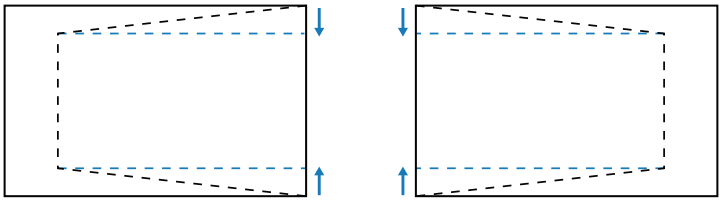


  - **Vertical:** Adjust the top and bottom side of the projected image to make it an even rectangle. It is used for the images with unequal top and bottom sides.

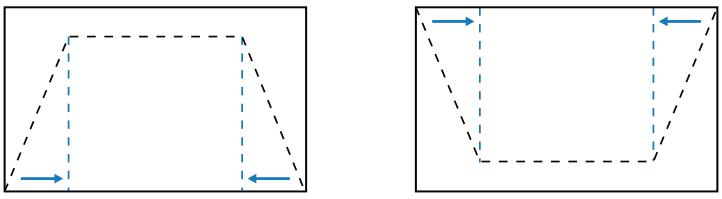


- **Pincushion:** Pincushion function is used to adjust the image with barrel or pincushion distortion.
  - **Horizontal:** Correct the projected image with horizontal barrel or pincushion distortion.

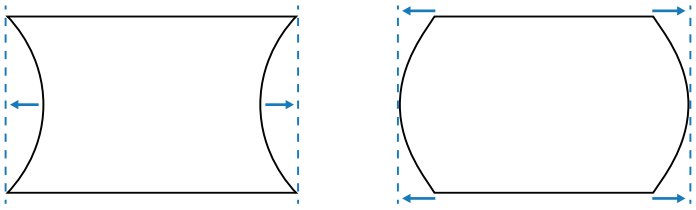

  - **Vertical:** Correct the projected image with vertical barrel or pincushion distortion.

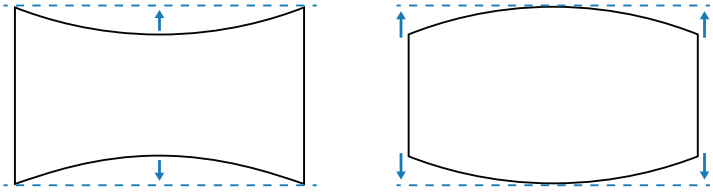

- **4-Corner:** Reshape the image by moving the 4 corners of the image to have it fit a specific projection surface.

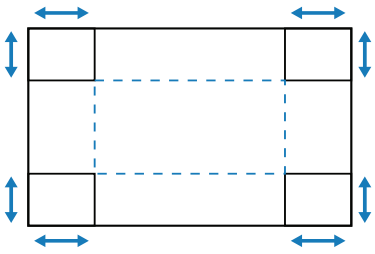


Advanced Warp

Configure advanced warp settings.

Note: *When Basic or AP of Warp Control is selected, the Advanced Warp will be unavailable.*

- **Grid Color:** Select a grid color for warp and blend pattern between Green, Magenta, Red, and Cyan.
- **Grid Background:** Select the grid background between Black and Transparent.
- **Warp Setting:** Configure warp settings.
  - **Grid Point:** Set the grid points of warp pattern. Options include: 2x2 (default), 3x3, 5x5, 9x9, and 17x17.
  - **Warp Inner:** Turn on to adjust the inner grid.
  - **Warp Sharpness:** When the grid lines are warped from straight into curve, the grid lines will be distorted and become jagged. To avoid the line jagging, adjust the warp sharpness to blur or sharpen the edge of the images.
- **Blend Setting:** Configure the blend settings directly on the projector to merge two or more adjacent images into one larger and seamless image.
  - **Blend Width:** Set the blend pattern width.
  - **Overlap Grid Number:** Set the blend overlap grid number.
  - **Gamma:** Select the gamma value of the blend area to adjust the curvature of the blending effect.

Note: *For installation flexibility we have not applied a FW limitation to the blending menu of this device. Distortion may occur if you attempt to warp to an extreme level. For more complex installs, at a cost, please contact your dealer for external devices for warping.*

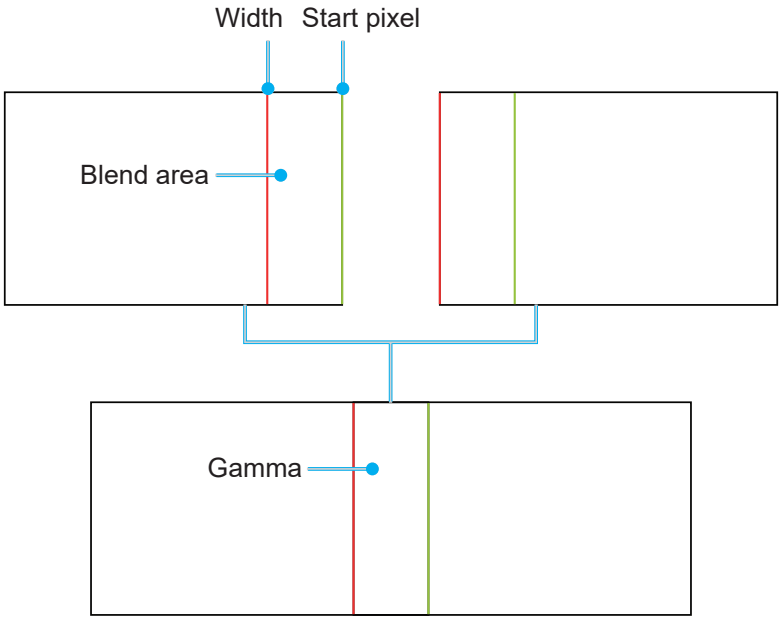

- **Black Level:** When two images overlap, the overlapping area can appear differently from the areas that do not overlap. You can use the projector's Black Level setting to make the difference less noticeable.
  - **Area:** Mark the area that needs adjusting.
  - **Enable:** Enable or disable the black level adjustment in the selected area.
  - **Edit Area:** Modify the black level of the selected area.
  - **Add Point:** Add up to 32 area control points for black level adjustment.
  - **Remove Point:** Remove at least 4 control points from the selected area.

    Note: *After adding or removing a control point, press **Enter** to move to the next point counterclockwise.*
  - **Brightness:** Adjust the brightness of the selected area.
  - **Red/Green/Blue:** Adjust each color individually of the selected area.
  - **Reset:** Reset the black level to factory default values either on the Bottom or on the Top area or on both areas.

Memory

The projector allows the user to save up to five geometry memories, including the ones set directly on the projector and the ones configured via external software tools. The available options are Save Memory, Apply Memory, and Clear Memory.

Reset

Reset geometric settings to factory default values.

Edge Mask

The edge blending function allows you to hide one or multiple edges of the projected image. You can use this function to remove the video encoding noise on the edges of the video images.

Note: *When 3D, 2D High Speed, or PIP/PBP is turned on, the Edge Mask will be unavailable.*

Freeze Screen

Select to pause the display screen despite any change in the source device.

Test Pattern

Select a test pattern. The available options are Off, Green Grid, Magenta Grid, White Grid, White, Black, Red, Green, Blue, Yellow, Magenta, Cyan, ANSI Contrast 4x4, Color bar, and Full screen.

PIP/PBP

PIP/PBP (picture in picture/picture by picture) allows simultaneously displaying two images from two input sources.

Note: *The PIP/PBP function does not support 3D, 2D High Speed mode, Aspect Ratio, Digital Zoom, and Image Shift.*

Screen

Select the appropriate PIP/PBP mode or disable the function.

- **Off:** Disable PIP/PBP mode.
- **PIP:** Display one input source on the main screen and the other input source in an inset window.
- **PBP:** Display two images of the same size on the screen.

Main Source

Select an input source for the main image. The available input sources are VGA, HDMI1, HDMI2, and HDBaseT.

Sub Source

Select an input source for the main image. The available input sources are VGA, HDMI1, HDMI2, and HDBaseT.

Swap

Swap the main source and sub source.


Size

Change the display size of the sub source in PIP mode. The available options are Large, Medium, and Small.

Location

Adjust the location of the sub image. In the layout chart below, the “P” indicates the main image:

- **PBP Layout**

PBP Layout	PBP Size		
	Small	Medium	Large
PBP, Main Left			
PBP, Main Right			
PBP, Main Top			
PBP, Main Bottom			

- **PIP Layout**

PIP Layout	PIP Size		
	Small	Medium	Large
PIP, Bottom Right			
PIP, Bottom Left			
PIP, Top Left			
PIP, Top Right			

USING THE PROJECTOR

Note: *PIP/PBP compatibility table as described below.*

PIP/PBP			Main Source					
			VGA	HDMI 2		HDMI 1		HDBaseT
				v1.4	v2.0	v1.4	v2.0	
Sub Source	VGA		—	V	V	V	V	V
	HDMI 2	v1.4	V	—	—	V	V	V
		v2.0	V	—	—	V	V	V
	HDMI 1	v1.4	V	V	V	—	—	V
		v2.0	V	V	V	—	—	V
	HDBaseT		V	V	V	V	V	—

Note:

a) *Flashing lines may occur if the bandwidth of both inputs are too high, please try to reduce the resolution.*

b) *Frame tearing may occur due to a difference in frame rate between the Main and the Sub picture, please try to match the frame rate for each input.*

Reset

Reset all the display settings to factory default values.

USING THE PROJECTOR

Input Settings menu

Learn how to configure the projector input settings.

Submenus

- Auto Source
- Quick Resync
- Active Inputs
- Latency Adjustment
- VGA
- HDMI

Auto Source

When Auto Source is enabled, the projector automatically detects and selects the input signal. Once an input source is selected, press the Input button on the remote control or keypad to switch to other available sources. When the function is disabled, pressing Input will bring up the Active Inputs submenu.

Quick Resync

Set the quick resync feature.

Active Inputs

Select an input signal from the source list. The available input sources are VGA, HDMI1, HDMI2, and HDBaseT.

Latency Adjustment

Enable this feature to reduce response time.

VGA

Setup the VGA source by selecting the proper Phase and Resolution.

HDMI

Set the projector's HDMI ports.

Output

Set the HDMI 1 or HDMI 2 port to output the signal.

HDMI 1 EDID/HDMI 2 EDID

When receiving a HDMI signal, set the projector's EDID compatibility to display the signal correctly. Select 1.4 for the input devices with HDMI 1.4, or 2.0 for HDMI 2.0 devices.

Note: *For a better 3D experience, it is recommended to choose HDMI 1.4.*

Reset

Reset all the input settings to factory default values.

USING THE PROJECTOR

Device Setup menu

Learn how to configure the system settings for the projector.

Submenus

- Language
- Projection
- Lens Settings
- Schedule
- Date and Time
- Power Settings
- Light Source Settings
- Shutter
- Audio
- Security
- On Screen Display
- Logo Setup
- High Altitude
- User Data
- System Update

Language

Select a language for the OSD menu. The available languages are English, German, French, Italian, Spanish, Portuguese, Polish, Dutch, Norwegian, Traditional Chinese, Simplified Chinese, Japanese, Korean, Russian, Hungarian, and Thai.

Projection

Change the image direction by selecting a proper projection mode.

Ceiling

Enable the function for ceiling mount installation.

Rear

Check the function for rear projection.

Lens Settings

Configure the lens settings to adjust the image quality and position.

Focus

Use the ▲ and ▼ buttons to adjust the focus of the projected image.

Zoom

Use the and buttons to adjust the size of the projected image.


USING THE PROJECTOR

Lens Shift

Use the ▲ ▼ ◀ ▶ buttons to adjust the lens position to shift the projected area.

Note: *BX-CTA17 floating ring*

- *For better optical performance, manually adjust the floating ring before adjusting Zoom & Focus.*
- *Floating ring's label scale shows the projection distance.*
- *The projection distance is from the projector lens to the screen. For example, if the distance between the screen and the projector lens is 1.4 m, adjust the floating ring scale to "1.40" for better performance.*

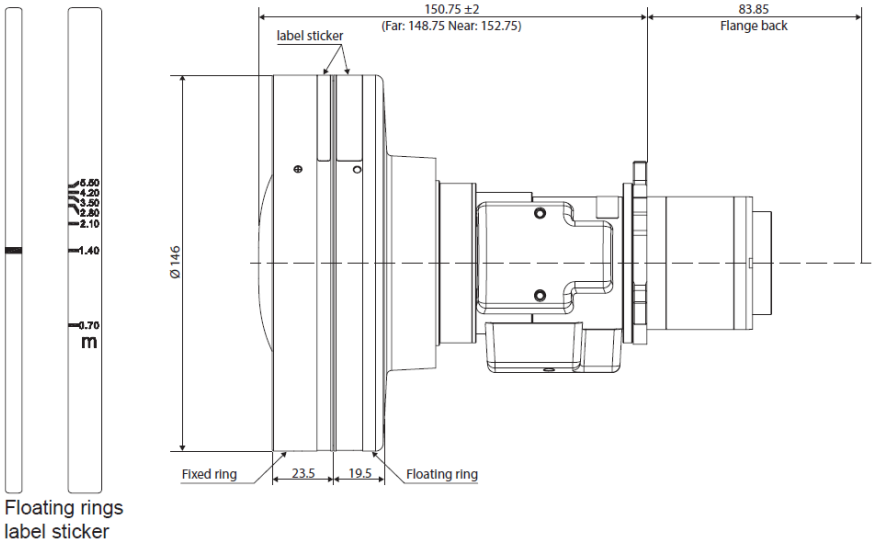

Lens Shift Memory

This projector can save up to five lens settings, which records the lens position.

- **Save Memory:** Select a record from 1 to 5 to save the current lens settings.
- **Apply Memory:** Select a record from 1 to 5 to apply the lens settings.
- **Clear Memory:** Clear the saved lens records.

Note:

- *Process the lens calibration before setup lens shift memory.*
- *Performing a lens calibration will clear the saved lens records.*
- *When the lens calibration is not completed, the lens shift memory will be unavailable.*

Lens Calibration

Calibrate the lens position to return it to the center.

Lens Lock

Lock the lens to prevent the lens motors from moving, which disables all lens functions.

Note: *When Lens Lock is turned on, the Focus, Zoom, Lens Shift, Lens Shift Memory, and Lens Calibration will be unavailable.*

Reset

Reset the lens settings to factory default values.

Schedule

Schedule the projector functions to operate automatically at the set time.

Date and Time

Display the date and time for the projector.

Schedule Mode

Enable or disable the schedule function. If the projector is controlled via external devices or software, the Schedule Mode displays AP Mode, and the projector's schedule functions are grayed out.

View Today

View the event list scheduled for today.

Monday to Sunday

Set up the schedule for days of a week. On the Schedule menu page, select a day and configure the schedule settings.

- **Schedule Enable:** Enable or disable the schedule function for the selected day.
- **Event 01-08:** Select an event record number, and set up the schedule details.
  - **Time:** Set the time for the event.
  - **Event:** Select a function for the event, which operates automatically at the set time. The available functions are Power Settings, Input Source, Light Source Mode, and Shutter.
  - **Reset:** Reset the event settings.
- **More Events / Previous Events (Event 01-16):** Display more event records, and select one to set up the schedule details.
- **Copy Events To:** Copy the events setup for the day to another day.
- **Reset the Day:** Reset the schedule settings for the day.

Reset Schedule

Reset all of the schedule settings.

Date and Time

Set the date and time of the projector.

Clock Mode

Set the clock mode to NTP Server or Manual.

Note: *To use NTP Server, make sure the projector is connected to the Internet.*

Date

Set a date for the projector. The date format is in Year/Month/Date.

Time

Set the time for the projector.

Daylight Saving Time

Enable or disable the daylight savings function.

NTP Server

Select a NTP Server for the network clock mode.

Time Zone

Set a time zone for the network clock mode.

Update Interval

Set the date and time update interval.

Apply

Apply date and time modifications.

Note:

- *When Use NTP Server of Clock Mode is selected, the Date and Time will be unavailable.*
- *When Manual of Clock Mode is selected, the Daylight Saving Time, NTP Server, Time Zone, and Update Interval will be unavailable.*

USING THE PROJECTOR

Power Settings

Configure the projector's power settings.

Power Mode (Standby)

Setup the projector's standby mode.

- **Eco:** Minimum power consumption (0.5 Watt) which does not allow network control.
- **Active:** Low power consumption (< 2 Watt) which allows the LAN module to enter sleep mode and supports to be woken by Wake on LAN (WoL). When the LAN module is woken by WoL, the projector is ready to receive commands over the network.
- **Communication:** More power consumption that allows controlling the projector over the network.

Signal Power On

Turn on this function to have the projector automatically turning on when connected to HDMI input sources. It only applies to the standby projector set to Communication mode.

Auto Power Off

Set an interval timer for the projector to automatically turn off if no signal is detected within the specified time period. Press the ◀ and ▶ buttons to add or reduce time, 1 minutes for each press.


Sleep Timer

Set an interval timer for the projector to automatically turn off after operating for the specified amount of time.

12V Trigger

Use this function to enable or disable the trigger.

Note: *3.5mm TS type mini jack that outputs 12V 200mA (max.) for relay system control.*

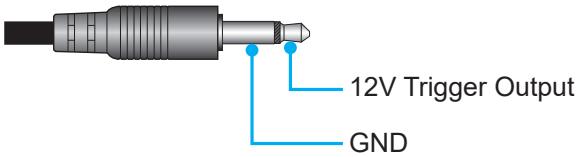

Reset

Reset the power settings to factory default values.

Light Source Settings

Set up the light source to control the projector brightness.

Light Source Mode

Select a light source mode depending on the installation requirements. The available options are Normal, Eco Mode, and Custom Power.

Custom Brightness

When the Light Source Mode is set to Custom Mode, set up the custom brightness level. Set up the Constant Brightness to maintain the image brightness at a specified level. A special algorithm is designed to compensate for the natural decay of brightness so that the image can be maintained at a fixed brightness level.

- **Brightness Level:** Adjust the brightness level from 30% to 100%.
- **Constant Brightness:** Enable to maintain the image brightness at the set brightness level. A special algorithm is designed to compensate for the natural decay of brightness so that the image can be maintained at a fixed brightness level.

Note: *When Dynamic Black or Extreme Black is turned on, only Normal of Light Source Mode is supported.*

Shutter

Set up the shutter behavior.

Fade-In

This function allows the fading-in effect when turning off the shutter. The length of the fading effect can be adjusted from 0.5s to 5s.

Fade-Out

This function allows the fading-out effect when turning on the shutter. The length of the fading effect can be adjusted from 0.5s to 5s.

Startup

Select the shutter behavior when turning on the projector.

- **Shutter Off:** Projector projects images normally after being powered on.
- **Shutter On:** Projector automatically turns on shutter after being powered on.

Audio

Set up the projector audio.

Mute

Turn off or turn on the projector sound.

Volume

Adjust the projector audio volume level.

Security

Set up security verification to protect the projector.

Security

Select On to protect the projector with a password.

Note:

1. *For the first time use security function, please enter a password when security function turned on.*
2. *Non first time use security function, please enter previous password to verify when security function turned on again.*

Security Timer

Specify the length of time the projector can be used without the password. Once the timer counts to 0, the user must enter a password to use the projector. The timer restarts every time the projector is turned on.

Change Password

Change the projector password.

Note: *In the last minute before reaching a specified timer, including Auto Power Off, Sleep Timer, and Security Timer, an on-screen message will pop up warning that the projector shuts down in 60 seconds. Press any button on the remote control or projector keypad to reset the timer and the projector remains on.*

On Screen Display

Set up the on screen display menus.

Menu Location

Select the menu location from Top Left, Top Right, Center, Bottom Left, and Bottom Right.

Menu Transparency

Set the menu transparency level.

Menu Timer

Set the length of time the menu displays on the screen.

Information Hide

Enable or disable the corner information messages, such as input source, IP address, and so on.

Background

Set a background color to display when no input signal is detected. The available options are Blue, Black, White, and Logo.

Logo Setup

Set up the logo for the startup screen.

Change Logo

Change the logo for the startup screen. Apart from the Default logo, user can select from Default, Neutral, User Logo, and Captured Logo.

- **Default:** The projector default logo.
- **Neutral:** The logo is not displayed on the startup screen.
- **User Logo:** The user logo uploaded from the web control panel.
- **Captured Logo:** The logo saved via the Logo Capture function.

Note: *The supported logo format is PNG and size is 1920 x 1200 pixels.*

Logo Capture

Capture part of the projected image and save it as a customized logo.

Delete Logo

Delete the saved customized logo, including the Captured Logo and Use Logo.

High Altitude

Select On to increase the fan speed. To ensure the image quality and prevent damage to the projector, enable High Altitude mode in high temperature, high humidity, or high altitude environment.

User Data

User can save the projector settings as user data and reload the settings later.

- **Save all settings:** Save all of the projector settings as user data. User can save up to 5 records.
- **Load all settings:** Load the previously saved user data.

System Update

Update the system automatically or manually.

- **Auto:** System checks for new updates automatically every time it is connected to the Internet.
- **Auto Download**: When both “Auto” and “Auto Download” are On, new updates will be downloaded automatically when the projector is restarted.

Note:

1. *When new updates are downloaded automatically, there will be no prompts.*
2. *When the Power Off button is pressed, if the download is complete, a prompt to update will pop up.*
3. *Select the Update option to start the update.*

- **Update**: Manually update the system firmware.

Reset

Reset the settings to factory default values.

- **Reset OSD:** Reset OSD settings to default values.
- **Reset to Default:** Reset all projector settings to default values.
- **Reset Selective:** Reset the settings of one of the main menus. User can choose from Image, Display, Input, Communication, and Setup.

USING THE PROJECTOR

Communication menu

Communication menu is used to configure the settings that allow the projector to communicate with other projectors or control devices.

Submenus

- Projector ID
- Remote Setup
- Network Setup
- Email Notification
- Control
- Baud Rate

Projector ID

Assign an ID code for the projector from 00 to 99. Use this code as the projector ID when controlling the projector by RS232, Telnet or other control methods.

Remote Setup

Configure the settings of the Infra-Red (IR) remote control.

Remote Code

Press and hold the remote control **ID** key. When all the key lights turn on, press the number key 00-99 to assign a number. When all key lights flash rapidly twice, the remote control code has been changed. At this time, release the remote control **ID** key.

Quick Switch Code

The IR receiving function of the projector can be temporarily deactivated by hot key(0~9) to avoid the IR interference between projectors. The remote ID needs to be set to All.

Note: *When hotkey is on, the default function (Direct Source, Zoom/Focus, 3D) are inactive temporarily.*

IR Function

Set the remote receiver for the projector to control the communication between the projector and the IR remote.

- **Front:** Enable or disable the front remote receiver.
- **Top:** Enable or disable the top remote receiver.
- **HDBaseT:** Select On to set the HDBaseT terminal as the remote receiver.

User 1 / User 2

Assign a function to the User 1 and User 2 buttons on the remote control. It allows you to use the function easily without going through the OSD menus. The available functions are Freeze Screen [User 1 deafult], Blank Screen, PIP/PBP [User 2 default], Aspect Ratio, Information Hide, Network setup, Projector ID, Color Matching, Reset Selective, Quick Switch Code, Audio Mute, and Audio Volume.

Network Setup

Configure the projector's network settings.

LAN Interface

To avoid clash, specify the LAN interface to RJ-45 or HDBaseT.

MAC Address

Display the MAC address. (Read only)

Network Status

Display the network connection status. (Read only)

DHCP

Turn on DHCP to automatically acquire IP address, subnet mask, gateway, and DNS.

IP Address

Assign the projector's IP address.

Subnet Mask

Assign the projector's subnet mask.

Gateway

Assign the projector's gateway.

DNS

Assign the projector's DNS.

Apply

Apply the wired network settings.

Network Reset

Reset the network settings to default factory values.

Note: *When DHCP is turned on, the IP Address, Subnet Mask, Gateway, and DNS will be unavailable.*

Email Notification

Set up the email notification for the projector.

Fan Error / Power On/Off / Video Loss / Laser

When a Fan Error, Power On/Off, Video Loss, or Laser occurs on the projector, an email notification will be sent to the user

Control

This projector can be controlled remotely by a computer or other external devices through wired network connection. It allows the user to control one or more projectors from a remote control center, such as powering the projector on or off, and adjusting the image brightness or contrast.
Use the Control submenu to select a control device for the projector.

Crestron

Control the projector with Crestron controller and related software (Port: 41794).

For more information, please visit http://www.crestron.com.

- **Crestron Setup:** Setup the Crestron IP Address, IPID, and Port. Then select Crestron Setup Apply to save the modifications.

PJ Link

Control the projector with PJLink v1.0 commands (Port: 4352).

For more information, please visit http://pjlink.jbmia.or.jp/english.

- **PJ Link Service:** Setup the address for the PJ Link Authentication, Password, Service, and select PJ Link Setup Apply to save the modifications.

Extron

Control the projector with Extron devices (Port: 2023).

For more information, please visit http://www.extron.com.

AMX

Control the projector with AMX devices. (Port: 9131)

For more information, please visit http://www.amx.com.

Telnet

Control the projector using RS232 commands though Telnet connection. (Port: 23)

For more information, refer to "Using RS232 command by Telnet" on page 66.


HTTP

Control the projector with web browser. (Port: 80)

For more information, refer to “Using the web control panel” on page 64.

Reset

Reset the control functions to default factory values.

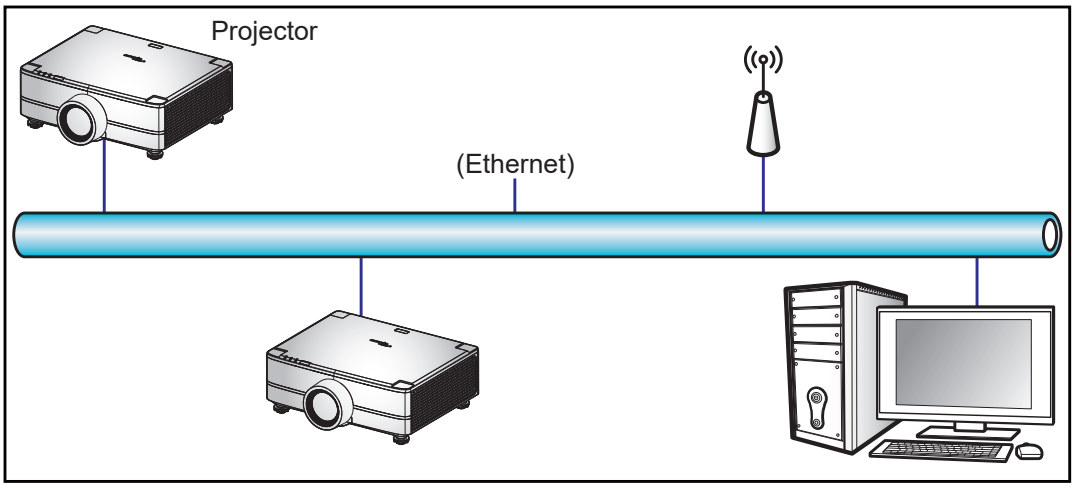

Note:

- *Crestron is a registered trademark of Crestron Electronics, Inc. of the United States.*
- *Extron is a registered trademark of Extron Electronics, Inc. of the United States.*
- *AMX is a registered trademark of AMX LLC of the United States.*
- *PJLink applied for trademark and logo registration in Japan, the United States of America, and other countries by JBMIA.*
- *For more information about the various types of external devices which can be connected to the LAN / RJ45 port and remotely control the projector, as well as the supported commands for these external devices, please contact the Support-Service directly.*
- *Support OMSC and OMSL. For more information, please contact the Support-Service directly.*

Baud Rate

Set the baud rate for Serial Port In and Serial Port Out. The available options are 1200, 2400, 4800, 9600, 19200, 38400, 57600, and 115200 (default).

Reset

Reset all network settings to default factory values.

USING THE PROJECTOR

Using the web control panel

The web control panel allows the user to configure various projector settings using a web browser from any personal computer or mobile devices.


System Requirements

To use the web control panel, make sure your devices and software meet the minimum system requirements.

- RJ45 cable (CAT-5e) or wireless dongle
- PC, laptop, mobile phone, or tablet installed with a web browser
- Compatible web browsers:
  - Microsoft Edge 40 or higher version
  - Firefox 57 or higher version
  - Chrome 63 or higher version

Overview of the web control panel

Configure the projector settings using web browser.

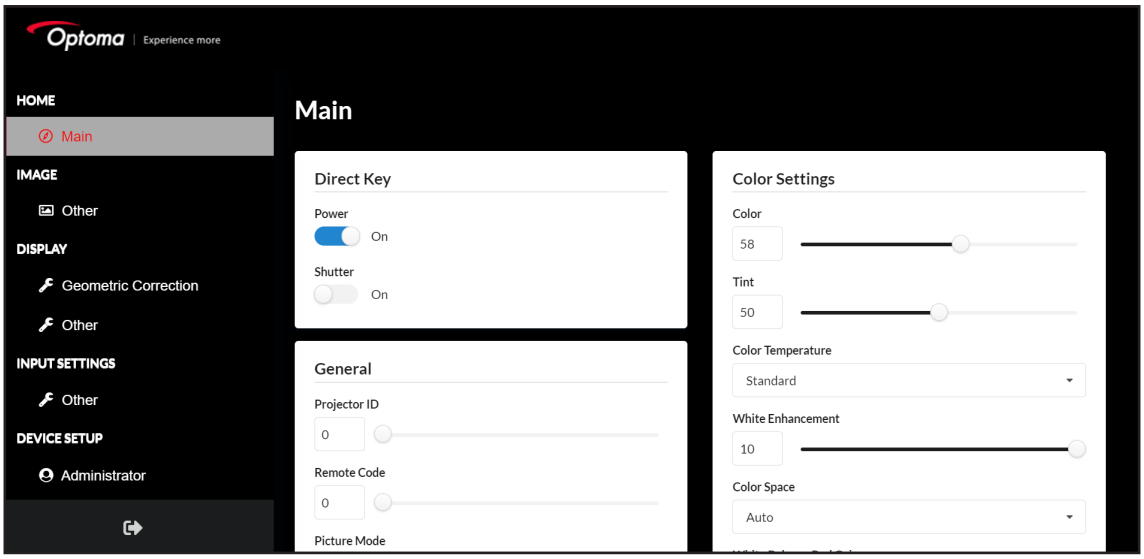

Menu	Description
HOME	View the projector information and firmware version details.
IMAGE	To configure image settings.
DISPLAY	To configure the settings to properly project images according to your installation circumstances.
INPUT SETTINGS	To configure the projector input settings.
DEVICE SETUP	To configure the system settings for the projector.
COMMUNICATION	Communication menu is used to configure the settings that allow the projector to communicate with other projectors or control devices.
INFORMATION	View the projector information about its status and settings. The projector information is read only.

USING THE PROJECTOR

Accessing the web control panel

When network is available, connect the projector and the computer to the same network. Use the projector address as the web URL to open the web control panel in a browser.

1. Check the projector address using the OSD menu.
   - On a wired network, select **Communication > Network Setup > IP Address**.


     Note: *Make sure DHCP is enabled.*
2. Open a web browser and type the projector address in the address bar.
3. The web page redirects to the web control panel.
4. In the Username field, type the username: admin (first time login).

   Note:
   - *When logging in for the first time, you don't need to enter a password.*
   - *It is needed to change the username and password once you have logged in. It is also advised to use a strong password.*

When network is not available, refer to "Directly connect the projector to a computer" section.

Directly connect the projector to a computer

When network is not available, connect the projector to the computer directly using a RJ-45 cable, and configure the network settings manually.

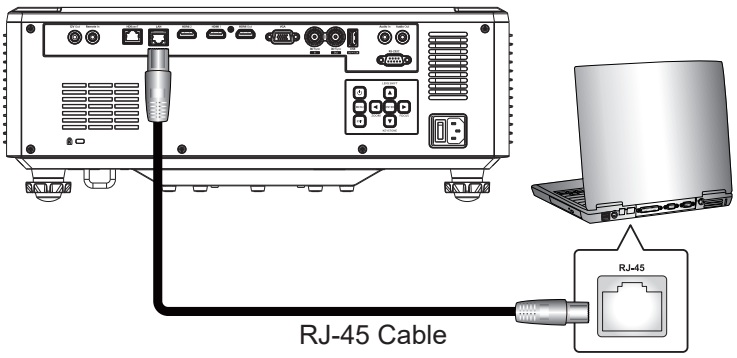

1. Assign IP address to the projector
   - From the OSD menu, select **Network Setup > DHCP**.
   - Turn off DHCP, and manually set the projector's IP Address, Subnet Mask, and Gateway.
   - Press **Enter** to confirm the settings.
2. Assign IP address to the computer
   - Set the Default Gateway and Subnet Mask of the computer to match the projector.
   - Set the IP address of the computer to match the first three numbers of the projector.

     For example, if the projector IP address is 192.168.000.100, set the computer IP address to 192.168.000.xxx, where xxx is not 100.
3. Open a web browser and type the projector address in the address bar.
4. The web page redirects to the web control panel.

Using RS232 command by Telnet

This projector supports using RS232 commands through Telnet connection.

1. Set up a direct connection between the projector and computer. Refer to *Directly connect the projector to a computer* on page 65.
2. Disable the firewall on the computer.
3. Open the command dialogue on the computer. For Windows 7 operating system, select **Start > All Programs > Accessories > Command Prompt**.
4. Input the command “telnet ttt.xxx.yyy.zzz 23”.

   Replace “ttt.xxx.yyy.zzz” with the projector IP address.
5. Press **Enter** on the computer keyboard.

Specification for RS232 by Telnet

- Telnet: TCP
- Telnet port: 23 (contact service team for more details)
- Telnet utility: Windows “TELNET.exe” (console mode).
- Disconnection for RS232-by-Telnet control normally: Close
- Below are the limitations for using Windows Telnet utility directly after TELNET connection is ready:
  - There is less than 50 bytes for successive network payload for Telnet-Control application.
  - There is less than 26 bytes for one complete RS232 command for Telnet-Control.
  - Minimum delay for next RS232 command must be more than 200 (ms). Information menu.

Info menu

View the projector information about its status and settings. The projector information is read only.

Submenus

- Device
- System Status
- Communication
- Signal
- Firmware Version

ADDITIONAL INFORMATION

Compatible Resolutions

Digital

HDMI 2.0		
Established Timing	Standard Timing	Detail Timing
640 x 480 @ 60Hz	800 x 600 @ 120Hz	640 x 480 @ 60Hz
640 x 480 @ 67Hz	1280 x 768 @ 120Hz	720 x 480 @ 60Hz
640 x 480 @ 72Hz	1280 x 800 @ 75Hz	720 x 576 @ 50Hz
640 x 480 @ 75Hz	1280 x 1024 @ 60Hz	720 x 480i @ 60Hz
720 x 400 @ 70Hz	1360 x 765 @ 60Hz	720 x 576i @ 50Hz
720 x 400 @ 88Hz	1400 x 1050 @ 60Hz	1280 x 720 @ 50Hz
800 x 600 @ 56Hz	1600 x 1200 @ 60Hz	1280 x 720 @ 60Hz
800 x 600 @ 60Hz	1680 x 1050 @ 60Hz	1280 x 720 @ 120Hz
800 x 600 @ 72Hz		1440 x 480 @ 60Hz
800 x 600 @ 75Hz		1920 x 1080 @ 24Hz
832 x 624 @ 75Hz		1920 x 1080 @ 25Hz
1024 x 768 @ 60Hz		1920 x 1080 @ 50Hz
1024 x 768 @ 70Hz		1920 x 1080 @ 60Hz
1024 x 768 @ 75Hz		1920 x 1080 @ 120Hz
1152 x 870 @ 75Hz		1920 x 1080i @ 50Hz
1280 x 1024 @ 75Hz		1920 x 1080i @ 60Hz
		1920 x 1200 @ 59Hz
		3840 x 2160 @ 24Hz
		3840 x 2160 @ 25Hz
		3840 x 2160 @ 30Hz
		3840 x 2160 @ 50Hz
		3840 x 2160 @ 60Hz
		4096 x 2160 @ 24Hz
		4096 x 2160 @ 25Hz
		4096 x 2160 @ 30Hz
		4096 x 2160 @ 50Hz
		4096 x 2160 @ 60Hz

ADDITIONAL INFORMATION

HDMI 1.4		
Established Timing	Standard Timing	Detail Timing
640 x 480 @ 60Hz	800 x 600 @ 120Hz	640 x 480 @ 60Hz
640 x 480 @ 67Hz	1280 x 768 @ 120Hz	720 x 480 @ 60Hz
640 x 480 @ 72Hz	1280 x 800 @ 75Hz	720 x 576 @ 50Hz
640 x 480 @ 75Hz	1280 x 1024 @ 60Hz	720 x 480i @ 60Hz
720 x 400 @ 70Hz	1360 x 765 @ 60Hz	720 x 576i @ 50Hz
720 x 400 @ 88Hz	1400 x 1050 @ 60Hz	1280 x 720 @ 50Hz
800 x 600 @ 56Hz	1600 x 1200 @ 60Hz	1280 x 720 @ 60Hz
800 x 600 @ 60Hz	1680 x 1050 @ 60Hz	1440 x 480 @ 60Hz
800 x 600 @ 72Hz		1920 x 1080 @ 24Hz
800 x 600 @ 75Hz		1920 x 1080 @ 25Hz
832 x 624 @ 75Hz		1920 x 1080 @ 50Hz
1024 x 768 @ 60Hz		1920 x 1080 @ 60Hz
1024 x 768 @ 70Hz		1920 x 1080i @ 50Hz
1024 x 768 @ 75Hz		1920 x 1080i @ 60Hz
1152 x 870 @ 75Hz		1920 x 1200 @ 59Hz
1280 x 1024 @ 75Hz		

Analog

Analog		
Established Timing	Standard Timing	Detail Timing
640 x 480 @ 60Hz	1280 x 800 @ 75Hz	1920 x 1080 @ 60Hz
640 x 480 @ 67Hz	1280 x 1024 @ 60Hz	1920 x 1200 @ 59Hz
640 x 480 @ 72Hz	1360 x 765 @ 60Hz	
640 x 480 @ 75Hz	1400 x 1050 @ 60Hz	
720 x 400 @ 70Hz	1440 x 900 @ 60Hz	
720 x 400 @ 88Hz	1440 x 900 @ 75Hz	
800 x 600 @ 56Hz	1600 x 1200 @ 60Hz	
800 x 600 @ 60Hz	1680 x 1050 @ 60Hz	
800 x 600 @ 72Hz		
800 x 600 @ 75Hz		
832 x 624 @ 75Hz		
1024 x 768 @ 60Hz		
1024 x 768 @ 70Hz		
1024 x 768 @ 75Hz		
1152 x 870 @ 75Hz		
1280 x 1024 @ 75Hz		

ADDITIONAL INFORMATION

True 3D video compatibility

		Input timing	
Input Resolutions	HDMI 1.4a 3D Input	1280 x 720P @ 50Hz	Top and Bottom
		1280 x 720P @ 60Hz	Top and Bottom
		1280 x 720P @ 50Hz	Frame Packing
		1280 x 720P @ 60Hz	Frame Packing
		1920 x 1080P @ 24Hz	Top and Bottom
		1920 x 1080P @ 24Hz	Frame Packing
		1920 x 1080i @ 50Hz	Side by Side
		1920 x 1080i @ 60Hz	Side by Side
		1024 x 768 @ 120Hz	Frame Sequential
		1280 x 720 @ 120Hz	Frame Sequential
		1280 x 800 @ 120Hz	Frame Sequential
		1920 x 1080P @ 60Hz	Frame Sequential
		1920 x 1080P @ 120Hz	Frame Sequential
		1920 x 1200 @ 60Hz	Frame Sequential
		800 x 600 @ 120Hz	Frame Sequential

Note: *If 3D input is 1080p@24Hz, the DMD should replay with integral multiple with 3D mode.*


ADDITIONAL INFORMATION

RS232 Port Setting and Signals Connection

RS232 Port Setting

Items	Method
Communication Method	Asynchronous Communication
Baud Rate	115200
Data Bits	8 bits
Parity	None
Stop Bits	1
Flow Control	None

RS232 Signals Connection

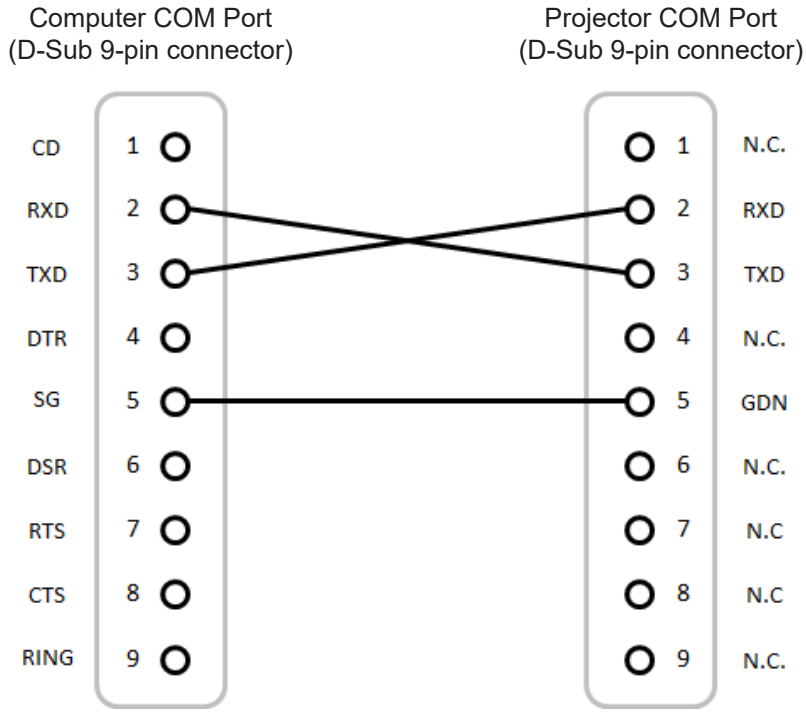

Note: *RS232 shell is grounded.*

ADDITIONAL INFORMATION

Image Size and Projection Distance

Platform			WUXGA (16:10)											
DMD			0.67”											
Projection Lens			BX-CTA17		BX-CTA15*		BX-CAA01/ BX-CTA01		BX-CAA06/ BX-CTA06		BX-CAA03/ BX-CTA03		BX-CTA13	
			Short Throw		Short Throw		Wide Zoom		Standard		Long Zoom		Ultra-Long Zoom	
Throw Ratio Spec.(Wide/Tele)			0.65-0.75		0.75-0.95		0.95-1.22		1.22-1.52		1.52-2.92		2.90-5.50	
Zoom Ratio			1.15x		1.26X		1.28X		1.25X		1.9X		1.9X	
Throw Distance (m) (min/max)			0.68 ~ 16.61m		0.79 ~ 20.78m		1.01 ~ 26.68m		1.29 ~ 33.19m		1.61 ~ 63.45m		3.18 ~ 115.61m	
Projection screen size			Throw distance (m)											
Diagonal (inch)	Height (m)	Width (m)	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele	Wide	Tele
50	0.67	1.08	0.68	0.79	0.79	1.01	1.01	1.31	1.29	1.62	1.61	3.12	3.18	5.89
60	0.81	1.29	0.83	0.96	0.96	1.22	1.22	1.57	1.56	1.95	1.94	3.76	3.78	7.05
70	0.94	1.51	0.97	1.13	1.12	1.43	1.43	1.84	1.82	2.29	2.27	4.39	4.39	8.20
80	1.08	1.72	1.11	1.29	1.28	1.64	1.63	2.11	2.09	2.62	2.60	5.03	5.00	9.36
90	1.21	1.94	1.26	1.46	1.45	1.85	1.84	2.38	2.35	2.95	2.94	5.66	5.61	10.51
100	1.35	2.15	1.40	1.63	1.61	2.05	2.05	2.64	2.62	3.28	3.27	6.30	6.21	11.67
110	1.48	2.37	1.55	1.79	1.78	2.26	2.26	2.91	2.89	3.62	3.60	6.93	6.82	12.82
120	1.62	2.58	1.69	1.96	1.94	2.47	2.47	3.18	3.15	3.95	3.94	7.57	7.43	13.98
130	1.75	2.80	1.83	2.13	2.10	2.68	2.67	3.44	3.42	4.28	4.27	8.20	8.04	15.13
140	1.88	3.02	1.98	2.29	2.27	2.89	2.88	3.71	3.69	4.61	4.60	8.84	8.65	16.29
150	2.02	3.23	2.12	2.46	2.43	3.09	3.09	3.98	3.95	4.95	4.94	9.47	9.25	17.44
160	2.15	3.45	2.27	2.62	2.60	3.30	3.30	4.24	4.22	5.28	5.27	10.11	9.86	18.60
170	2.29	3.66	2.41	2.79	2.76	3.51	3.51	4.51	4.48	5.61	5.60	10.74	10.47	19.75
180	2.42	3.88	2.55	2.96	2.92	3.72	3.72	4.78	4.75	5.94	5.93	11.38	11.08	20.91
190	2.56	4.09	2.70	3.12	3.09	3.93	3.92	5.05	5.02	6.27	6.27	12.01	11.69	22.06
200	2.69	4.31	2.84	3.29	3.25	4.13	4.13	5.31	5.28	6.61	6.60	12.65	12.29	23.22
250	3.37	5.38	3.56	4.12	4.07	5.17	5.17	6.65	6.61	8.27	8.27	15.82	15.33	28.99
300	4.04	6.46	4.28	4.96	4.89	6.21	6.21	7.98	7.95	9.93	9.93	19.00	18.37	34.77
350	4.71	7.54	5.00	5.79	5.71	7.26	7.25	9.32	9.28	11.59	11.60	22.17	21.41	40.54
400	5.38	8.62	5.72	6.62	6.53	8.30	8.29	10.66	10.61	13.25	13.26	25.35	24.45	46.31
450	6.06	9.69	6.45	7.45	7.35	9.34	9.33	11.99	11.94	14.92	14.93	28.52	27.49	52.09
500	6.73	10.77	7.17	8.29	8.17	10.38	10.37	13.33	13.27	16.58	16.59	31.70	30.53	57.86

Note: *If the screen is larger than 300 inches, then fine text and images may not display clearly.*


*****BX-CTA15 lens is only available for the ZU820TNL.*

ADDITIONAL INFORMATION

Ceiling Mount Installation

1. To prevent damage to your projector, please use the Optoma ceiling mount.
2. If you wish to use a third party ceiling mount kit, please ensure the screws used to attach a mount to the projector meet the following specifications:

- Screw type: M4*4
- Minimum screw length: 8 mm

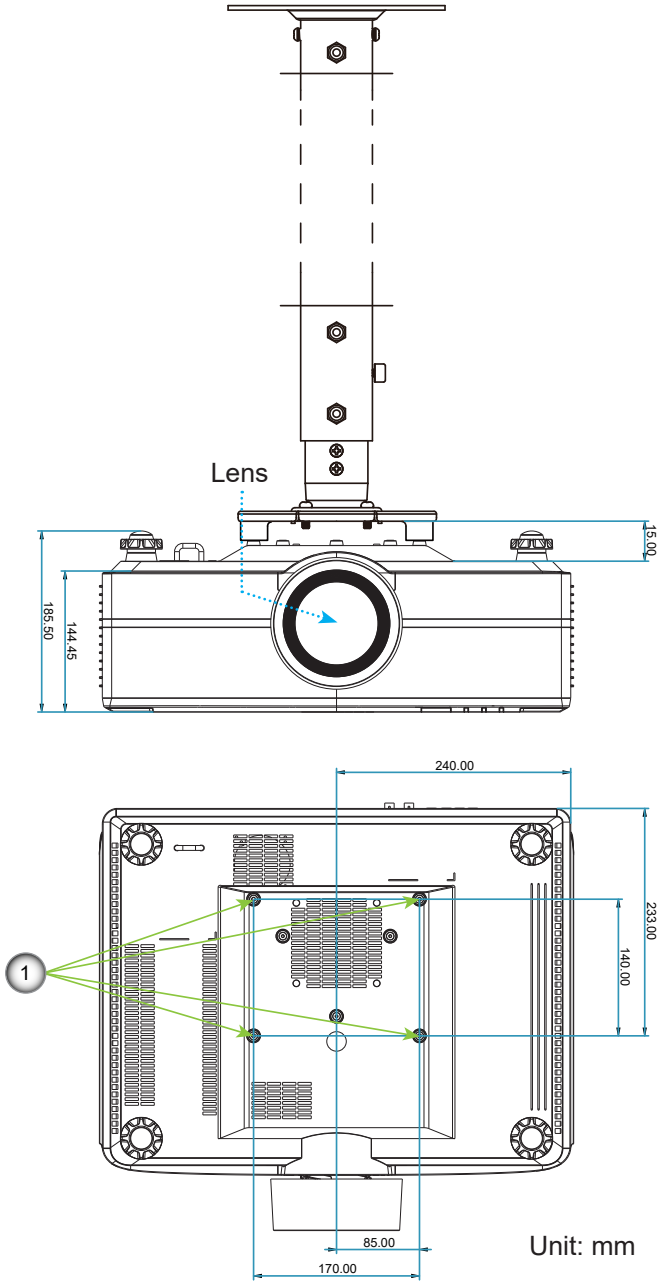


Note:

1. *Mounting holes for ceiling mount.*
2. *Please note that damage resulting from incorrect installation will void the warranty.*

ADDITIONAL INFORMATION

IR remote codes

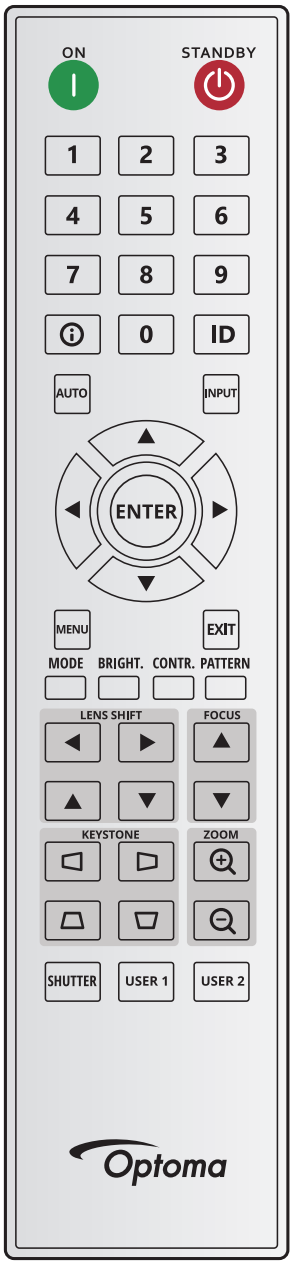

Key Legend	Key Position	Repeat Format	Address		Data		Description
			Byte 1	Byte 2	Byte 3	Byte 4	
ON ( )	1	F1	32	CD	2	FD	Press to turn on the projector.
OFF ( )	2	F1	32	CD	2E	D1	Press to turn off the projector.
1	3	F1	32	CD	72	8D	Use as numeric keypad number “1”.
2	4	F1	32	CD	73	8C	Use as numeric keypad number “2”.
3	5	F1	32	CD	74	8B	Use as numeric keypad number “3”.
4	6	F1	32	CD	75	8A	Use as numeric keypad number “4”.
5	7	F1	32	CD	77	88	Use as numeric keypad number “5”.
6	8	F1	32	CD	78	87	Use as numeric keypad number “6”.

ADDITIONAL INFORMATION

Key Legend	Key Position	Repeat Format	Address		Data		Description
			Byte 1	Byte 2	Byte 3	Byte 4	
7	9	F1	32	CD	79	86	Use as numeric keypad number “7”.
8	10	F1	32	CD	80	7F	Use as numeric keypad number “8”.
9	11	F1	32	CD	81	7E	Use as numeric keypad number “9”.
Info (ⓘ)	12	F1	32	CD	82	7D	Press to display source image information.
0	13	F1	32	CD	25	DA	Use as numeric keypad number “0”.
ID	14	F1	32	CD	A7	58	Press to set remote ID.
Auto	15	F1	32	CD	4	FB	Press to automatically synchronize the projector to the input source.
Input	16	F1	32	CD	18	E7	Press to select an input signal.
UP (▲)	17	F1	32	CD	0F	F0	Press to select items or make adjustments to our selection.
LEFT (◄)	18	F1	32	CD	11	EE	Press to select items or make adjustments to our selection.
Enter	19	F1	32	CD	14	EB	Press to confirm your item selection.
RIGHT (►)	20	F1	32	CD	10	EF	Press to select items or make adjustments to our selection.
DOWN (▼)	21	F1	32	CD	12	ED	Press to select items or make adjustments to our selection.
Menu	22	F1	32	CD	0E	F1	Press to display the on-screen display menus for projector.
Exit	23	F1	32	CD	2A	D5	Press to return to previous level or exit menus if at top level.
Mode	24	F1	32	CD	5	FA	Press to select the preset display mode.
Bright.	25	F1	32	CD	28	D7	Press to adjust amount of light in the image.
Contr.	26	F1	32	CD	29	D6	Press to adjust difference between dark and light.
Pattern	27	F1	32	CD	58	A7	Press to display a test pattern.
Lens Shift◄	28	F1	32	CD	41	BE	Press to adjust the position of the image horizontally.
Lens Shift ►	29	F1	32	CD	42	BD	
Focus ▲	30	F1	32	CD	86	79	Press to adjust focus to improve image clarity as desired.
Lens Shift ▲	31	F1	32	CD	34	CB	Press to adjust the position of the image vertically.
Lens Shift ▼	32	F1	32	CD	32	CD	Press to adjust the position of the image vertically.
Focus ▼	33	F1	32	CD	26	D9	Press to adjust focus to improve image clarity as desired.
Keystone	34	F1	32	CD	87	78	Press to adjust the horizontal keystone.
Keystone	35	F1	32	CD	51	AE	Press to adjust the horizontal keystone.
Zoom	36	F1	32	CD	52	AD	Press to adjust zoom to achieve a desired image size.
Keystone	37	F1	32	CD	53	AC	Press to adjust the vertical keystone.
Keystone	38	F1	32	CD	54	AB	Press to adjust the vertical keystone.
Zoom	39	F1	32	CD	55	AA	Press to adjust zoom to achieve a desired image size.
Shutter (AV Mute)	40	F1	32	CD	56	A9	Press to hide/unhide the screen picture.
User 1	41	F1	32	CD	57	A8	Press to assign user functions. Please refer to “Remote Setup” on page 23.
User 2	42	F1	32	CD	27	D8	Press to assign user functions. Please refer to “Remote Setup” on page 23.

ADDITIONAL INFORMATION

Troubleshooting

If you experience a problem with your projector, please refer to the following information. If a problem persists, please contact your local reseller or service center.

Image problems

No image appears on-screen

- Ensure all the cables and power connections are correctly and securely connected as described in the *Setup and Installation* section.
- Ensure the pins of connectors are not crooked or broken.
- Ensure that the Shutter (AV Mute) feature is not turned on.

Image is out of focus

- Press the **Focus ▲** or **Focus ▼** button on the remote control or projector keypad to adjust the focus until the image is sharp and legible.
- Make sure the projection screen is between the required distance from the projector. (Please refer to *Image size and projection distance* page *71*).

The image is stretched when displaying 16:10 DVD title

- When you play anamorphic DVD or 16:10 DVD, the projector will show the best image in 16:10 format on projector side.
- If you play 4:3 format DVD title, please change the format as 4:3 in projector OSD.
- Please setup the display format as 16:10 (wide) aspect ratio type on your DVD player.

Image is too small or too large

- Press the **Zoom** or **Zoom** button on the remote control or projector keypad to adjust the projected image size.
- Move the projector closer to or further from the screen.
- From the OSD menu, select **Display > Aspect Ratio** to change the aspect ratio.

Image has slanted sides:

- If possible, reposition the projector so that it is centered on the screen and below the bottom of the screen.
- Press the **Keystone** buttons on the remote control to adjust the screen shape.

Image is reversed

- From the OSD menu, select **Device Setup > Projection > Rear** to reverse the image so you can project from behind a translucent screen.

Other problems

The projector stops responding to all controls

- If possible, turn off the projector, then unplug the power cord and wait at least 20 seconds before reconnecting power.


Remote control problems

If the remote control does not work

- Check that the operating angle of the remote control is pointed within ±30° to the IR receivers on the projector.
- Make sure there are not any obstructions between the remote control and the projector. Move to within 20 meters (65.6 feet) of the projector.
- Make sure batteries are inserted correctly.
- Replace batteries if they are exhausted.

ADDITIONAL INFORMATION

LED Indicators and Lightning Messages

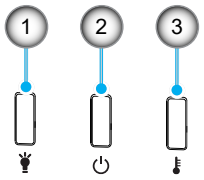

No.	Item
1.	Light LED
2.	Power LED
3.	Temp LED

Status	Light LED	Power LED		Temp LED
	Red	Red	Green	Red
Standby	N/A	Steady light	N/A	N/A
Power On	N/A	N/A	Steady light	N/A
Warning Up Start	N/A	Flashing (1 sec off / 1 sec on)	N/A	N/A
Cooling Down Start	N/A	N/A	Flashing (0.5 sec off / 0.5 sec on)	N/A
AV Mute	Flashing (1 sec off / 1 sec on)	N/A	Steady light	N/A
Error (Power Failure)	Steady light	N/A	N/A	Steady light
Error (Fan Failure)	N/A	N/A	N/A	Flashing (3 sec on / 3 sec off)
Error (Color Wheel Breakdown)	N/A	N/A	N/A	Flashing (0.5 sec off / 0.5 sec on)
Error (Over Temp)	N/A	N/A	N/A	Steady light
Error (LD Over Temp)	N/A	N/A	N/A	Steady light
Error (LD Voltage Failure)	Steady light	N/A	N/A	N/A
Error (Temp Sensor Disconnect)	Flashing (0.5 sec off / 0.5 sec on)	Flashing (0.5 sec off / 0.5 sec on)	N/A	N/A
Error (LD Failure)	Steady light	N/A	Steady light	N/A
Upgrade Process	Flashing (3 sec off / 3 sec on)	Flashing (3 sec off / 3 sec on)	Flashing (3 sec off / 3 sec on)	Flashing (3 sec off / 3 sec on)

Note: *The light off for 10min when projector into upgrade process and All LED Flashing (3 sec off/ 3 sec on)*

ADDITIONAL INFORMATION

Specifications

Optical	Description		
Lens type	1.6x	1.15x	1.26x
Throw ratio	1.25~2.0	0.65~0.75	0.75~0.95
Maximum resolution	WUXGA	WUXGA	WUXGA
Zoom & focus adjustment	Power	Power	Power
Image size (diagonal)	50”~300”	50”~1000”	50”~300”


Electrical	Description
Inputs	- HDMI 1 v2.0/4K - HDMI 2 v2.0/v1.4a - VGA-IN - 3D SYNC IN - USB Type-A x1 - AUDIO-IN 3.5mm
Outputs	- HDMI OUT - 3D SYNC OUT - AUDIO-OUT 3.5mm - 12V OUT Trigger
Control	- Wired IR - HDBaseT - RJ-45 (support web control) - RS232
Color reproduction	1073.4 Million color
Scan rate	- Horizontal scan rate: 15.38 ~ 91.15 KHz - Vertical scan rate: 24 ~ 85 Hz (120 Hz for 3D feature)
Built-in speaker	2x 10W speakers
Power requirement	AC 100 - 240V ±10%, 50/60Hz
Power Consumption	- Normal mode: 520W ± 15% @ 110Vac / 505W ± 15% @ 220Vac - ECO mode: 265W ± 15% @ 110Vac / 260W ± 15% @ 220Vac
Input current	6.5A
Installation orientation	Front, Rear, Ceiling-top, and Rear-top
Dimensions (W x D x H)	1.6x lens model: - 486 x 432.5 x 176.0 mm (w/o feet) - 486 x 432.5 x 185.5 mm (with feet) 1.15x lens model: - 486 x 427.5 x 176.0 mm (w/o feet) - 486 x 427.5 x 185.5 mm (with feet) 1.26x lens model: - 486 x 394.5 x 176.0 mm (w/o feet) - 486 x 394.5 x 185.5 mm (with feet)
Weight	14 ± 0.5 Kg
Environmental conditions	Operating in 5 ~ 40°C , 10% to 85% humidity (non-condensing)

Note: *All specifications are subject to change without notice.*

ADDITIONAL INFORMATION

Manual Warp Control Instruction

1. The Warp/Blend control option needs to be switched to the OSD option. Steps: Menu -> Display -> Geometric Correction -> Warp Control -> Advanced.
2. Changing the grid color can help to distinguish between grid color lines on each projector when completing the warping adjustment. The Warp/Blend grid color options include: Green (default), Magenta, Red, and Cyan. Steps: Menu -> Display -> Geometric Correction -> Advanced Warp -> Grid Color.

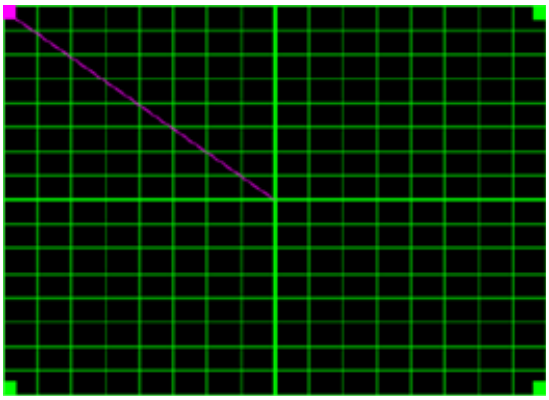


3. Set Blend overlap size. Steps: Menu -> Display -> Geometric Correction -> Advanced Warp -> Blend Setting -> Blend Width. The options and effective range of overlap size as follows:
   (a) Left: 0 (0%) / 192 (10%) ~ 960 (50%)
   (b) Right: 0 (0%) / 192 (10%) ~ 960 (50%)
   (c) Top: 0 (0%) / 120 (10%) ~ 600 (50%)
   (d) Bottom: 0 (0%) / 120 (10%) ~ 600 (50%)

3.1 Setup projectors and then set the overlap size according to the actual projection overlap.

A. Make sure the overlap size for is smaller than the overlap size of actual projection.

B. Turning on the blend width screen for all the projectors helps determine the effective overlap range.
See below for settings for a 1x2 layout as an example, and follow the steps below:

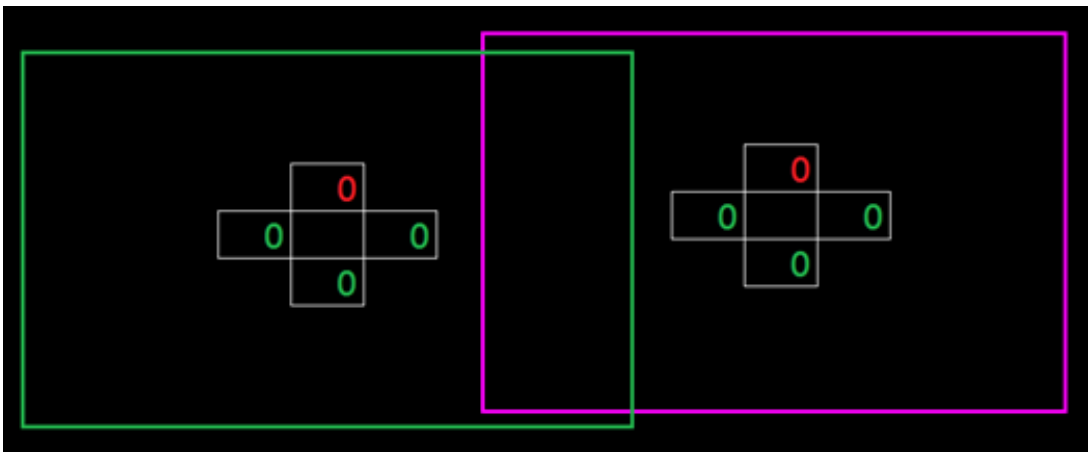


3.2 Adjust the overlap size of right boundary of left projector first.

A. The left side of the overlap area will shift along with the values of the blend setting. Overlap area is shown by a square with light color.

B. Adjust overlap size until the left side of overlap area of left projector does not exceed the left boundary of right projector.

ADDITIONAL INFORMATION

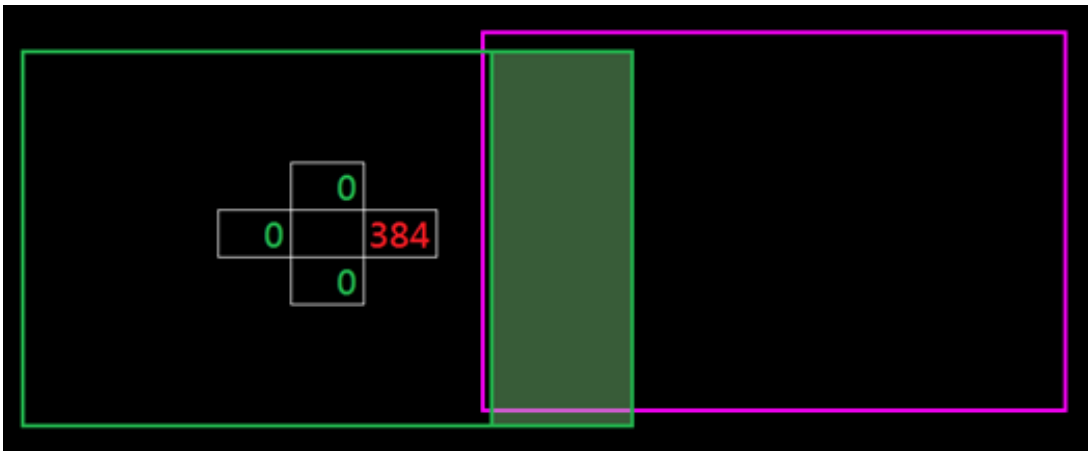

3.3 Adjust the overlap size of left boundary of right projector.


A. The right side of overlap area will shift along with the values of blend setting. Overlap area is shown by a square with light color.

B. Adjust the value of the blend setting to the same as the overlap size of the right boundary of left projector.

C. Make sure the right side of overlap area does not exceed the right boundary of left projector.

D. If not, reduce the value of blend setting until the result matches the condition of step C.

E. If the value of the blend setting of the right projector is less than left projector, adjust the value of left projector to the same as right projector.

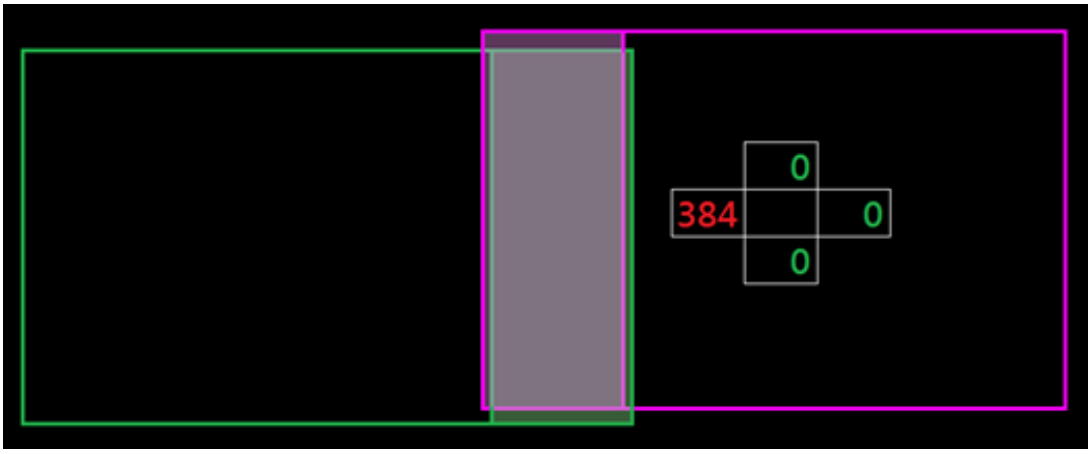

4. Use grid points and warp inner to complete the warping calibration.

A. Grid points options include: 2x2 (default), 3x3, 5x5, 9x9, and 17x17.

Note:

1. Use ⬆ , ⬇ , ⬅ or ➡ buttons to select the grid point.
2. Press Enter button to select the point.
3. Then press ⬆ , ⬇ , ⬅ or ➡ buttons to shift the selected point location.
4. Press ⮌ to return to the previous page.


B. Warp inner: Turn On/Off inner control.

Note: *Warp inner does not support 2x2 grid point.*

C. The overlap area is divided into four parts equally in warping pattern.

D. Use the warp adjustment to align the grid lines of the overlap with the two projectors to finish manual blending. Follow the steps below:

ADDITIONAL INFORMATION

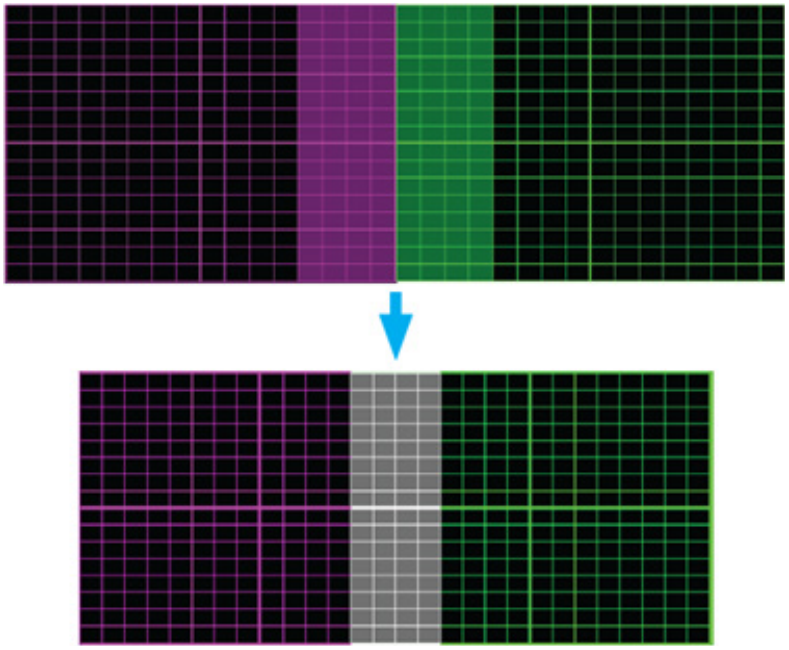

(1) Select grid point 2x2 and align boundary of projectors with the side of overlap areas.

(2) Depending on the installation situation select grid points 3x3, 5x5, 9x9, or 17x17 to adjust the grid line.

(3) Turn on warp inner to adjust the inner grid.

(4) All the grid lines are aligned. Press “**Exit**” button to exit grid pattern and then manual blending setting is finished.

5. When the grid lines are warped from straight to curve, the grid lines may become distorted or jagged. To avoid this users can adjust the warp sharpness to blur or sharpen the edge of the images.

ADDITIONAL INFORMATION

RS232 protocol function list

Baud Rate : 115200

Data Bits: 8

Parity: None

Stop Bits: 1

Flow Control : None

UART16550 FIFO: Disable

■ Write Command

~	X	X	X	X	X		n	CR
Lead Code	Projector ID		Command			space	variable	carriage return
Prefix	00~99 (Default: 00)		000~999				0~9999	suffix

Pass: **P**

Fail: **F**

■ Read Command

~	X	X	X	X	X		n	CR
Lead Code	Projector ID		Command			space	variable	carriage return
Prefix	00~99 (Default: 00)		000~999				0~9999	suffix

Response Format

Pass:	**O**	**k**	**n**
			Variable

Fail: **F**

■ System Automatically Send

I	N	F	O	n
				Variable

Note: *There is a <CR> after all ASCII commands. 0D is the HEX code for <CR> in ASCII code.*

ADDITIONAL INFORMATION

							Write Command			Read Command		
							Command			Command		
Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	CMD	Space	Set Para.	CMD	CMD Value	Pass
Image	Picture Mode	[None]								*XX123	1	OK0
		Presentation					*XX20		1	*XX123	1	OK1
		Bright					*XX20		2	*XX123	1	OK2
		Cinema					*XX20		3	*XX123	1	OK3
		HDR					*XX20		21	*XX123	1	OK21
		sRGB					*XX20		4	*XX123	1	OK4
		DICOM SIM.					*XX20		13	*XX123	1	OK10
		Blending					*XX20		19	*XX123	1	OK19
		3D					*XX20		9	*XX123	1	OK9
		2D High Speed					*XX20		18	*XX123	1	OK18
		User					*XX20		6,26,30~37	*XX123	1	OK6,26,30~37
	Dynamic Range	HDR	Off				*XX565		0			
			Auto				*XX565		1			
		HDR Picture Mode	Bright				*XX566		0			
			Standard				*XX566		1			
			Film				*XX566		2			
			Detail				*XX566		3			
	Brightness						*XX46		1			
		0 ~ 100					*XX21		0~100	*XX125	1	OK0~100
		+					*XX46		2			
	Contrast	-					*XX47		1			
		0 ~ 100					*XX22		0~100	*XX126	1	OK0~100
		+					*XX47		2			
	Sharpness	1 ~ 15					*XX23		1~15			
	Gamma	Film					*XX35		1			
		Graphics					*XX35		3			
		Standard(2.2)					*XX35		4			
		Vivid					*XX35		21			
		3D					*XX35		9			
		Blackboard					*XX35		10			
		DICOM SIM.					*XX35		11			
		1.8					*XX35		5			
		2.0					*XX35		6			
		2.4					*XX35		12			
		2.6					*XX35		8			
	Dynamic Contrast	Dynamic Black	Off				*XX191		0			
			On				*XX191		1			
		Speed	1 ~ 15				*XX253		1~15			
		Strength	0 ~ 3				*XX254		0~3			
		Level	50% ~ 100%				*XX255		50~100			
		Extreme Black	Off				*XX218		0			
			On				*XX218		1			
		AV Mute Timer	0s ~ 10s				*XX256		0~20			
		Black Signal Level	0 ~ 5				*XX257		0~5			
	Color Settings	Color	0 ~ 100				*XX45		0~100			
		Tint	0 ~ 100				*XX44		0~100			
		Color Temperature	Warm				*XX36		4	*XX128	1	OK3
			Standard				*XX36		1	*XX128	1	OK0
			Cool				*XX36		2	*XX128	1	OK1
		Color Wheel Speed	2X				*XX547		1			
			3X				*XX547		2			
		White Balance	Red Gain	0 ~ 100			*XX24		0~100			
			Green Gain	0 ~ 100			*XX25		0~100			
			Blue Gain	0 ~ 100			*XX26		0~100			
			Red Offset	0 ~ 100			*XX27		0~100			
			Green Offset	0 ~ 100			*XX28		0~100			
			Blue Offset	0 ~ 100			*XX29		0~100			
		White Enhancement	0 ~ 10				*XX34		0~10			
		Color Space	Auto				*XX37		1			
			RGB (0-255)				*XX37		2			
			RGB (16-235)				*XX37		4			
			REC709				*XX37		5			
			REC601				*XX37		6			
		Color Matching	Auto Test Pattern	Off			*XX411		0			
				On			*XX411		1			
			Red	Hue		0 ~ 254	*XX327		0~254			
				Saturation		0 ~ 254	*XX333		0~254			
				Gain		0 ~ 254	*XX339		0~254			
			Green	Hue		0 ~ 254	*XX328		0~254			
				Saturation		0 ~ 254	*XX334		0~254			
				Gain		0 ~ 254	*XX340		0~254			
			Blue	Hue		0 ~ 254	*XX329		0~254			
				Saturation		0 ~ 254	*XX335		0~254			
				Gain		0 ~ 254	*XX341		0~254			
			Cyan	Hue		0 ~ 254	*XX330		0~254			
				Saturation		0 ~ 254	*XX336		0~254			
				Gain		0 ~ 254	*XX342		0~254			
			Yellow	Hue		0 ~ 254	*XX331		0~254			
				Saturation		0 ~ 254	*XX337		0~254			
				Gain		0 ~ 254	*XX343		0~254			
				Hue		0 ~ 254	*XX332		0~254			

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command			Read Command		
							Command			Command		
							CMD	Space	Set Para.	CMD	CMD Value	Pass
			Magenta	Saturation		0 ~ 254	*XX338		0~254			
				Gain		0 ~ 254	*XX344		0~254			
			White	Red		0 ~ 254	*XX345		0~254			
				Green		0 ~ 254	*XX346		0~254			
				Blue		0 ~ 254	*XX347		0~254			
			Reset				*XX215		1			
	Wall Color	Off					*XXSO6		0			
		BlackBoard					*XXSO6		1			
		Light Yellow					*XXSO6		7			
		Light Green					*XXSO6		3			
		Light Blue					*XXSO6		4			
		Pink					*XXSO6		5			
		Gray					*XXSO6		6			
	3D Setup	3D Mode	Off				*XX230		4			
			Active 3D				*XX230		0			
		3D Format	Auto				*XX405		0			
			Frame Packing				*XX405		7			
			Side by Side				*XX405		1			
			Top and Bottom				*XX405		2			
			Frame Sequential				*XX405		3			
		3D Tech	DLP-Link				*XX230		1			
			3D Sync				*XX230		3			
		3D-2D	3D				*XX400		0			
			L				*XX400		1			
			R				*XX400		2			
		3D Sync Out	To Emitter				*XX232		0			
			To Next Projector				*XX232		1			
		3D Invert	Off				*XX231		0			
			On				*XX231		1			
		Frame Delay	1~200				*XX233		1~500			
		Reset					*XX234		1			
	Save to User											
	Apply to User	User-Presentation					*XX20		31	*XX123	1	O k 31
		User-Bright					*XX20		32	*XX123	1	O k 32
		User-Cinema					*XX20		33	*XX123	1	O k 33
		User-HDR					*XX20		26	*XX123	1	O k 26
		User-sRGB					*XX20		34	*XX123	1	O k 34
		User-DICOM SIM.					*XX20		35	*XX123	1	O k 35
		User-Blending					*XX20		36	*XX123	1	O k 36
		User-3D					*XX20		6	*XX123	1	O k 6
		User-2D High Speed					*XX20		37	*XX123	1	O k 37
	Reset											
	Aspect Ratio	Auto					*XX60		7	*XX127	1	O k 7
		4:3					*XX60		1	*XX127	1	O k 1
		16:9					*XX60		2	*XX127	1	O k 2
		16:10					*XX60		3	*XX127	1	O k 3
		LBX					*XX60		5	*XX127	1	O k 5
		Native					*XX60		6	*XX127	1	O k 6
	Digital Zoom	Proportional	Off				*XX364		0			
			On				*XX364		1			
		Horizontal	50% ~ 400%				*XX504		50~400			
		Vertical	50% ~ 400%				*XX505		50~400			
		Horizontal Shift	0 ~ 100				*XX365		0~100			
		Vertical Shift	0 ~ 100				*XX366		0~100			
		Reset					*XX364		9			
	Image Shift	H. Position	0 ~ 100				*XX63		0~100			
		V. Position	0 ~ 100				*XX64		0~100			
		Reset					*XX172		1			
		Warp Control	Basic				*XX142		1			
			Advanced				*XX142		5			
			AP				*XX142		2			
		Basic Warp	Keystone	Horizontal	0 ~ 40		*XX65		0~40	*XX543	4	O k 0~40
				Vertical	0 ~ 40		*XX66		0~40	*XX543	3	O k 0~40
			Pincushion	Horizontal	0 ~ 100		*XX300		0~100	*XX543	6	O k 0~100
				Vertical	0 ~ 100		*XX301		0~100	*XX543	5	O k 0~100
			Four Corner	Top left	right +1		*XX59		1			
					left +1		*XX59		2			
					up + 1		*XX59		3			
					down +1		*XX59		4			
				Top right	right +1		*XX59		5			
					left +1		*XX59		6			
					up + 1		*XX59		7			
					down +1		*XX59		8			
				Bottom-left	right +1		*XX59		9			
					left +1		*XX59		10			
					up + 1		*XX59		11			
					down +1		*XX59		12			
				Bottom-left	right +1		*XX59		13			
					left +1		*XX59		14			
					up + 1		*XX59		15			
					down +1		*XX59		16			

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command		Read Command							
							Command		Command							
							CMD	Space	Set Para.	CMD	CMD Value	Pass				
Display	Geometric Correction	Advanced Warp	Grid Color	Green			*XX143		1							
				Magenta			*XX143		2							
				Red			*XX143		3							
				Cyan			*XX143		4							
			Grid Background	Black			*XX145		1							
				Transparent			*XX145		2							
			Warp Setting	Grid Points	2x2		*XX144		1							
					3x3		*XX144		2							
					5x5		*XX144		3							
					9x9		*XX144		4							
					17x17		*XX144		5							
				Warp Inner	Off		*XX146		0							
					On		*XX146		1							
				Warp Sharpness	0 ~ 9		*XX148		0~9							
			Blend Setting	Blend Width												
				Overlap Grid Number	4		*XX169		1							
					6		*XX169		2							
					8		*XX169		3							
					10		*XX169		4							
					12		*XX169		5							
				Gamma	1.8		*XX170		1							
					1.9		*XX170		2							
					2.0		*XX170		3							
					2.1		*XX170		4							
					2.2		*XX170		5							
					2.3		*XX170		6							
					2.4		*XX170		7							
			Black Level	Area	Bottom											
					Top											
				Enable	Off		*XX166		4/6							
					On		*XX166		3/5							
				Edit Area												
				Add Point												
				Remove Point												
				Brightness	Brightness		*XX263		1/2/3/4							
					Red	0 ~ 255	*XX281~XX285		nnn	*XX272~XX273	1		O	k	nnn	
					Green	0 ~ 255	*XX282~XX286		nnn	*XX272~XX273	2		O	k	nnn	
					Blue	0 ~ 255	*XX283~XX287		nnn	*XX272~XX273	3		O	k	nnn	
					Exit											
				Red	0 ~ 255											
				Green	0 ~ 255											
				Blue	0 ~ 255											
				Reset	Bottom		*XX167		3							
					Top		*XX167		5							
					All		*XX167		1							
		Memory	Save Memory	Memory 1 ~ Memory 5			*XX141		1~5							
			Apply Memory	Memory 1 ~ Memory 5			*XX147		1~5	*XX137	1		O	k	1~5	
			Clear Memory				*XX174		1							
		Reset					*XXS61		1							
	Edge Mask	0 ~ 10					*XX61		0~10							
	Freeze Screen	Unfreeze					*XX04		0							
		Freeze					*XX04		1							
	Test Pattern	Off					*XX195		0							
		Green Grid					*XX195		3							
		Magenta Grid					*XX195		4							
		White Grid					*XX195		1							
		White					*XX195		2							
		Black					*XX195		11							
		Red					*XX195		5							
		Green					*XX195		6							
		Blue					*XX195		7							
		Yellow					*XX195		8							
		Magenta					*XX195		9							
		Cyan					*XX195		10							
		ANSI Contrast 4x4					*XX195		14							
		Color bar					*XX195		13							
		Full screen					*XX195		15							
	PIP - PBP	Screen	Off				*XX302		0							
			PIP				*XX302		1							
			PBP				*XX302		2							
		Main Source	[no Signal]							*XX121	1		O	k	0	
			VGA				*XX12		5	*XX121	1		O	k	2	
			HDMI1				*XX12		1	*XX121	1		O	k	7	
			HDMI2				*XX12		15	*XX121	1		O	k	8	
			HDBaseT				*XX12		21	*XX121	1		O	k	16	
		Sub Source	[no Signal]							*XX131	1		O	k	0	
			VGA				*XX305		2	*XX131	1		O	k	2	
			HDMI1				*XX305		1	*XX131	1		O	k	7	
			HDMI2				*XX305		4	*XX131	1		O	k	8	
			HDBaseT				*XX305		10	*XX131	1		O	k	16	
		Swap					*XX306		1							

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command			Read Command						
							Command			Command						
							CMD	Space	Set Para.	CMD	CMD Value	Pass				
		Size	Small				~XX304		3							
			Medium				~XX304		2							
			Large				~XX304		1							
		Location	PBP, Main Left				~XX303		5							
			PBP, Main Top				~XX303		6							
			PBP, Main Right				~XX303		7							
			PBP, Main Bottom				~XX303		8							
			PIP, Bottom Right				~XX303		4							
			PIP, Bottom Left				~XX303		3							
			PIP, Top Left				~XX303		1							
			PIP, Top Right				~XX303		2							
	Reset						~XX173		1							
Input Setup	Auto Source	Off					~XX563		0							
		On					~XX563		1							
	Quick Resync	Off					~XX101		2							
		On					~XX101		3							
	Active Inputs	VGA					~XX408		5							
		HDMI1					~XX408		1							
		HDMI2					~XX408		15							
		HDBaseT					~XX408		21							
	Latency Adjustment	Normal					~XX220		0	~XX133	1		O	k	0	
		2D Ultra					~XX220		1	~XX133	1		O	k	1	
	VGA	Phase	0 ~ 100				~XX74		0~100							
		Resolution	(read only)													
	HDMI	Output	HDMI 1				~XX309		5							
			HDMI 2				~XX309		6							
		HDMI 1 EDID	1.4				~XX236		1							
			2				~XX236		2							
		HDMI 2 EDID	1.4				~XX237		1							
			2				~XX237		2							
	Reset						~XX178		1							
	Language	English					~XX70		1							
		Deutsch					~XX70		2							
		Français					~XX70		3							
		Italiano					~XX70		4							
		Español					~XX70		5							
		Português					~XX70		6							
		Polski					~XX70		7							
		Nederlands					~XX70		8							
		Norsk					~XX70		10							
		繁體中文					~XX70		13							
		簡体中文					~XX70		14							
		日本語					~XX70		15							
		한국어					~XX70		16							
		Русский					~XX70		17							
		Magyar					~XX70		18							
		ไทย					~XX70		21							
	Projection	Ceiling	Auto				~XX523		3							
			On				~XX523		2							
			Off				~XX523		1							
		Rear	Off				~XX524		0							
			On				~XX524		1							
	Lens Settings	Focus	+				~XX308		1							
			-				~XX308		2							
		Zoom	+				~XX307		1							
			-				~XX307		2							
		Lens Shift	Up				~XX84		3							
			Down				~XX84		4							
			Left				~XX84		5							
			Right				~XX84		6							
		Lens Shift Memory	Save Memory	Memory 1 ~ Memory 5			~XX360		1~5							
			Apply Memory	Memory 1 ~ Memory 5			~XX359		1~5							
			Clear Memory				~XX361		1							
		Lens Calibration					~XX525		1							
		Lens Lock	Lock				~XX349		1	~XX545	4		O	k	0	
			Unlock				~XX349		2	~XX545	4		O	k	1	
		Reset					~XX175		1							
		Date and Time	(Depend on System Time)													
		Schedule Mode	Off				~XX284		0	~XX244	1		O	k	0	
			On				~XX284		1	~XX244	1		O	k	1	
		View Today	Monday Tuesday Wednesday Thursday Friday Saturday Sunday (Depend on System Time)							~XX243	2		O	k	1=Monday 2=Tuesday 3=Wednesday 4=Thursday 5=Friday 6=Saturday 7=Sunday	
			Schedule Enable	Off			~XX284		0~n							
				On			~XX284		1~n							
				Time	00:00 ~ 23:59	- -:- - (If event is off)	~XX471		dhhmmnnaabb							
					Off		~XX471		dhhmmnnaabb							

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command		Read Command		
							Command		Command		
							CMD	Set Para.	CMD	CMD Value	Pass
Device Setup	Schedule	Monday Tuesday Wednesday Thursday Friday Saturday Sunday	Event 01-08 Event 09-16	Function	Power Settings		*XX471	dhhmmnnaabb			
					Input Source		*XX471	dhhmmnnaabb			
					Light Source Mode		*XX471	dhhmmnnaabb			
					Shutter		*XX471	dhhmmnnaabb			
				Event	Off		*XX471	dhhmmnnaabb			
				(Function = Power Settings)	Power On		*XX471	dhhmmnnaabb			
					Eco		*XX471	dhhmmnnaabb			
					Active		*XX471	dhhmmnnaabb			
					Communication		*XX471	dhhmmnnaabb			
				(Function = Input Source)	VGA		*XX471	dhhmmnnaabb			
					HDMI1		*XX471	dhhmmnnaabb			
					HDMI2		*XX471	dhhmmnnaabb			
					HDBaseT		*XX471	dhhmmnnaabb			
				(Function = Light Source Mode)	Normal Mode		*XX471	dhhmmnnaabb			
					Eco Mode		*XX471	dhhmmnnaabb			
					Custom Brightness		*XX471	dhhmmnnaabb			
				(Function = Shutter)	Shutter On		*XX471	dhhmmnnaabb			
					Shutter Off		*XX471	dhhmmnnaabb			
				Reset			*XX472	n^nn			
			Copy Events To	Monday			*XX473	1^n			
				Tuesday			*XX473	2^n			
				Wednesday			*XX473	3^n			
				Thursday			*XX473	4^n			
				Friday			*XX473	5^n			
				Saturday			*XX473	6^n			
				Sunday			*XX473	7^n			
			Reset the Day				*XX471	9^n			
		Reset Schedule					*XX284	9			
	Date and Time	Clock Mode	Use NTP Server				*XX474	1			
			Manual				*XX474	3			
		Date	2000 ~ 2037 (Year)				*XX475	nnnn			
			01 ~ 12 (Month)				*XX476	nn			
			01 ~ 31 (Day)				*XX477	nn			
		Time	00 ~ 23 (Hour)				*XX478	nn			
			00 ~ 59 (Minute)				*XX479	nn			
		Daylight Saving Time	Off				*XX480	0			
			On				*XX480	1			
		NTP Server	time.google.com				*XX481	1			
			asia.pool.ntp.org				*XX481	2			
			europe.pool.ntp.org				*XX481	3			
			north-america.pool.ntp.org				*XX481	4			
		Time Zone	UTC+14:00				*XX482	1			
			UTC+13:00				*XX482	2			
			UTC+12:45				*XX482	3			
			UTC+12:00				*XX482	4			
			UTC+11:00				*XX482	5			
			UTC+10:30				*XX482	6			
			UTC+10:00				*XX482	7			
			UTC+09:30				*XX482	8			
			UTC+09:00				*XX482	9			
			UTC+08:45				*XX482	10			
			UTC+08:00				*XX482	11			
			UTC+07:00				*XX482	12			
			UTC+06:30				*XX482	13			
			UTC+06:00				*XX482	14			
			UTC+05:45				*XX482	15			
			UTC+05:30				*XX482	16			
			UTC+05:00				*XX482	17			
			UTC+04:30				*XX482	18			
			UTC+04:00				*XX482	19			
			UTC+03:30				*XX482	20			
			UTC+03:00				*XX482	21			
			UTC+02:00				*XX482	22			
			UTC+01:00				*XX482	23			
			UTC+00:00				*XX482	24			
			UTC-01:00				*XX482	25			
			UTC-02:00				*XX482	26			
			UTC-03:00				*XX482	27			
			UTC-03:30				*XX482	28			
			UTC-04:00				*XX482	29			
			UTC-05:00				*XX482	30			
			UTC-06:00				*XX482	31			
			UTC-07:00				*XX482	32			
			UTC-08:00				*XX482	33			
			UTC-09:00				*XX482	34			
			UTC-09:30				*XX482	35			
			UTC-10:00				*XX482	36			
			UTC-11:00				*XX482	37			
			UTC-12:00				*XX482	38			

Note: *Some commands are not supported, it depends on models.*

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command			Read Command		
							Command			Command		
							CMD	Space	Set Para.	CMD	CMD Value	Pass
		Update Interval	Hourly				*XX483		1			
			Daily				*XX483		3			
		Apply										
	Power Settings	Power Mode(Standby)	Eco				*XX114		0	*XX150	16	O k 0
			Active				*XX114		1	*XX150	16	O k 1
			Communication				*XX114		3	*XX150	16	O k 3
		Signal Power On	Off				*XX113		0			
			On				*XX113		1			
		Auto Power Off	0 ~ 180 m				*XX106		0~180			
		Sleep Timer	0 ~ 16 h				*XX107		0~960			
		12V Trigger	Off				*XX192		0			
			On				*XX192		1			
		Reset					*XX177		1			
	Light Source Settings	Light Source Mode	Normal				*XX110		1			
			Eco Mode				*XX110		2			
			Custom Power				*XX110		9			
		Custom Brightness	Brightness Level	30% ~ 100%			*XX326		30~100			
			Constant Brightness	Off			*XX522		0	*XX242	1	O k 0
				On			*XX522		1	*XX242	1	O k 1
	Shutter	Fade-In	0.5 ~ 5s				*XX267		1~10			
		Fade-Out	0.5 ~ 5s				*XX268		1~10			
		Startup	Shutter Off				*XX269		0			
			Shutter On				*XX269		1			
	Audio	Mute	Off				*XX80		0	*XX356	1	O k 0
			On				*XX80		1	*XX356	1	O k 1
		Volume	0 ~ 10				*XX81		0~10			
	Security	Security	Off				*XX78		0~nnnn			
			On				*XX78		1~nnnn			
		Security Timer	Month	0 ~ 35			*XX537		00~35	*XX544	1	O k 00~35
			Day	0 ~ 29			*XX538		00~29	*XX544	2	O k 00~29
			Hour	0 ~ 23			*XX539		00~23	*XX544	3	O k 00~23
		Change Password					*XX77		~MMDDHH			
							*XX406		nnnn~nnnn			
	On Screen Display	Menu Location	Top Left				*XX72		1			
			Top Right				*XX72		2			
			Center				*XX72		3			
			Bottom Left				*XX72		4			
			Bottom Right				*XX72		5			
		Menu Transparency	0 ~ 9				*XX526		0~9			
		Menu Timer	Off				*XX515		0			
			5s				*XX515		1			
			10s				*XX515		3			
			15s				*XX515		4			
			30s				*XX515		5			
			60s				*XX515		6			
		Information Hide	Off				*XX102		0			
			On				*XX102		1			
		Background	Blue				*XX104		1			
			Black				*XX104		0			
			White				*XX104		5			
			Logo				*XX104		7			
	Logo Setup	Change Logo	Default Logo				*XX82		1			
			Neutral				*XX82		3			
			User Logo				*XX82		4			
			Captured Logo				*XX82		2			
		Logo Capture					*XX83		1			
		Delete Logo	Captured Logo				*XX407		1			
			User Logo				*XX407		2			
	High Altitude	Off					*XX101		0	*XX150	22	O k 0
		On					*XX101		1	*XX150	22	O k 1
	User Data	Save all settings	Memory 1 ~ Memory 5				*XX258		1~5			
		Load all settings	Memory 1 ~ Memory 5				*XX259		1~5			
	System Update	Auto	Off				*XX168		0			
			On				*XX168		1			
		Auto Download	On				*XX168		3			
			Off				*XX168		4			
		Update					*XX168		9			
	Reset	Reset OSD					*XX546		1			
		Reset to default					*XX112		1			
		Reset Selective	Image				*XX509		1			
			Display				*XX173		1			
			Input				*XX178		1			
			Communication				*XX176		1			
			Setup				*XX179		1			
	Projector ID	0 ~ 99					*XX79		00~99	*XX558	1	O k 00~99
		Remote Code	0 ~ 99				*XX350		00~99	*XX138	1	O k 00~99
		Quick Switch Code	Off				*XX314		0	*XX138	3	O k 0
			1 ~ 9				*XX314		0~9	*XX138	3	O k 0~9
		IR Function	Front	Off			*XX11		4	*XX542	1	O k 0
				On			*XX11		5	*XX542	1	O k 1
			Top	Off			*XX11		6	*XX542	2	O k 0
				On			*XX11		7	*XX542	2	O k 1

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command			Read Command		
							Command			Command		
							CMD	Space	Set Para.	CMD	CMD Value	Pass
		IR Function	HDBaseT	Off			*XX11		10	*XX542	3	O k 0
				On			*XX11		9	*XX542	3	O k 1
	Remote Setup	User 1	Freeze Screen				*XX117		1			
			Blank Screen				*XX117		2			
			PIP/PBP				*XX117		3			
			Aspect Ratio				*XX117		4			
			Information Hide				*XX117		5			
			Network setup				*XX117		6			
			Projector ID				*XX117		7			
			Color Matching				*XX117		8			
			Reset Selective				*XX117		9			
			Quick Switch Code				*XX117		10			
			Audio Mute				*XX117		11			
			Audio Volume				*XX117		12			
		User 2	Freeze Screen				*XX118		1			
			Blank Screen				*XX118		2			
			PIP/PBP				*XX118		3			
			Aspect Ratio				*XX118		4			
			Information Hide				*XX118		5			
			Network setup				*XX118		6			
			Projector ID				*XX118		7			
			Color Matching				*XX118		8			
			Reset Selective				*XX118		9			
			Quick Switch Code				*XX118		10			
			Audio Mute				*XX118		11			
			Audio Volume				*XX118		12			
		LAN Interface	RJ-45				*XX460		1			
			HDBaseT				*XX460		2			
		MAC Address	(read only)							*XX555	1	O k nn:nn:nn:nn:nn:nn
		Network Status	(read only) Connected							*XX87	1	O k 1
			(read only) Disconnected							*XX87	1	O k 0
	Network Setup	DHCP	Off				*XX461		0	*XX150	17	O k 0
			On				*XX461		1	*XX150	17	O k 1
		IP Address								*XX87	3	O k nn.nn.nn.nn
		Subnet Mask										
		Gateway										
Communication		DNS										
		Apply										
		Network Reset					*XX462		1			
	Email Notification	Email										
		Email 1	(read only)							*XX443	1	O k n@nnnn.nnnn.nnnn
		Email 2	(read only)							*XX443	2	O k n@nnnn.nnnn.nnnn
		Event										
		Fan Error					*XX463		2/1			
		Power On/Off					*XX463		4/3			
		Video Loss					*XX463		6/5			
		Laser					*XX463		8/7			
		Reset					*XX464		1			
	Control	Crestron	Off				*XX454		0			
			On				*XX454		1			
		IP Address					*XX465		1~nnn.nnn.nnn.nnn			
		IPID					*XX466		1~nnn			
		Port					*XX467		1~nnnnn			
		Crestron Setup Apply										
		PJ Link	Off				*XX456		0			
			On				*XX456		1			
		Authentication	Off				*XX468		0			
			On				*XX468		1			
		Password	(read only)				*XX470		nn...n (20 charactors)	*XX440	1	O k nnnnnnnnnnnnnnnnnnnn

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command: Command: CMD	Write Command: Command: Space	Write Command: Command: Set Para.	Read Command: Command: CMD	Read Command: Command: CMD Value	Read Command: Pass
		Service					*XX469		1~nnn.nnn.nnn.nnn			
		PJ Link Setup Apply										
		Extron	Off				*XX455		0			
			On				*XX455		1			
		AMX	Off				*XX457		0			
			On				*XX457		1			
		Telnet	Off				*XX458		0			
			On				*XX458		1			
		HTTP	Off				*XX459		0			
			On				*XX459		1			
		Reset					*XX181		1			
	Baud Rate	Serial Port In	1200							*XX153	1	O k 1200
			2400							*XX153	1	O k 2400
			4800							*XX153	1	O k 4800
			9600							*XX153	1	O k 9600
			19200							*XX153	1	O k 19200
			38400							*XX153	1	O k 38400
			57600							*XX153	1	O k 57600
			115200							*XX153	1	O k 115200
	Reset						*XX176		1			
Information	Device	Regulatory								*XX151	3	O k nnnnnnnn
		Serial Number								*XX353	1	O k nnnnnnnnnnnnnnnn
		Projection Hours								*XX150	21	O k nnnnn (nnnnn= hour digits)
	System Status	Standby Mode										
		Light Source Mode										
		Light Source Hours								*XX108	1	O k nnnnn (nnnnn= hour digits)
		Total Hours								*XX108	1	O k nnnnn (nnnnn= hour digits)
		Normal								*XX108	3	O k nnnnn (nnnnn= hour digits)
		Eco Mode								*XX108	4	O k nnnnn (nnnnn= hour digits)
		Custom Power								*XX108	7	O k nnnnn (nnnnn= hour digits)
		Ambient Temp										
		Temperature								*XX150	18	O k nnn_nn (e.g. 0k48)
	Communication	Projector ID					*XX79		00~99	*XX558	1	O k 00~99
		Remote Code					*XX350		00~99	*XX138	1	O k 00~99
		Network										
		LAN Interface										
		MAC Address										
		Network Status										
		DHCP										
		IP Address										
		Subnet Mask										
		Gateway										
		DNS										
		Control										
		Crestron										
		Extron										
		PJ Link										
		AMX										
		Telnet										
		HTTP										
	Signal	Input Signal										
		Resolution										
		Signal Format										
		Pixel Clock										
		Horz Refresh										
		Vert Refresh										
		Color Space										
		Picture Mode										
		Second Signal										
		Resolution										
		Signal Format										
		Pixel Clock										
		Horz Refresh										
		Vert Refresh										
		Color Space										
		Main Version								*XX122	1	O k nnnnnnn (FW)+
		I-SCALER Version										
		F-MCU Version										
	Firmware Version	M-MCU Version										
		A-MCU Version										
		LAN Version										
		Formatter Version										
		HDBaseT Version										
		Camera Version										

Other Items

Power Off							*XX00		0	*XX124	1	O k 0
Power On							*XX00		1	*XX124	1	O k 1
Power On with password							*XX00		1 ~nnnn			
Restart							*XX00		3			
Re-Sync							*XX01		1			
AV Mute	Off						*XX02		0	*XX355	1	O k 0
	On						*XX02		1	*XX355	1	O k 1
Freeze	Unfreeze						*XX04		0			
	Freeze						*XX04		1			
3D Sync Out	To Emitter						*XX232		0			
	To Next Projector						*XX232		1			
3D Frame Delay	1~200						*XX233		1~200			
Output 3D state	2D									*XX130	1	O k 0
	3D									*XX130	1	O k 1
System Auto Send	Standby Mode											I N F O 0
	Warming up											I N F O 1
	Cooling Down											I N F O 2
	Out of Range											I N F O 3
	lightsource Fail (LED Fail)											I N F O 4
	Thermal Switch Error											I N F O 5
	Fan Lock											I N F O 6
	Over Temperature											I N F O 7
	LightSource Hours Running Out											I N F O 8
	Cover Open											I N F O 9
	lightsource Ignite Fail											I N F O 10
	Format Board Power On Fail											I N F O 11
	Color Wheel Unexpected Stop											I N F O 12
	Over Temperature											I N F O 13
	FAN 1 Lock											I N F O 14
	FAN 2 Lock											I N F O 15
	FAN 3 Lock											I N F O 16
	FAN 4 Lock											I N F O 17
	FAN 5 Lock											I N F O 18
	LAN fail then restart											I N F O 19
	LD lower than 60%											I N F O 20
	LD NTC (1) Over Temperature											I N F O 21
	LD NTC (2) Over Temperature											I N F O 22
	High Ambient Temperature											I N F O 23
	System Ready											I N F O 24
												I N F O 25
	FAN 6 Lock											I N F O 26
	FAN 7 Lock											I N F O 27
	FAN 8 Lock											I N F O 28
	FAN 9 Lock											I N F O 29
	FAN 10 Lock											I N F O 30
	FAN 11 Lock											I N F O 31
	FAN 12 Lock											I N F O 32
	FAN 13 Lock											I N F O 33
	FAN 14 Lock											I N F O 34
System Temperature	Green/Normal									*XX155	1	O k 1
	Orange/Notice									*XX155	1	O k 2
	Red/Warning. About to trigger shutdown									*XX155	1	O k 3
Fan Status Level	Green/Normal									*XX159	1	O k 1
	Orange/Notice									*XX159	1	O k 2
	Red/Warning. About to trigger shutdown									*XX159	1	O k 3
Device Type	Projector									*XX149	1	O k 1
Model Name	Optoma WUXGA									*XX151	1	O k 5
OSD Lock	On						*XX239		1 ~nnnnnnnn	*XX229	1	O k 1
	Off						*XX239		2 ~nnnnnnnn	*XX229	1	O k 0

Note: *Some commands are not supported, it depends on models.*

ADDITIONAL INFORMATION

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command: CMD	Write Command: Space	Write Command: Set Para.	Read Command: CMD	Read Command: CMD Value	Read Command: Pass
Regulatory Model										~XX151	4	O k DAZUKNZT DAZUKNZTST DAZUBNZT DAZUBNZTST
Software Version										~XX122	1	O k nnnnnnn (Software Version)
Fan Speed	Fan 1 Speed	0000~9999								~XX351	1	O k 0000~9999
	Fan 2 Speed	0000~9999								~XX351	2	O k 0000~9999
	Fan 3 Speed	0000~9999								~XX351	3	O k 0000~9999
	Fan 4 Speed	0000~9999								~XX351	4	O k 0000~9999
	Fan 5 Speed	0000~9999								~XX351	5	O k 0000~9999
	Fan 6 Speed	0000~9999								~XX351	6	O k 0000~9999
	Fan 7 Speed	0000~9999								~XX351	7	O k 0000~9999
	Fan 8 Speed	0000~9999								~XX351	8	O k 0000~9999
	Fan 9 Speed	0000~9999								~XX351	9	O k 0000~9999
	Fan 10 Speed	0000~9999								~XX351	10	O k 0000~9999
	Fan 11 Speed	0000~9999								~XX351	11	O k 0000~9999
	Fan 12 Speed	0000~9999								~XX351	12	O k 0000~9999
	Fan 13 Speed	0000~9999								~XX351	13	O k 0000~9999
	Fan 14 Speed	0000~9999								~XX351	10	O k 0000~9999
System Temperature										~XX352	1	O k 0000~9999
Information	Info String									~XX150	1	O k abbbbbccddddee
	Native Resolution									~XX150	2	O k nnn..nn (e.g. Ok1920x1080)
	Main Source									~XX150	3	O k nnn..nn (e.g. OkHDMI)
	- Resolution									~XX150	4	O k nnn..nn (e.g.Ok1920x1080)
	- Signal Format									~XX150	5	O k nnn..nn
	- Pixel Clock									~XX150	6	O k nnn..nn
	- Horz Refresh									~XX150	7	O k nnn..nn
	- Vert Refresh									~XX150	8	O k nnn..nn
	Sub Source									~XX150	9	O k nnn..nn
	- Resolution									~XX150	10	O k nnn..nn (e.g. Ok1920x1080)
	- Signal Format									~XX150	11	O k nnn..nn (e.g. OkHDMI)
	- Pixel Clock									~XX150	12	O k nnn..nn
	- Horz Refresh									~XX150	13	O k nnn..nn
	- Vert Refresh									~XX150	14	O k nnn..nn
	Light Source Mode									~XX150	15	O k nnn..nn
	Standby Power Mode	Active								~XX150	16	O k 1
		Eco.								~XX150	16	O k 0
		Communication								~XX150	16	O k 3
	DHCP	Off								~XX150	17	O k 0
		On								~XX150	17	O k 1
	System Temperature									~XX150	18	O k nnn..nn (e.g. Ok48)
	Refresh rate									~XX150	19	O k nnn..nn (e.g. Ok60Hz)
Source Lock	On						~XX100		0			
	Off						~XX100		1			
Display message on the OSD							~XX210		nn...n (50 charactors)			
Filter Wheel Index							~XX528		0000~9999	~XX530	1	O k 0000~9999
Phosphor Wheel Index							~XX529		0000~9999	~XX531	1	O k 0000~9999
Light Sensor Calibration							~XX552		1			

Remote Control Simulation

							Write Command: CMD	Write Command: Space	Write Command: Set Para.	Read Command: CMD	Read Command: CMD Value	Read Command: Pass
Power							~XX140		1			
Power Off							~XX140		2			
Up							~XX140		10			
Left							~XX140		11			
Enter (for projection MENU)							~XX140		12			
Right							~XX140		13			
Down							~XX140		14			
V Keystone +							~XX140		15			
V Keystone -							~XX140		16			
Brightness							~XX140		19			
Menu							~XX140		20			
VGA-1							~XX140		23			
AV Mute							~XX140		24			
Contrast -							~XX140		28			
Zoom +							~XX140		32			
Zoom -							~XX140		33			
Focus +							~XX140		34			
Focus -							~XX140		35			
Mode							~XX140		36			
Info							~XX140		40			
Re-sync							~XX140		41			
HDMI 1							~XX140		42			
HDMI 2							~XX140		43			
Source							~XX140		47			
1							~XX140		51			
2							~XX140		52			
3							~XX140		53			
4							~XX140		54			
5							~XX140		55			
6							~XX140		56			
7							~XX140		57			
8							~XX140		58			
9							~XX140		59			
0							~XX140		60			

Level 1	Level 2	Level 3	Level 4	Level 5	Level 6	n value	Write Command: CMD	Write Command: Space	Write Command: Set Para.	Read Command: CMD	Read Command: CMD Value	Read Command: Pass
Gamma							~XX140		61			
PIP							~XX140		63			
Lens H(left)							~XX140		64			
Lens H(Right)							~XX140		65			
Lens V(left)							~XX140		66			
Lens V(Right)							~XX140		67			
H Keystone +							~XX140		68			
H Keystone -							~XX140		69			
Hot Key (user1)(F1)							~XX140		70			
Hot Key (user2)(F2)							~XX140		71			
Pattern							~XX140		73			
Exit							~XX140		74			
Mute							~XX140		77			
Return							~XX140		82			

Note: *Some commands are not supported, it depends on models.*

Note *1
~xx150

Power	Light Source Life	Input Source	Firmware Version	Display Mode
a	b b b b b	c c	d d d d	e e
a=0 Power Off	Light Source Life = nnnn	cc=00 None	# # # #	ee=00 None
a=1 Power On	Caluculte by each mode formula	cc=01 DVI		ee=01 Presentation (Old: Cinema)
		cc=02 VGA1		ee=02 Bright
		cc=03 VGA2		ee=03 Cinema (Old: Movie/Photo)
		cc=04 S-Video		ee=04 sRGB\Reference\Standard
		cc=05 Video		ee=05 User(1)
		cc=06 BNC		ee=06 User2
		cc=07 HDMI1		ee=07 Blackboard
		cc=08 HDMI2		ee=08 Classroom
		cc=09 Wireless		ee=09 3D
		cc=10 Compnent		ee=10 DICOM SIM.
		cc=11 Flash drive		ee=11 Film
		cc=12 Network Display(Presenter)		ee=12 Game
		cc=13 USB Display		ee=13 Cinema
		cc=14 HDMI3		ee=14 Vivid
		cc=15 DisplayPort		ee=15 ISF Day
		cc=16 HDBaseT		ee=16 ISF Night
		cc=17 Multimedia		ee=17 ISF 3D
				ee=18 2D high speed
				ee=19 Blending Mode
				ee=20 Sport
				ee=21 HDR
				ee=22 HDR SIM.
				ee=23 Super Bright
				ee=24 (Alexa auto check 2D/3D User)

ADDITIONAL INFORMATION

Optoma global offices

For service or support, please contact your local office.

USA
47697 Westinghouse Drive,
Fremont, CA 94539, USA
www.optomausa.com

888-289-6786
510-897-8601
services@optoma.com

Canada
47697 Westinghouse Drive,
Fremont, CA 94539, USA
www.optomausa.com

888-289-6786
510-897-8601
services@optoma.com

Latin America
47697 Westinghouse Drive,
Fremont, CA 94539, USA
www.optomausa.com

888-289-6786
510-897-8601
services@optoma.com

Europe
The Maylands Building,
Maylands Avenue, Hemel
Hempstead, Hertfordshire, HP2
7TG, UK
www.optoma.eu
Service Tel : +44 (0)1923 691865

+44 (0) 1923 691 800
+44 (0) 1923 691 888

Benelux BV
Randstad 22-123
1316 BW Almere
The Netherlands
www.optoma.nl

+31 (0) 36 820 0252
+31 (0) 36 548 9052

France
Bâtiment E
81-83 avenue Edouard Vaillant
92100 Boulogne Billancourt, France

+33 1 41 46 12 20
+33 1 41 46 94 35
savoptoma@optoma.fr

Spain
C/ José Hierro,36 Of. 1C
28522 Rivas VaciaMadrid,
Spain

+34 91 499 06 06
+34 91 670 08 32

Deutschland
Am Nordpark 3
41069 Mönchengladbach
Germany

+49 (0) 2161 68643 0
+49 (0) 2161 68643 99
info@optoma.de

Scandinavia
Lerpeveien 25
3040 Drammen
Norway

PO.BOX 9515
3038 Drammen
Norway

+47 32 98 89 90
+47 32 98 89 99
info@optoma.no

Korea
https://www.optoma.com/kr/

Japan
https://www.optoma.com/jp/

Taiwan
https://www.optoma.com/tw/

China
Room 701, 7F, Building 1,
No. 1388 Kaixuan Road,
Changning District,
Shanghai, 200052, China
www.optoma.com.cn

+86-21-62947376
+86-21-62947375
servicecn@optoma.com.cn

Australia
https://www.optoma.com/au/